





















	A	WW040x118-TPP-000-0-	3580	2
	B	WW040x118-1IF-000-0-	610	38
	B1	WW040x118-1IF-000-0-	1270	17
	B2	WW040x118-1IF-000-0-	1148	4
	C	WW040x118-1IF-000-0-	3300	13
	D	WW040x118-PRF-000-0-	1148	4
	E	WW040x118-2IF-000-0-	5380	22
	F	WW040x118-AV2-IF2-0-	5680	2
	G	WW040x118-2IF-000-0-	3580	21
	H	WW040x118-B1D-000-0-	5380	1
	I	WW040x073-DEM-000-0-	5380	2
	J	WW016x095-PLA-000-0-	2840	90
	K	WW040x120-PT0-MD3-0-	3987	5
	K1	WW040x120-4FA-000-0-	236	14
	L	WW012x040-4FA-000-0-	1920	10
	M	WW016x149-PLA-000-0-	3912	6
	M1	WW016x149-PLA-000-0-	5680	6
	M2	WW016x072-2R8-000-0-	433	4
	M3	WW016x072-2R8-000-0-	433	4
 S580 	O	Roofing 5.9 m		5
	P	S8022-M S8020		1 1
	Q	S8045 S533 (PLEXI 1.2 x 540 x 496) S539 (PLEXI 1.2 x 540 x 456) S597 (PLEXI mat 2.0 x 346 x 943)		1 2 1 1



Y S563

1



3 x 15 700

2.8 x 50 400



4 x 45 76

5 x 70 28



S520


4 x WW020x040-4FA-000-0 1950

4 x M8 x 70

4 x M8

4 x M8

1


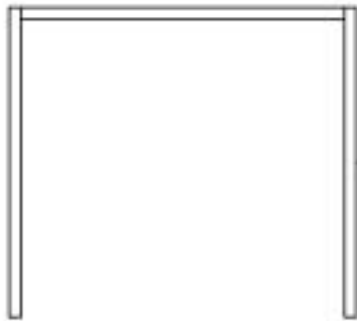


P S8026

1


G = 1
I = 2
Y = 1

1

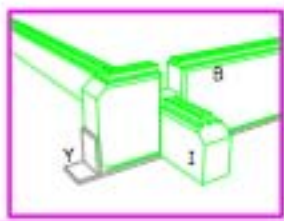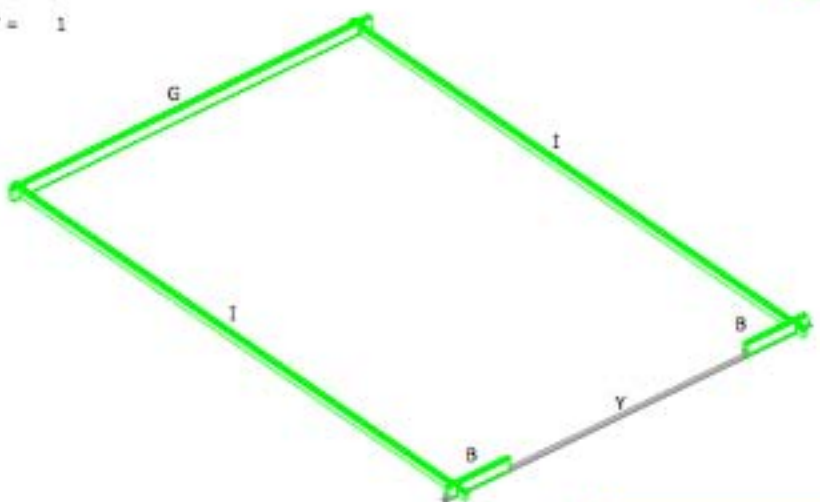


B1 = 9
C = 9
E = 10
G = 10
H = 1

2

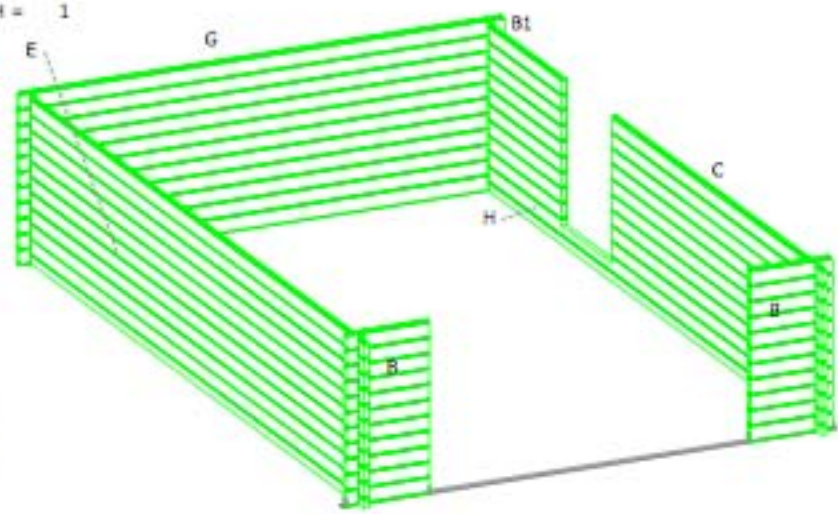


B = 16
B1 = 8
B2 = 4
C = 4
D = 4
G = 8
P = 1
Q = 1
E = 8

3

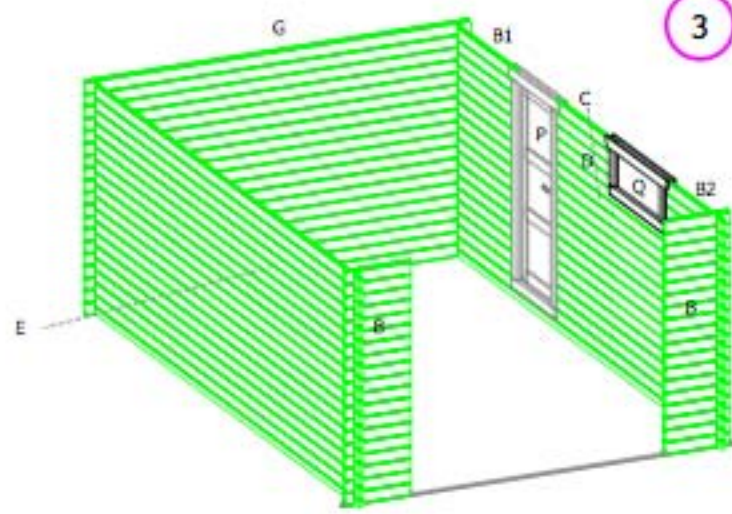


E = 2
G = 2

4

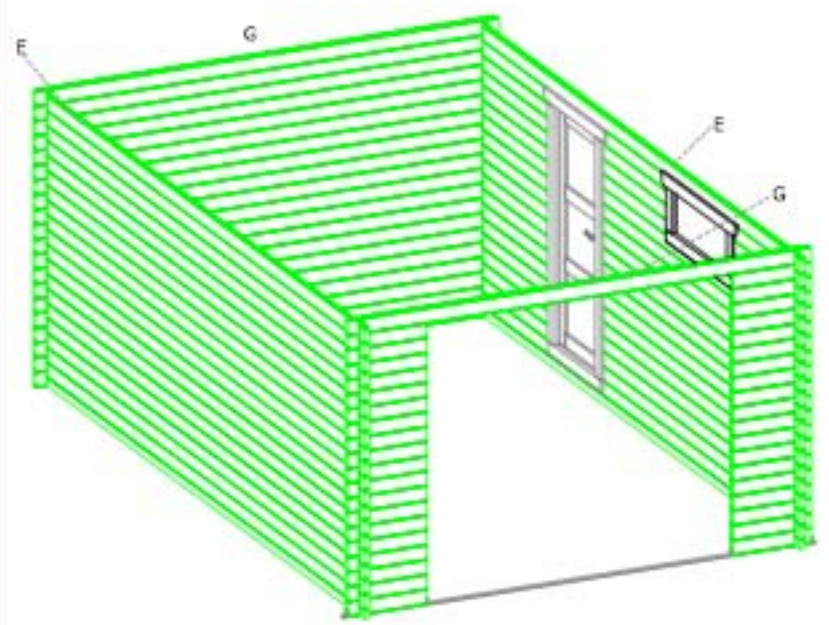


A = 2
E = 2
F = 2
SS20 = 1

5

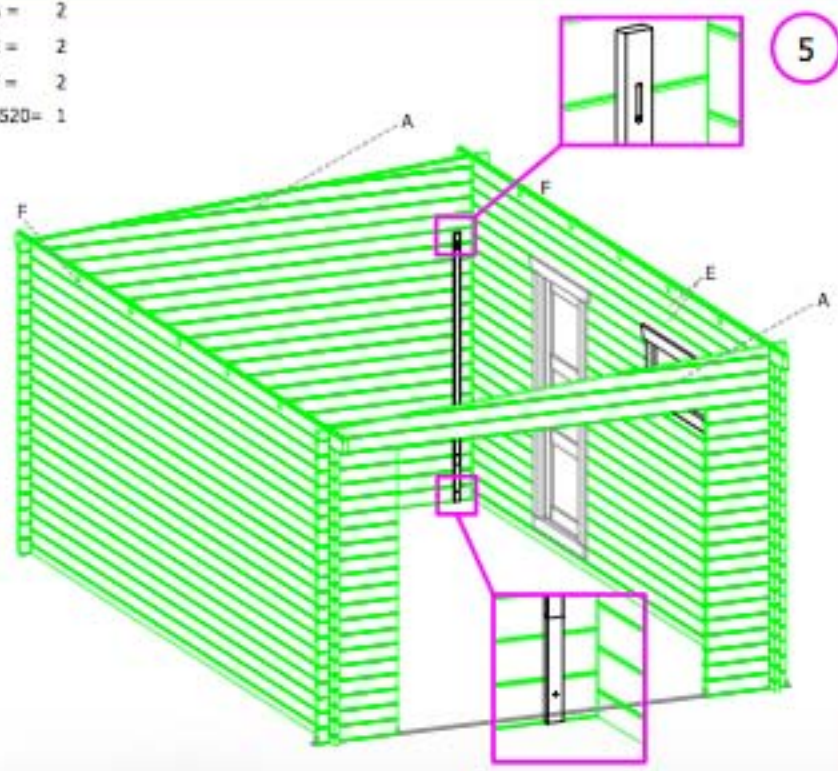

K = 5
K1 = 13

6

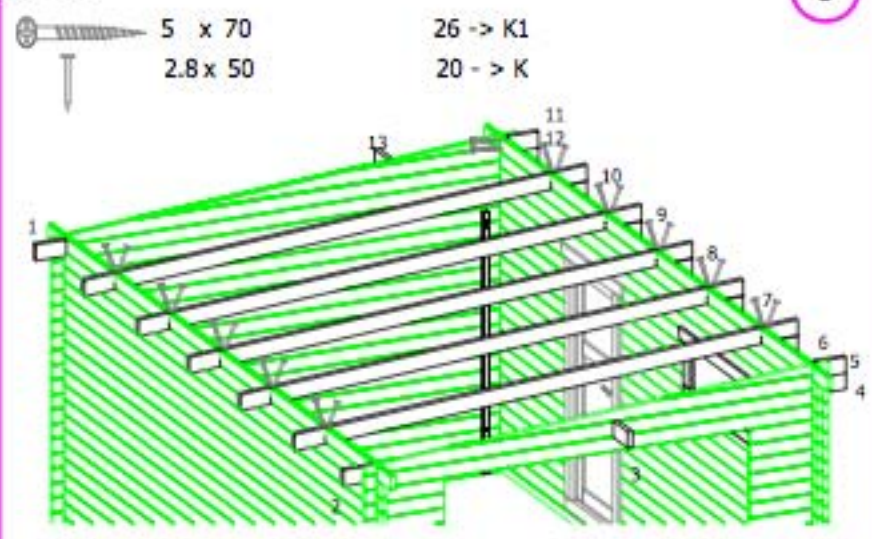

5 x 70
2.8 x 50

26 -> K1
20 -> K



90
M = 3
M1 = 3






7

O = 5
L = 5
T 3 x 15 700

8

2.8 x 50
360 -> J

30 -> M + M1

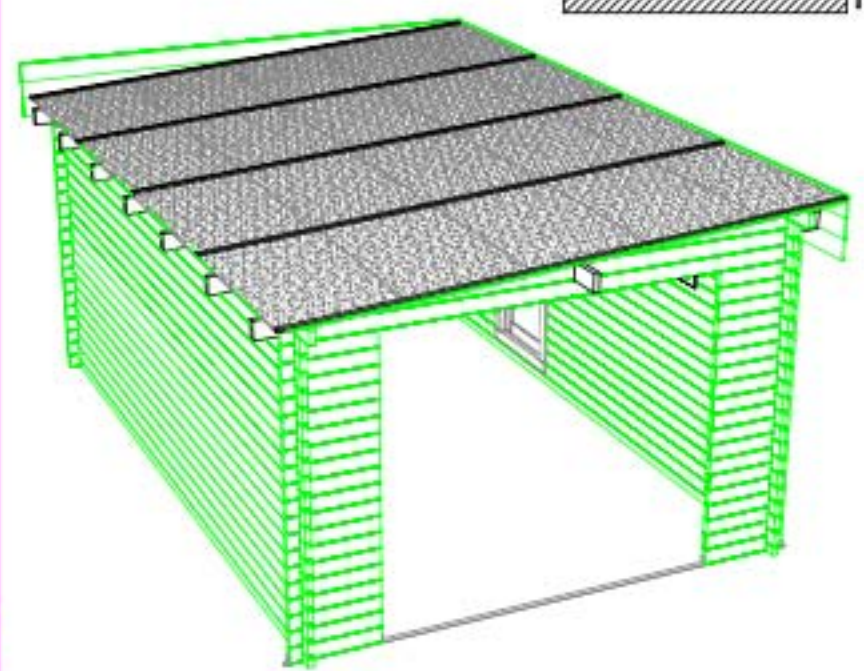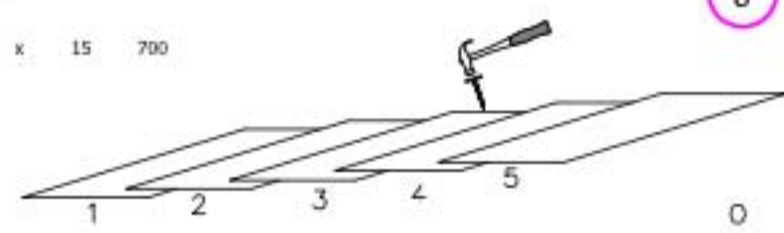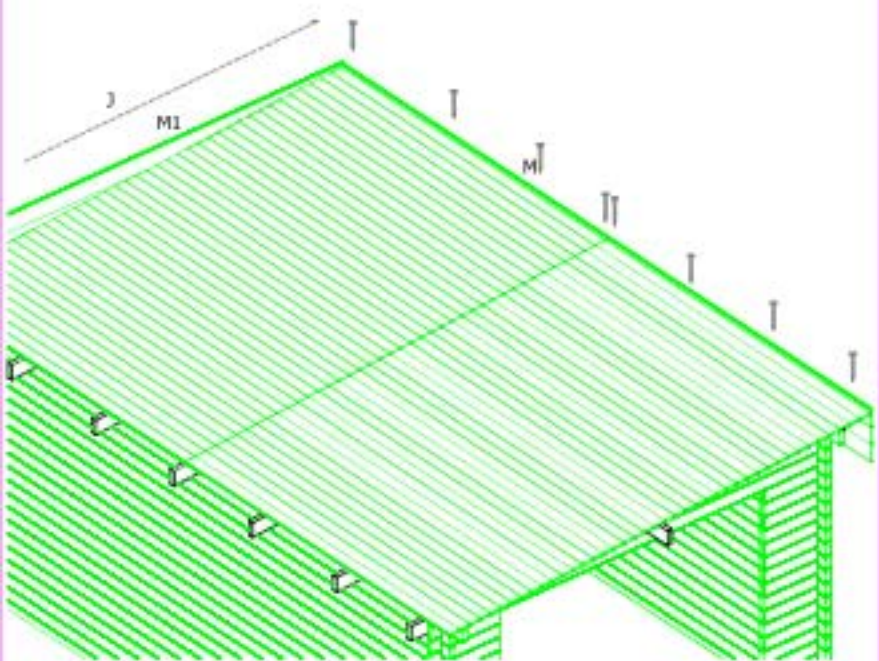
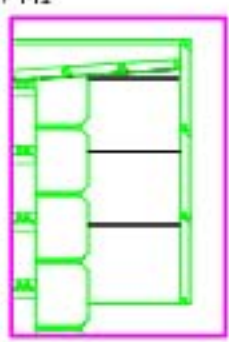
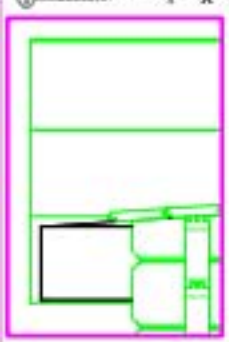


M = 3
M1 = 3
M2 = 4
M3 = 4
4 x 45
4 x 45

16 -> M2 + M3
30 -> M + M1

9

P = 1

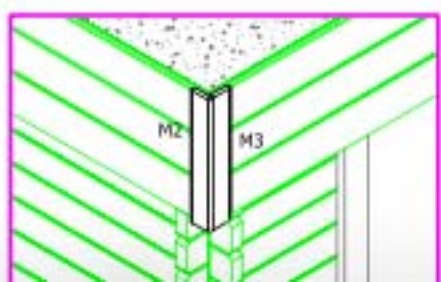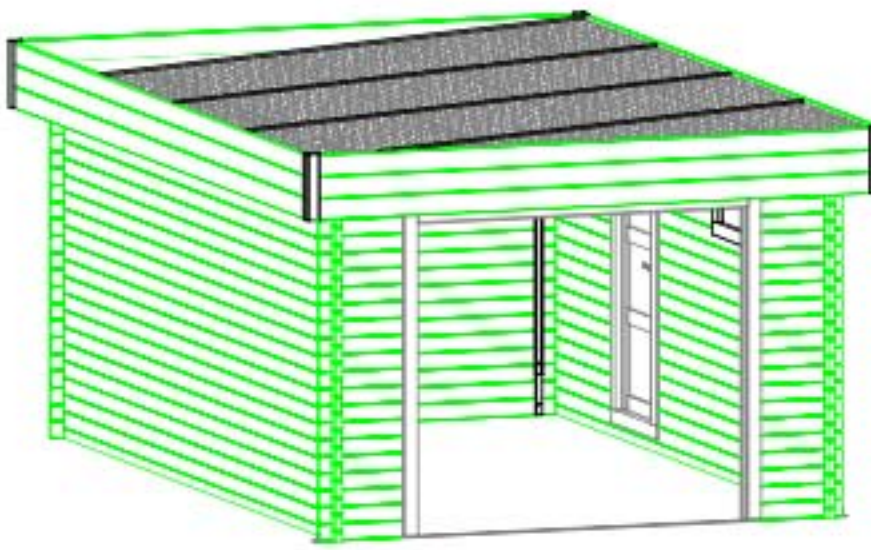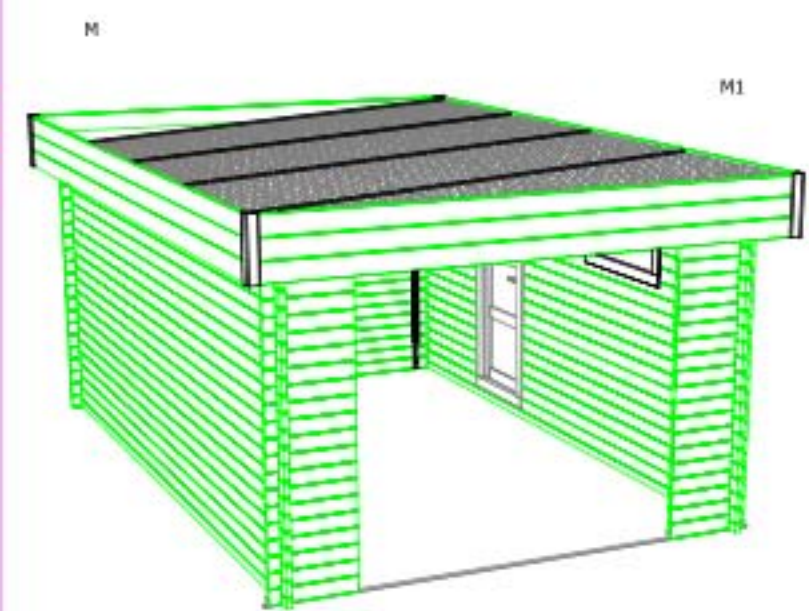

NL:

- Om te chalet te openen / sluiten dient u de sleutel te gebruiken.

F:

- Pour ouvrir / fermer la porte, utilisez la clé.

GB:

- Use the key to unlock / lock the door.

SP:


- Para abrir la cabaña, debe utilizar / empujar la llave por la parte.


PT:

- Para abrir / fechar o pavilhão utilize a chave.



NB:

- Per aprire / chiudere la casetta utilizzare la chiave.

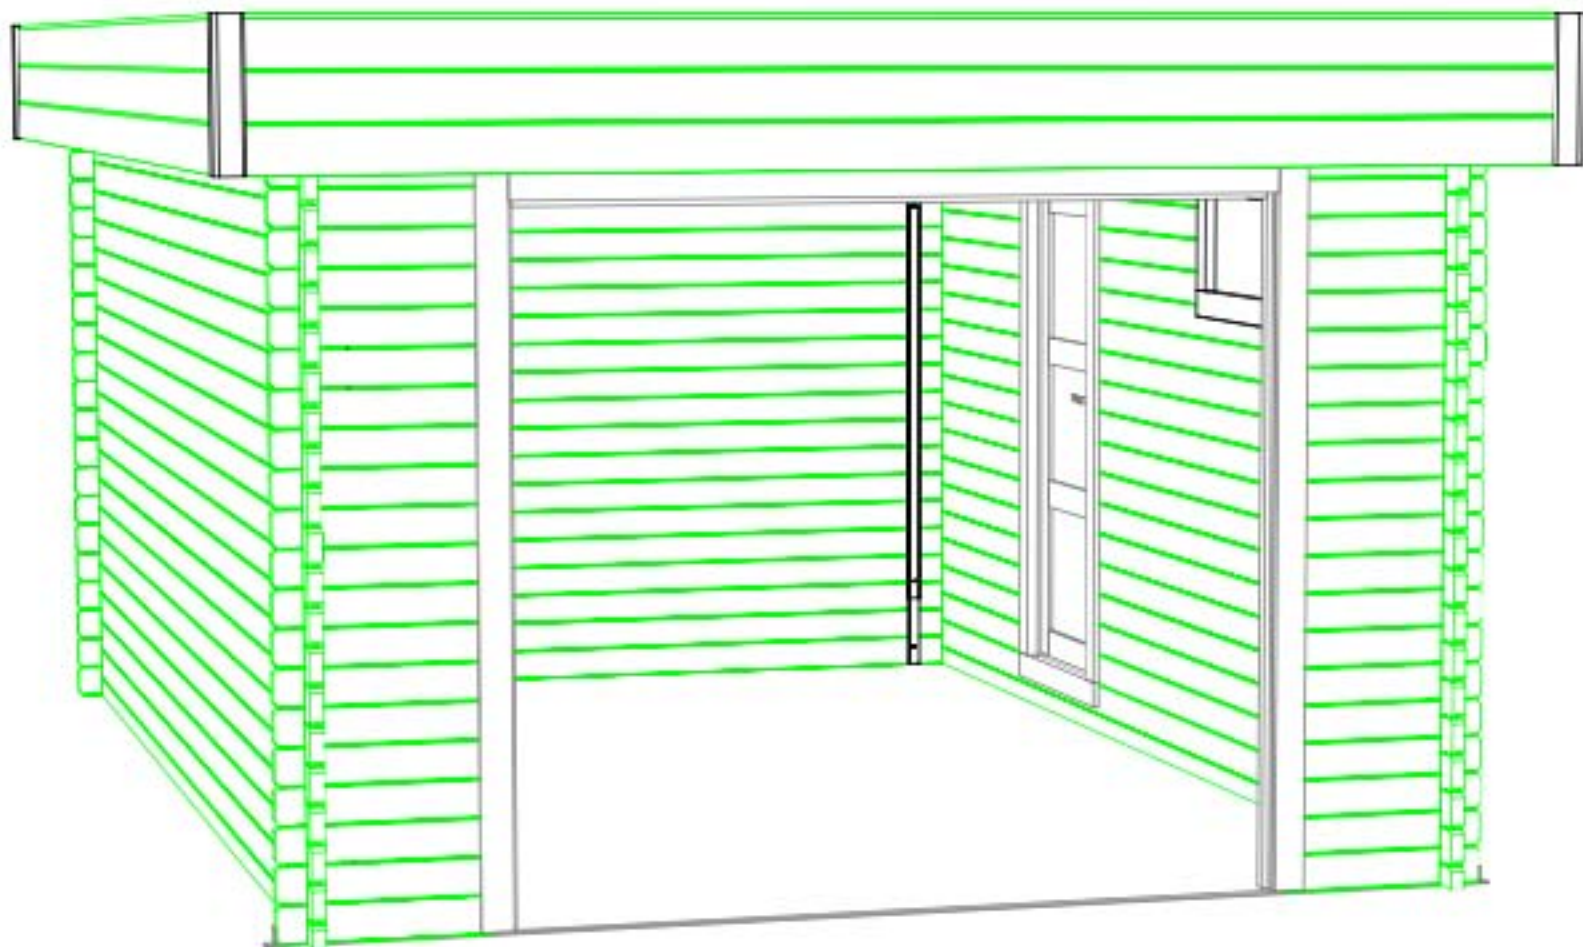


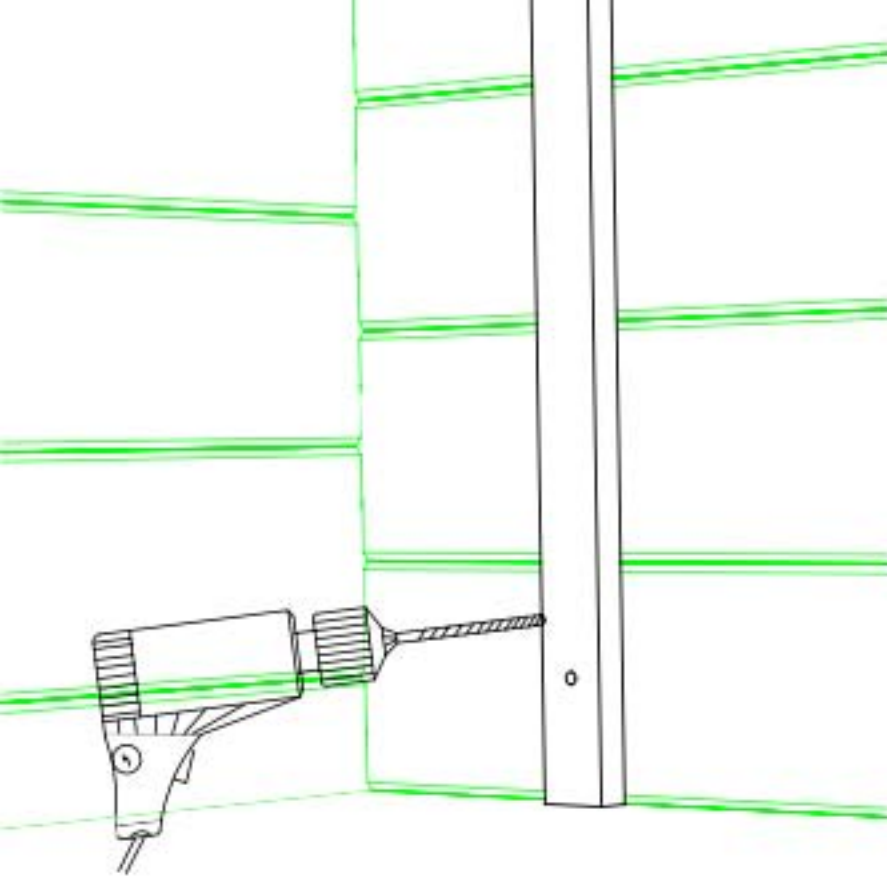



Binnen / Interieur / Inside

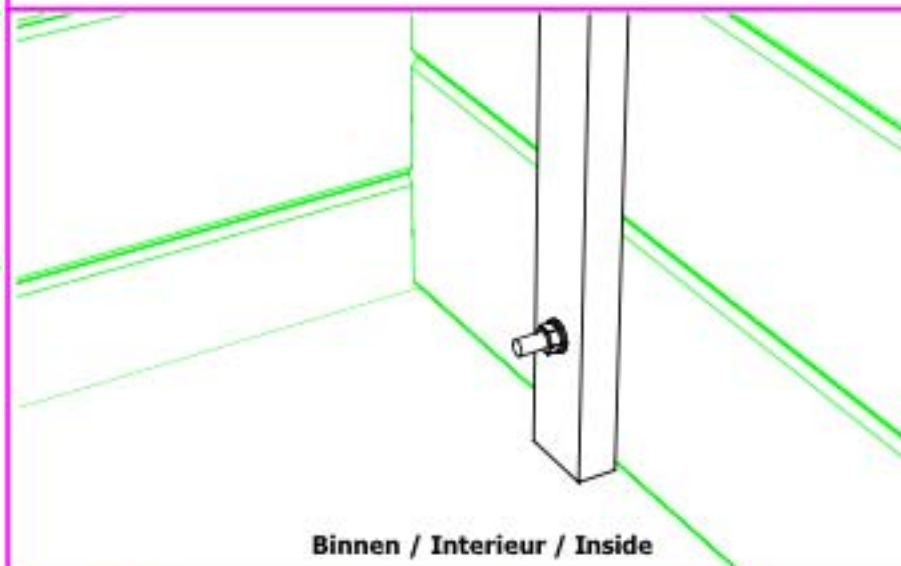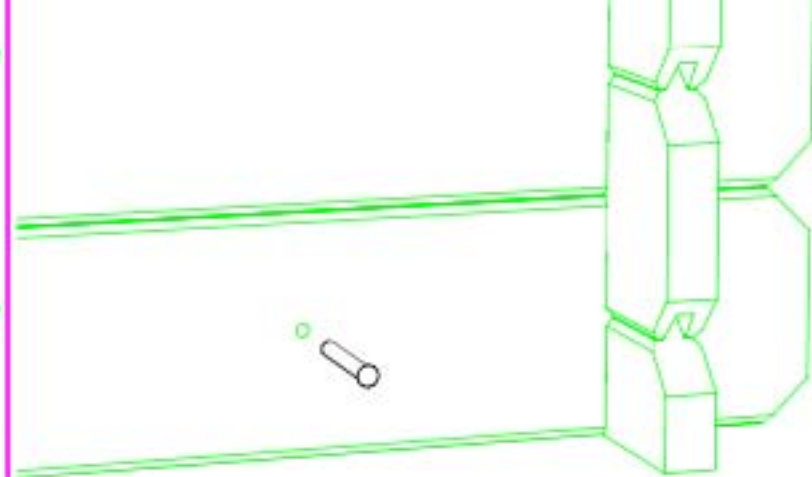

Binnen / Interieur / Inside

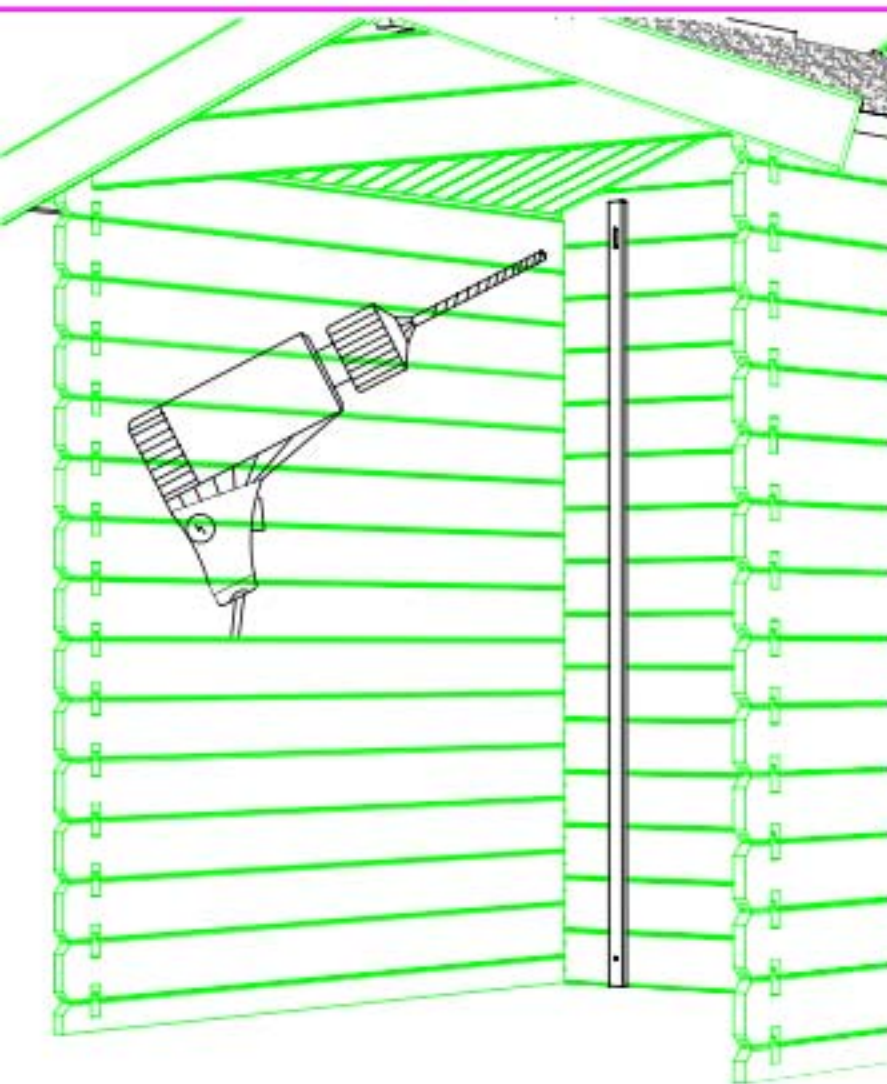


Binnen / Interieur / Inside

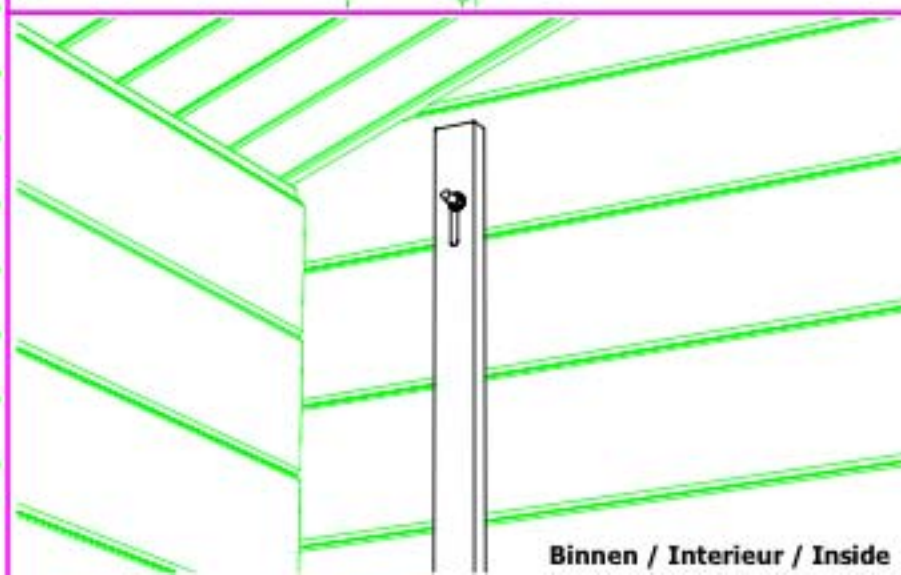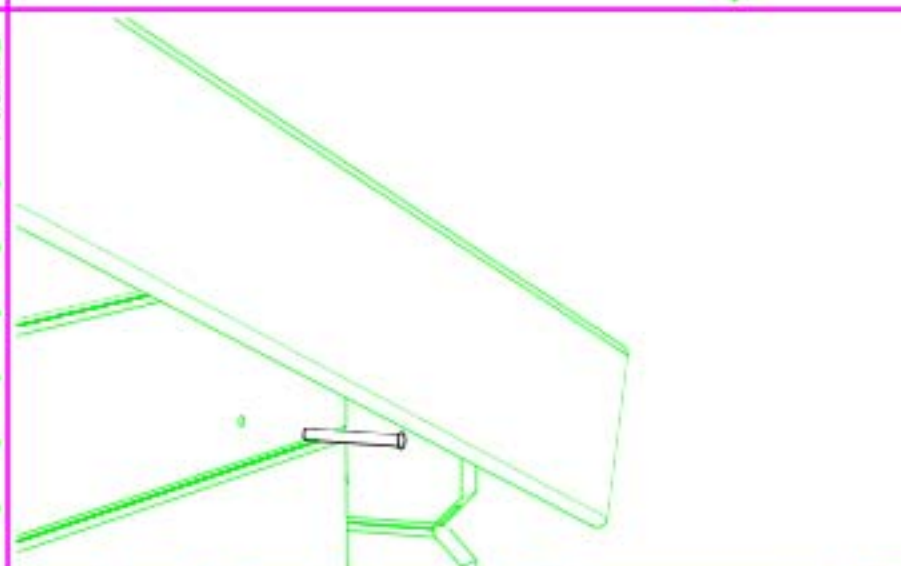


Binnen / Interieur / Inside


1

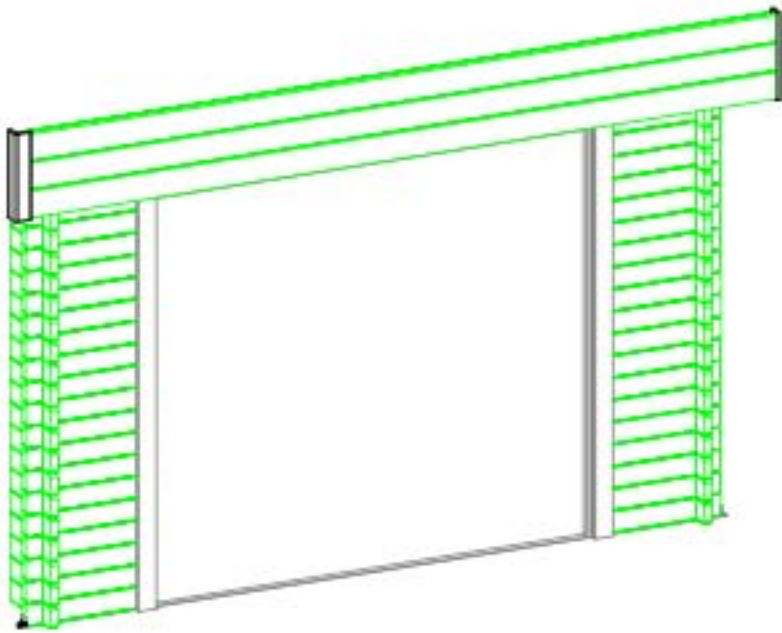


2

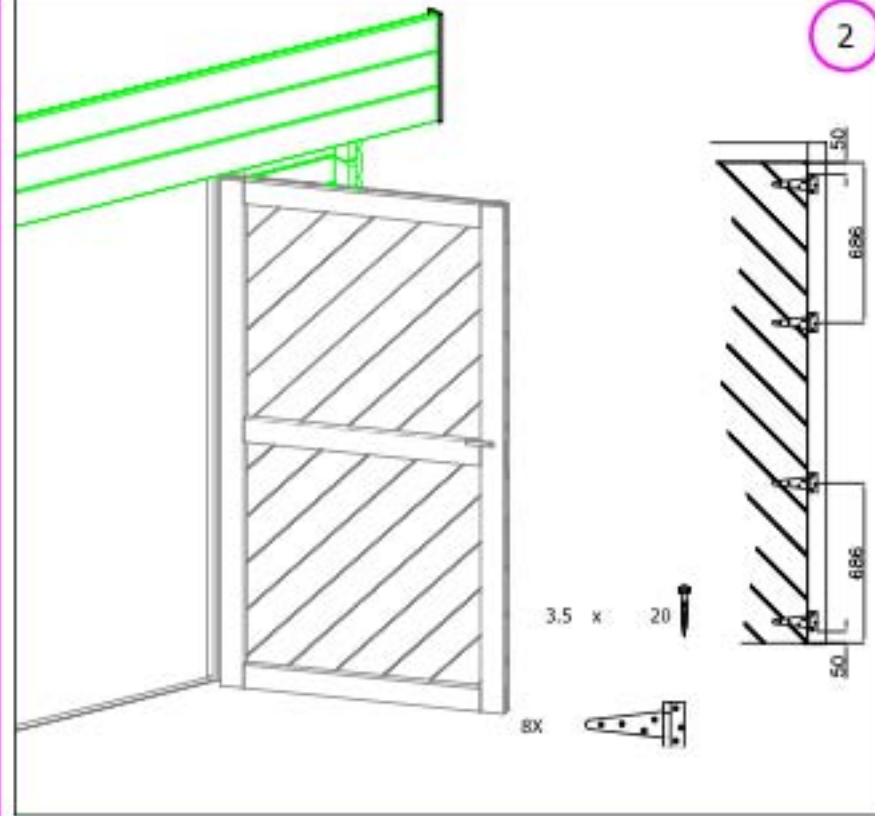

3

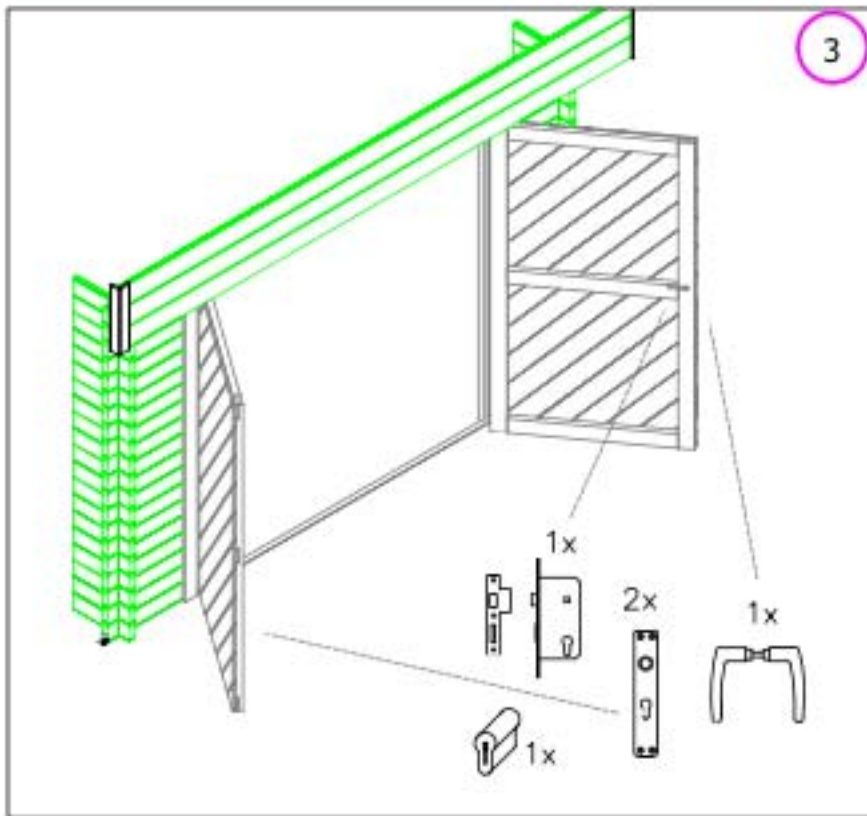

4

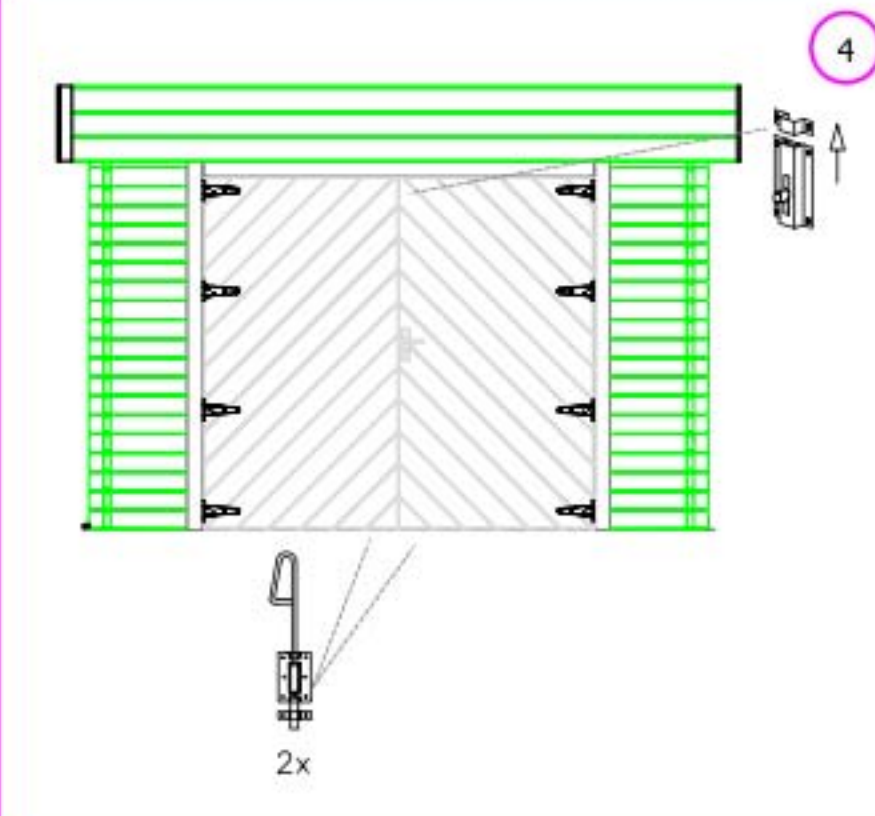

L = 1
2 = 4

