






TUSCANY EVO BOX 100

KIT VITERIA S01.50.174

 W - x34 5 x 30	 B - x32 M4 x 30
 F - x6 M4 x 35	 Y - x2 M5 x 12
 L - x6 M6 x 20	

 RG 2 x	 R4x16 38 x	 TPd 32 x
 M5f 2 x	 M4 38 x	 TP 14x
 M6 x 6	 R6x18 x 6	


attrezzi da usare
tools to use
outils à utiliser
Zu verwendendes Werkzeug
Herramientas necesarias
ferramentas a utilizar

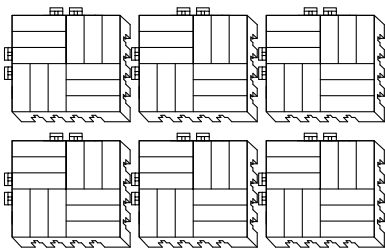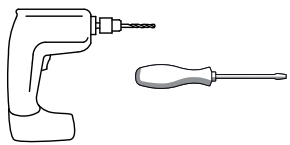

PAV 6x
M02.10.014




3x **C**
M02.09.032




K
M02.09.025



4x **Q**
M02.08.013




4x **S**
M02.09.001




4x **R**
M02.05.007




2x **Gar**
M02.09.055

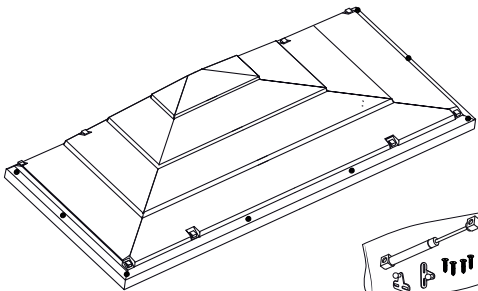


T
M06.06.043




2x **BB**
M02.09.026

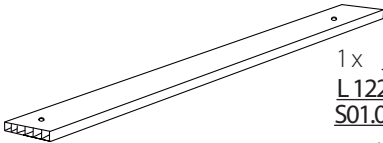


1x **N**
L 1220mm
S01.09.016

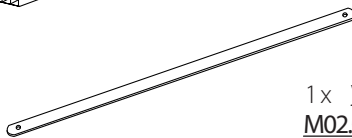


1x **V**
M02.09.027




1x **M**
L 1142 mm
S01.09.132

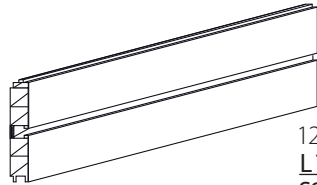


12x **I**
L 742 mm
S01.09.041

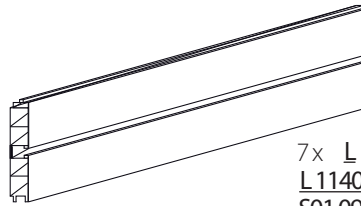


7x **L**
L 1140 mm
S01.09.040

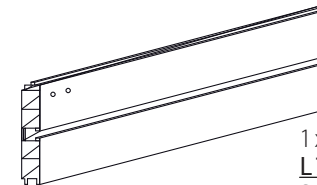

1x **G DX**
L 742 mm
S02.02.027

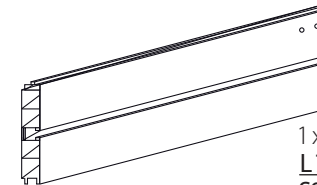

1x **H SX**
L 742 mm
S02.02.028

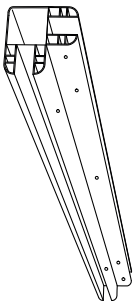


4x **A**

L 1135mm
S02.03.097




2x **E**

L 1100mm
S02.03.063

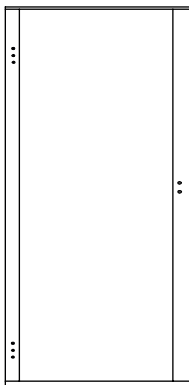


P-sx
S02.02.020





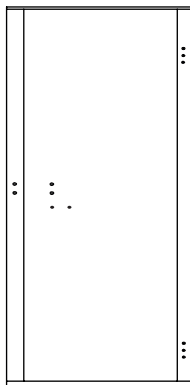


P-dx
S02.02.017





1. ASSEMBLAGGIO PAVIMENTO | FLOOR ASSEMBLY | MONTAGE DU SOL | ARMADO DEL PISO | MONTAGE DER BODENPLATTE

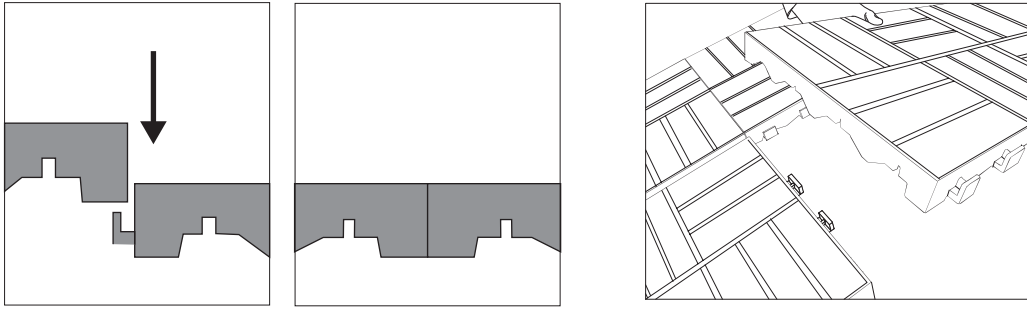





2.

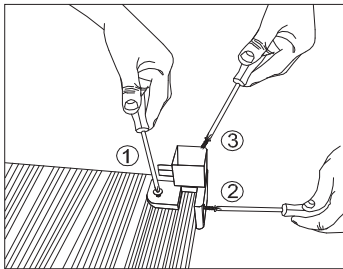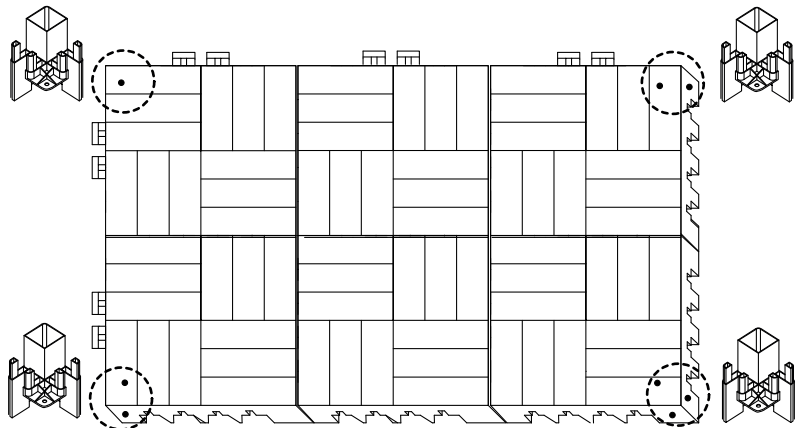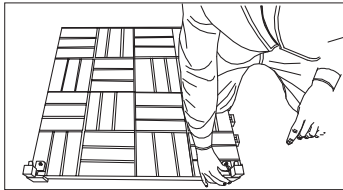



3. ASSEMBLAGGIO MURO | WALL ASSEMBLY | MONTAGE DU MUR | ARMADO DE PAREDES | MONTAGE DER WÄNDE

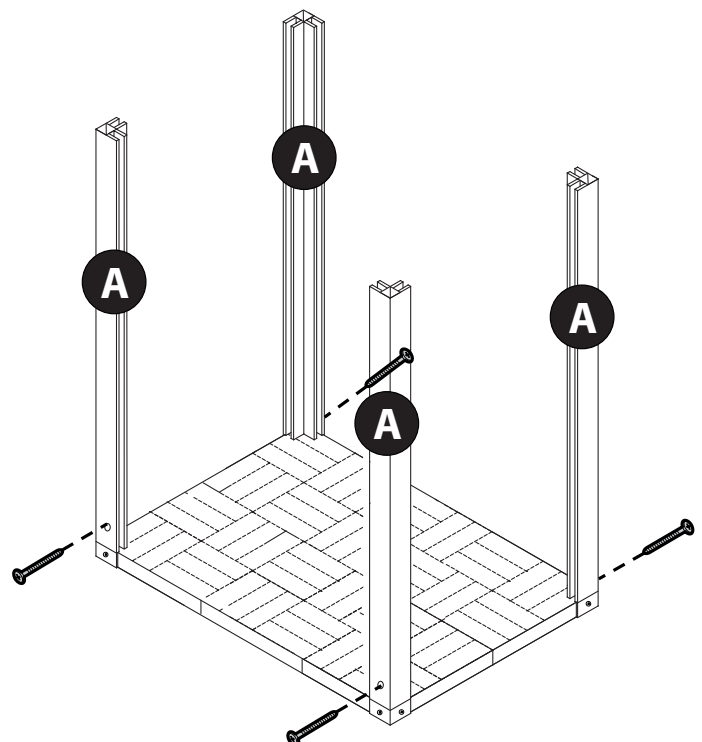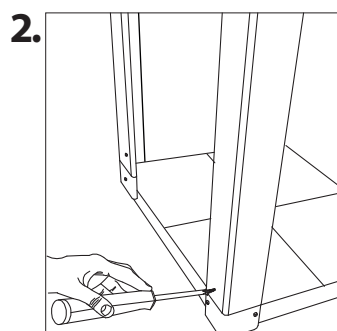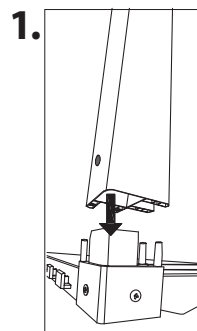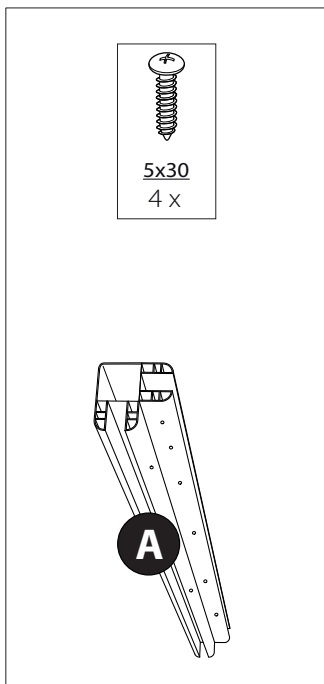

4.

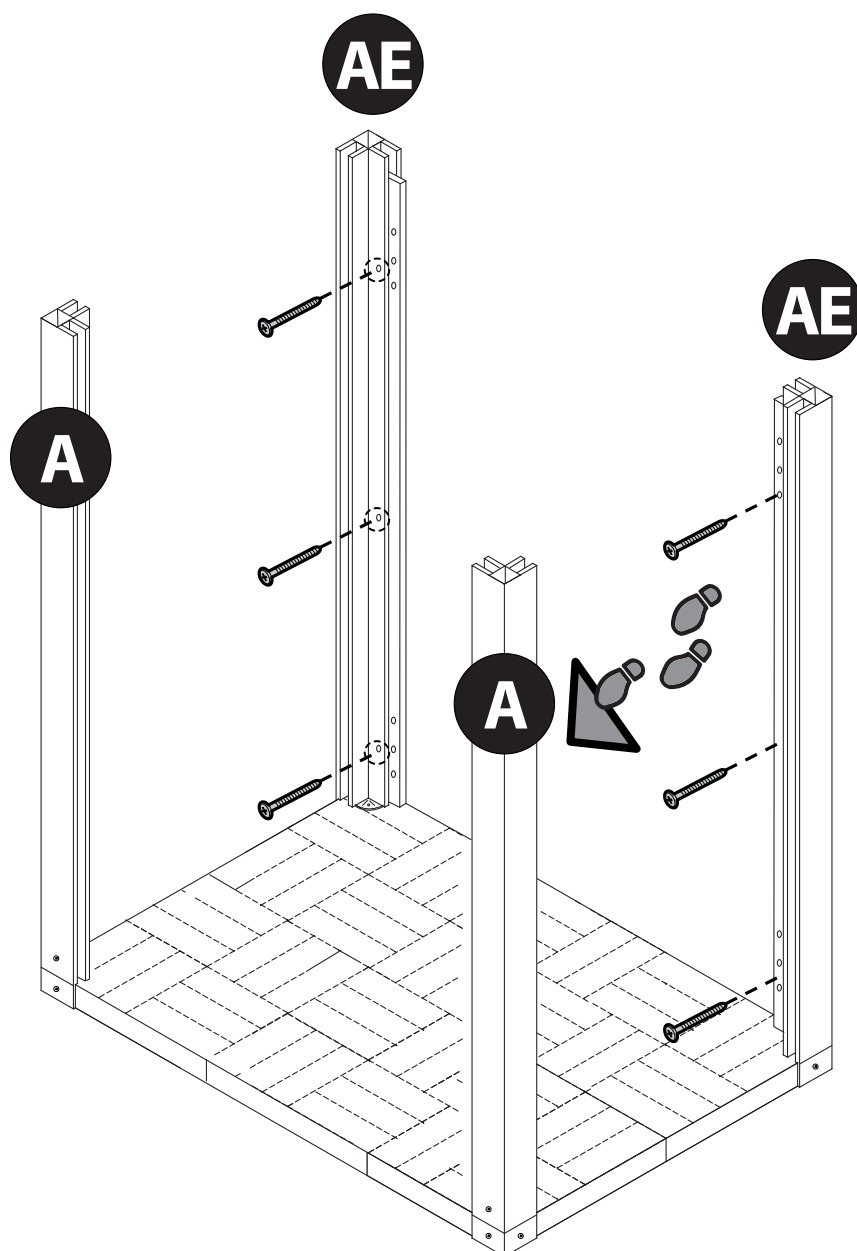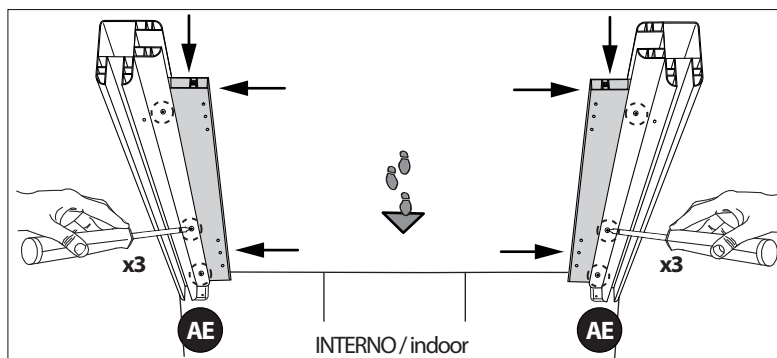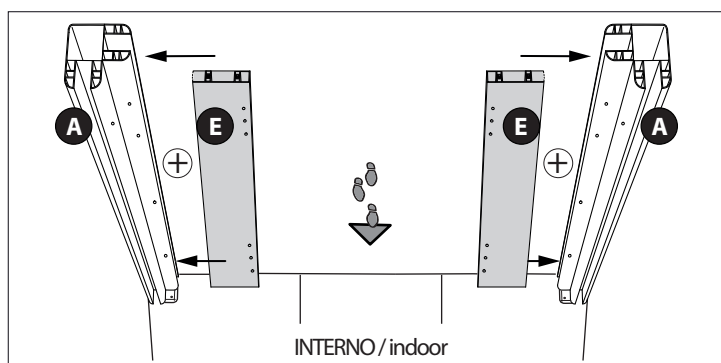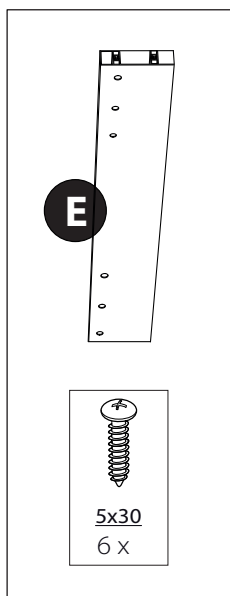





5.

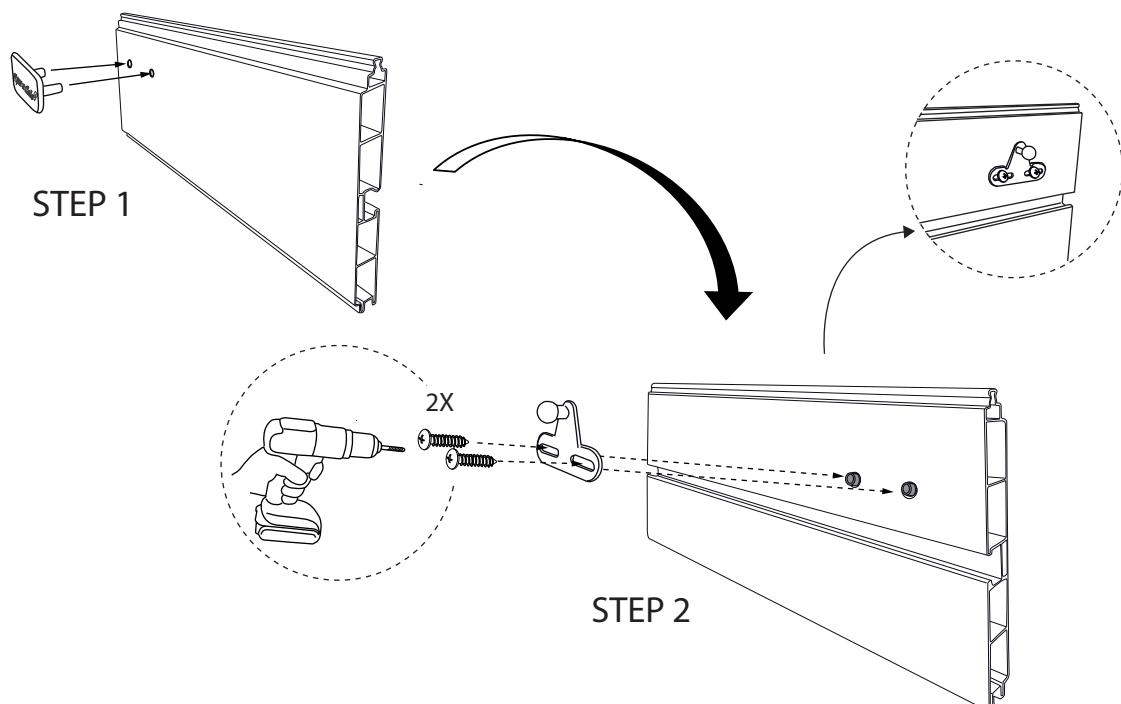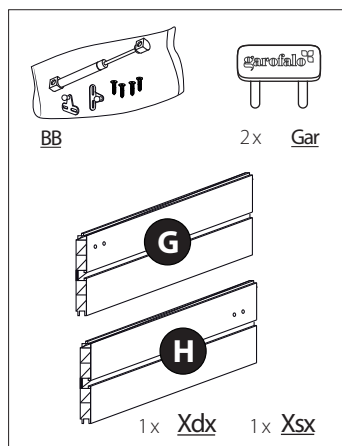



6.





ATTENZIONE! Incastrare bene le doghe.
ATTENTION! Make sure the profiles are pressed firmly down to make a tight joint.

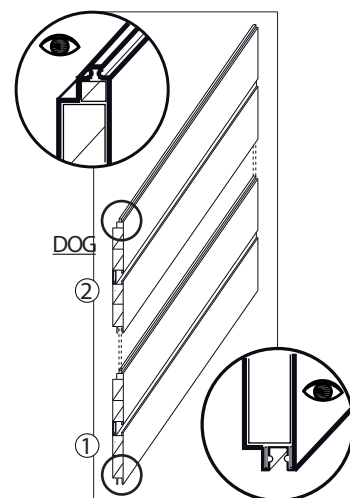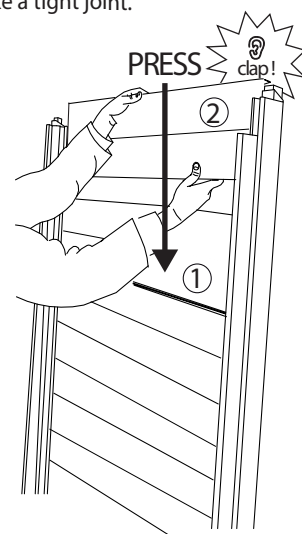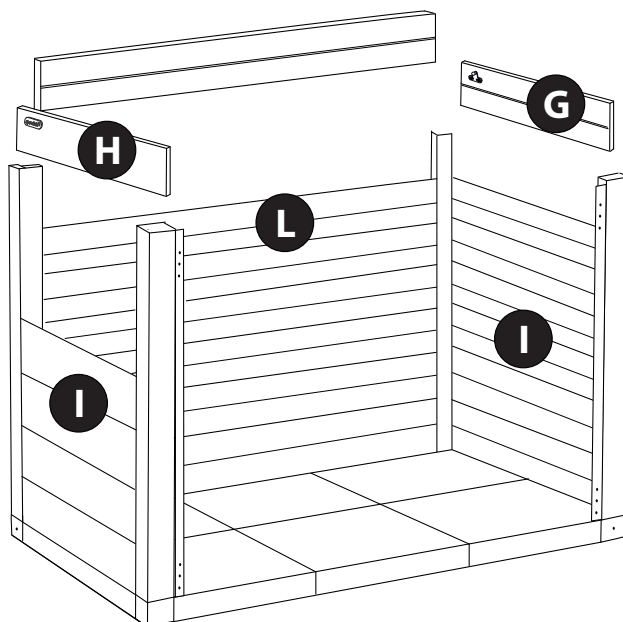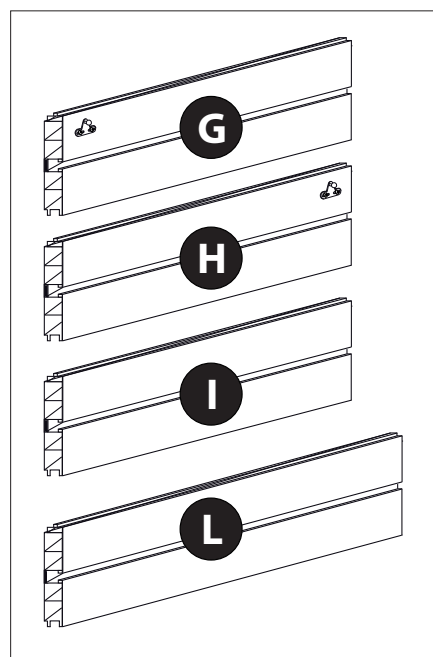




7.

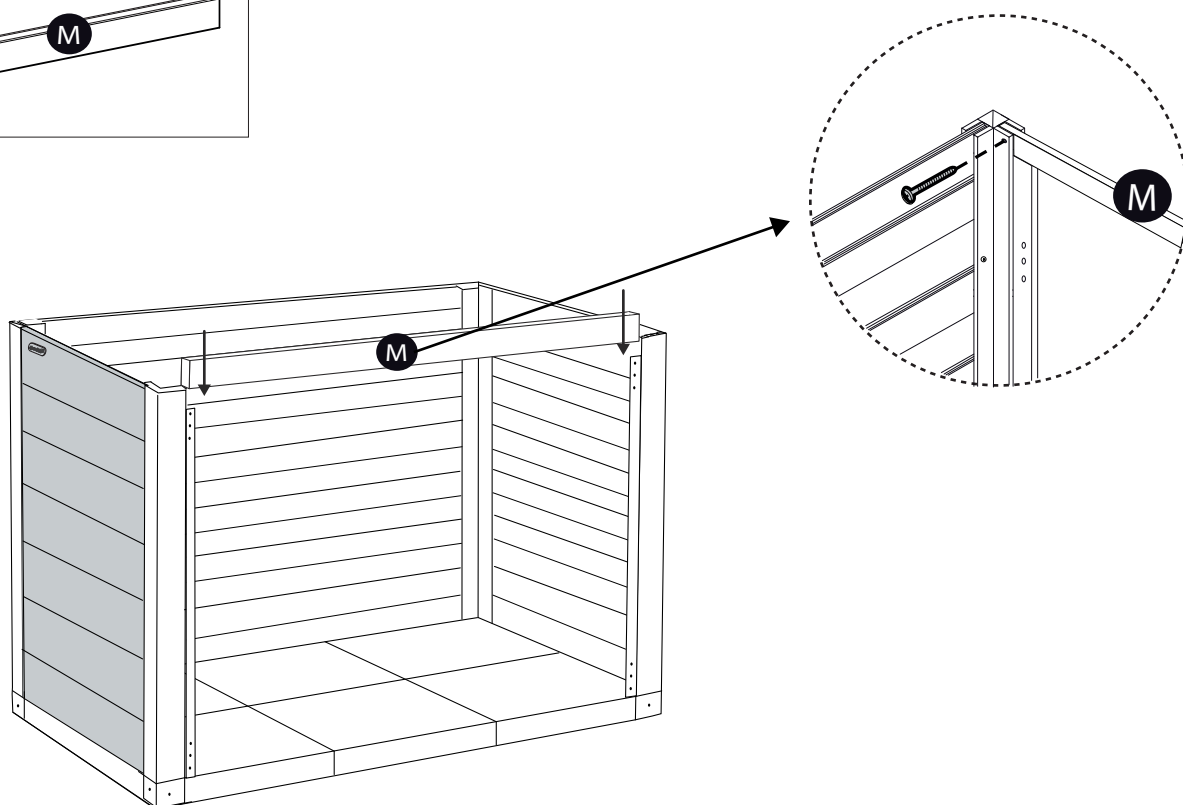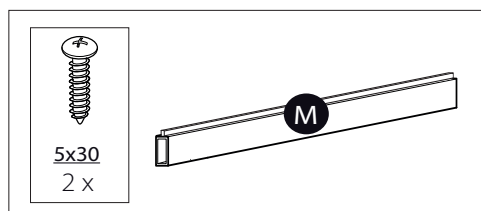



8.

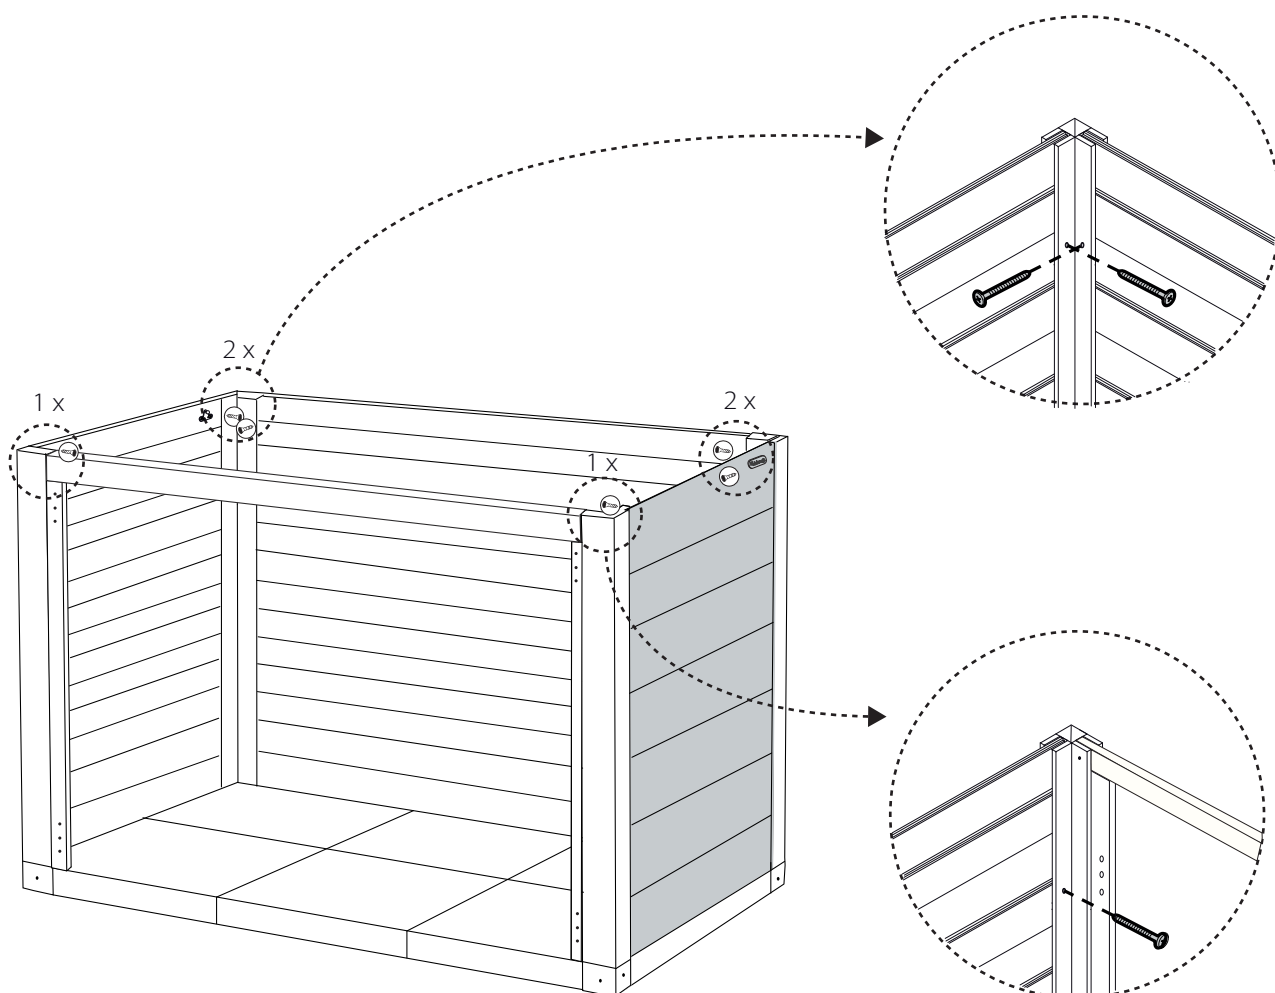



9.

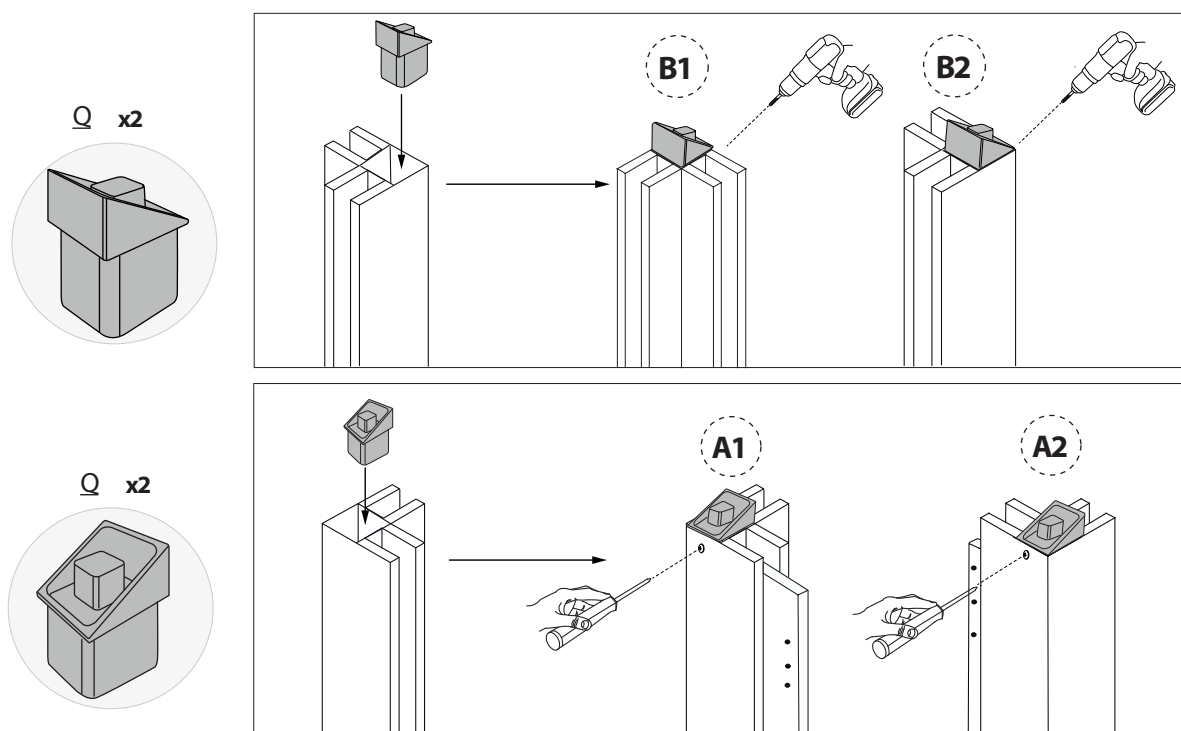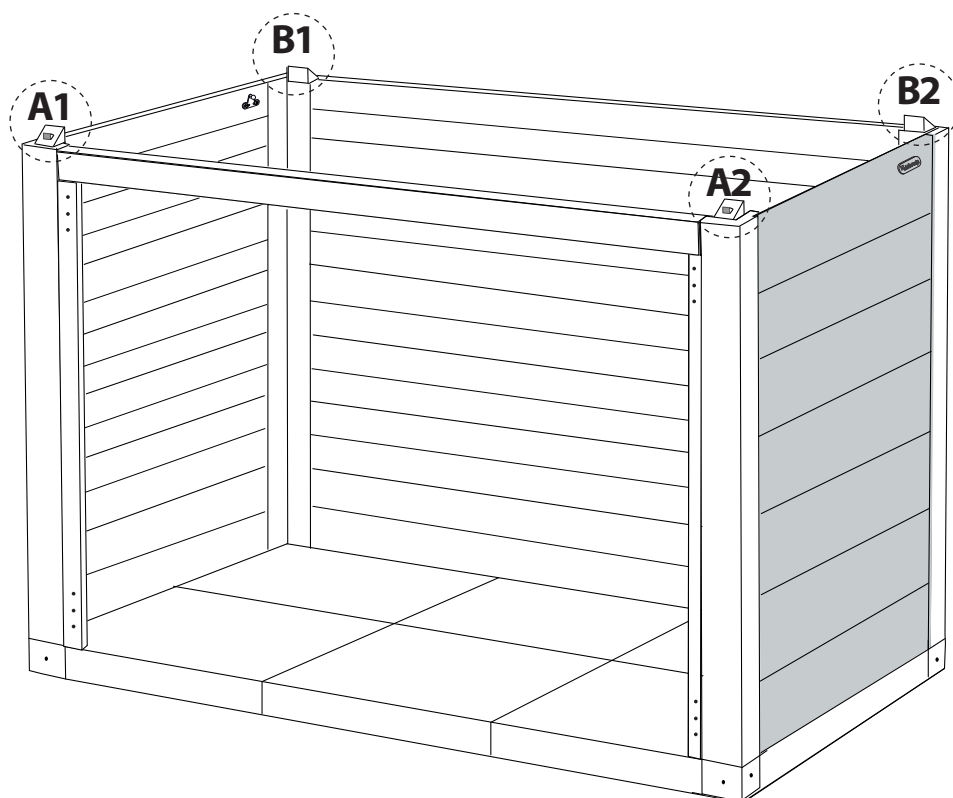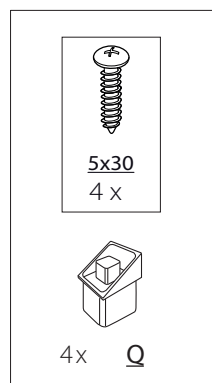




10. ASSEMBLAGGIO TETTO | ROOF ASSEMBLY | MONTAGE DU TOIT | ARMADO DEL TECHO | DACHMONTAGE

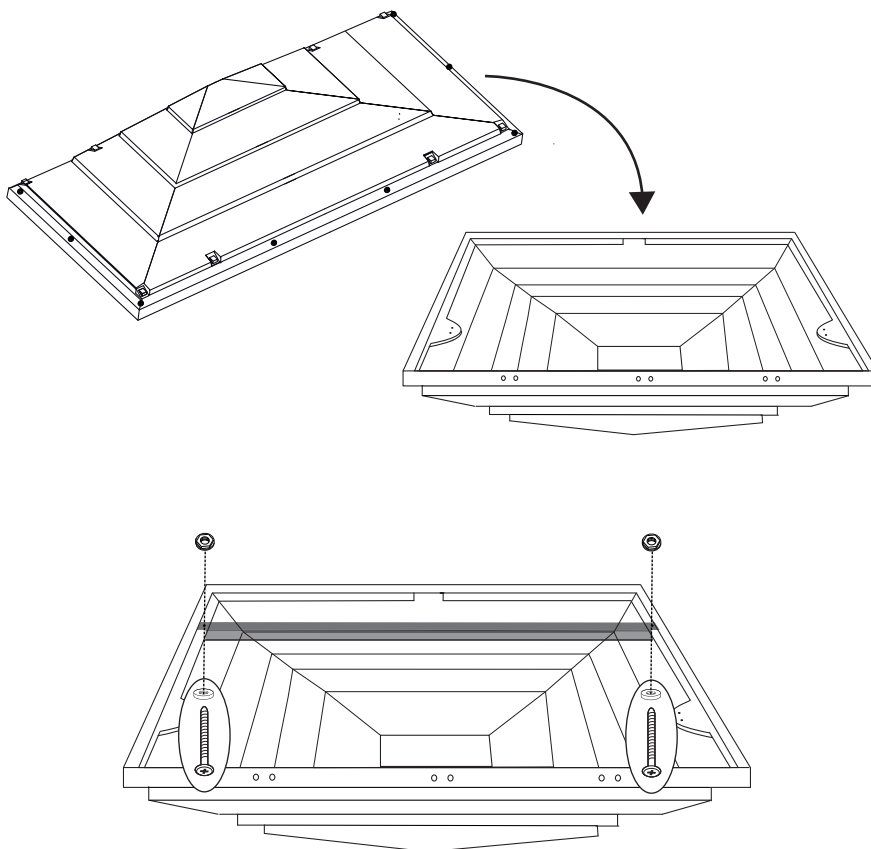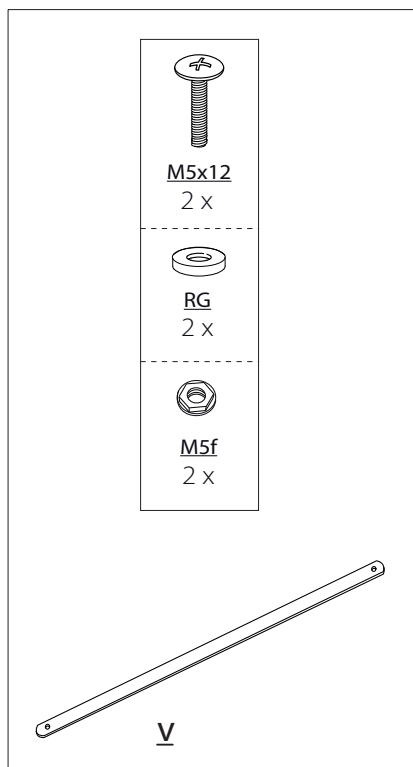



11.

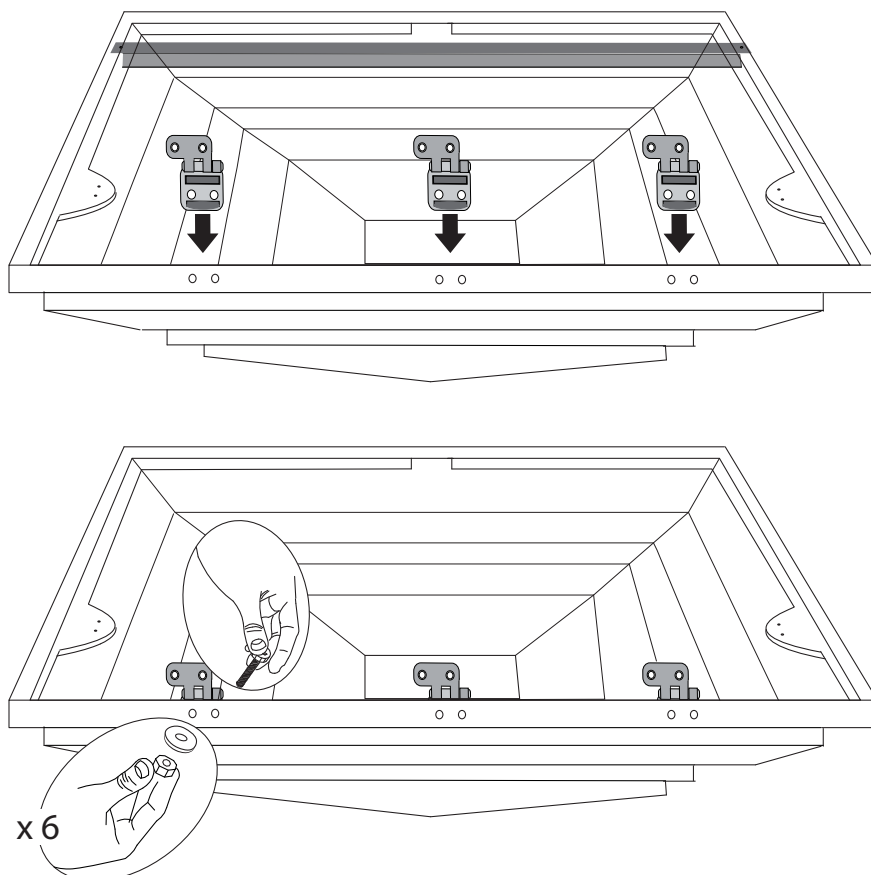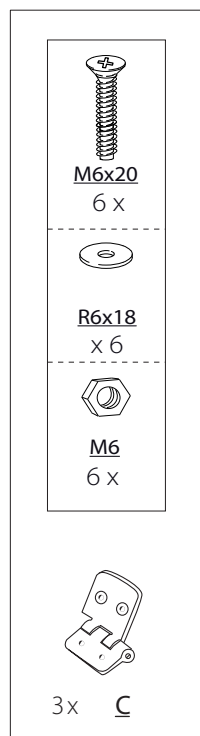




12.

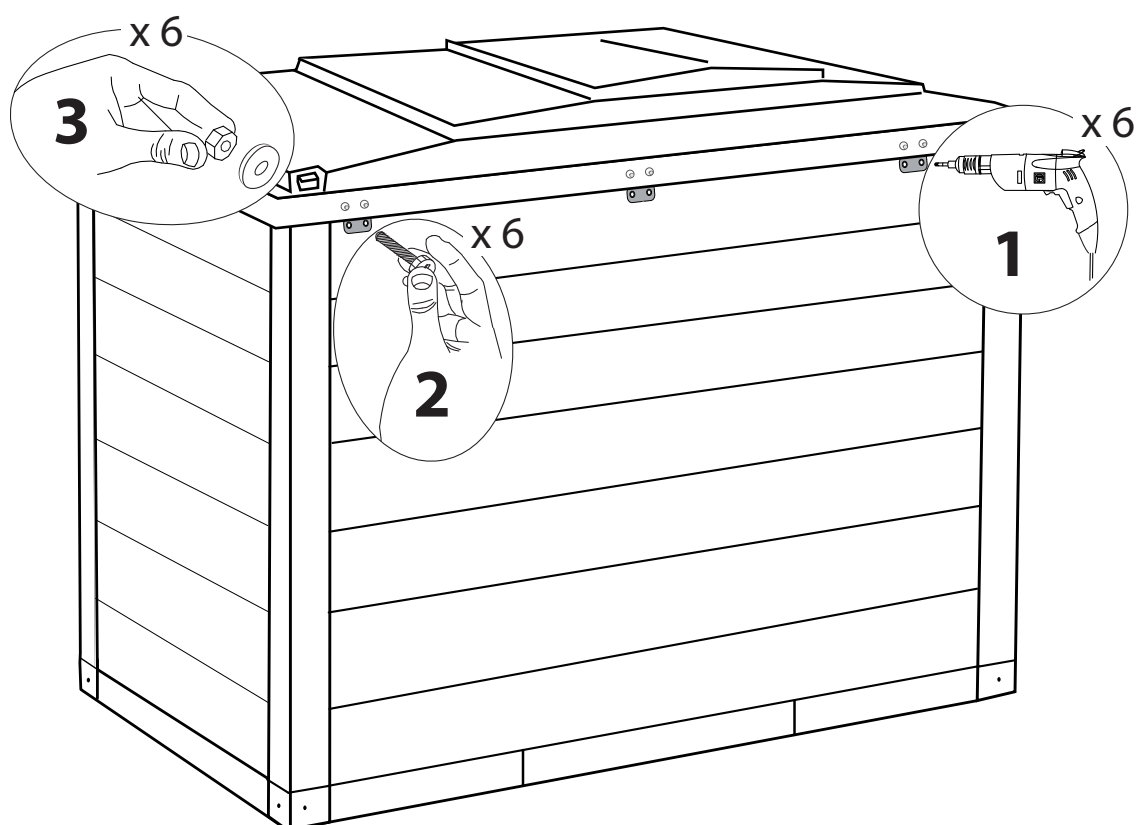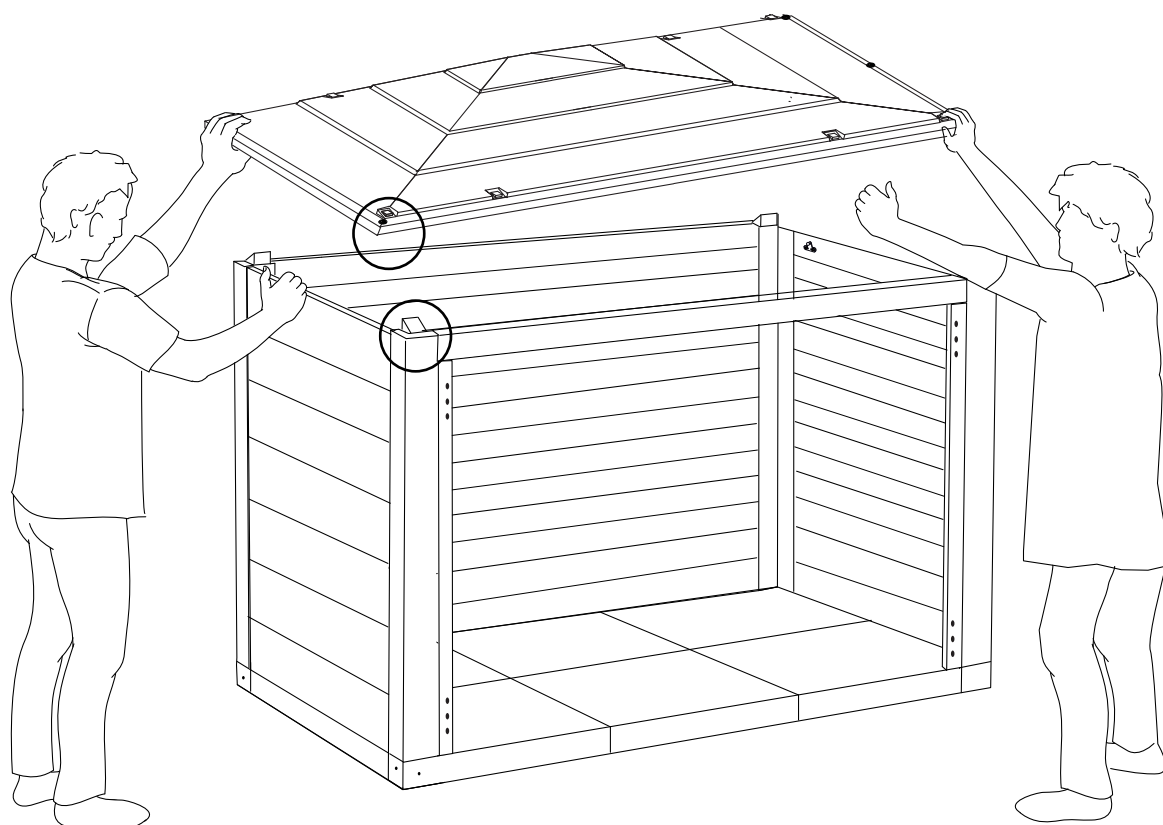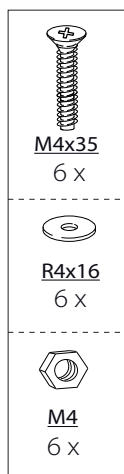

13.


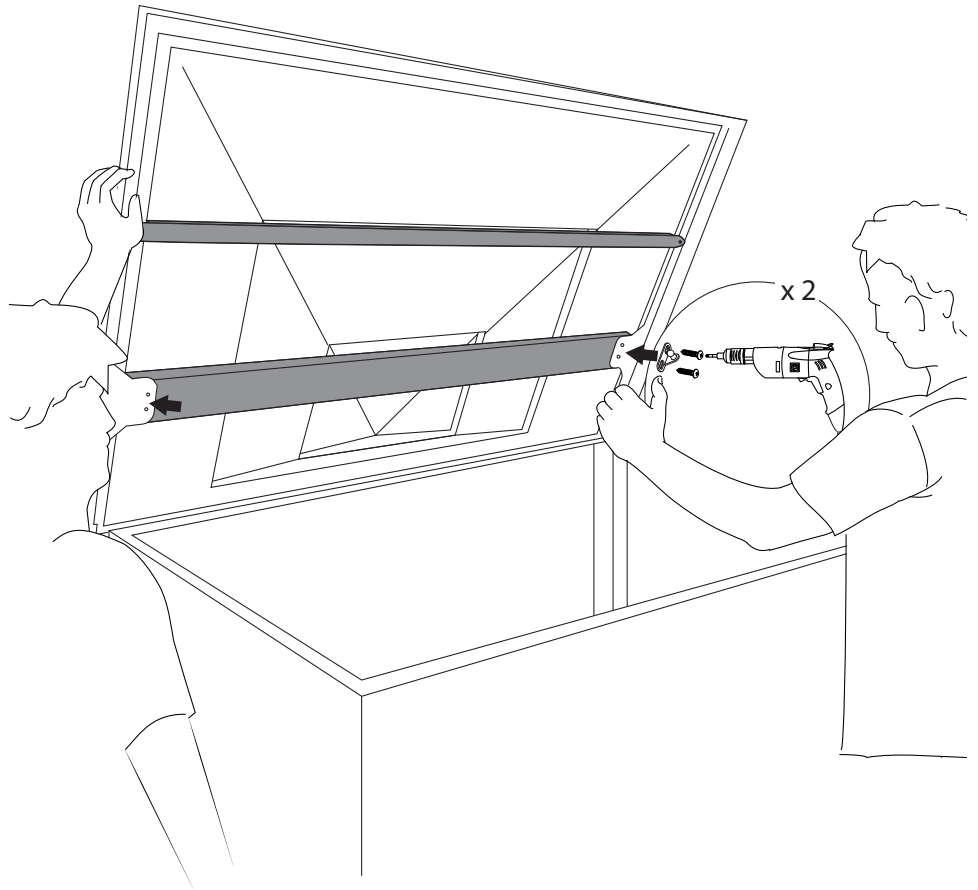
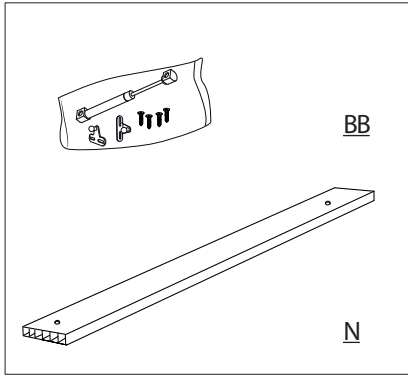


14.

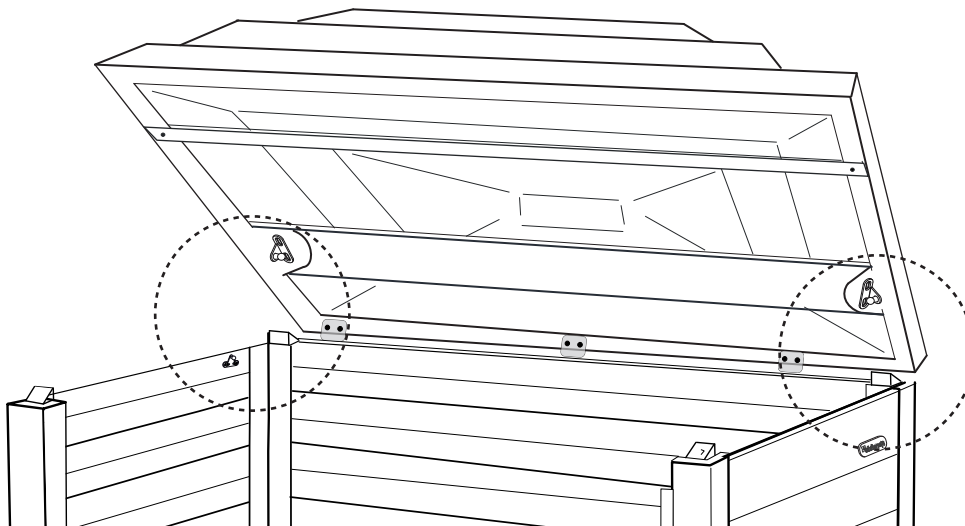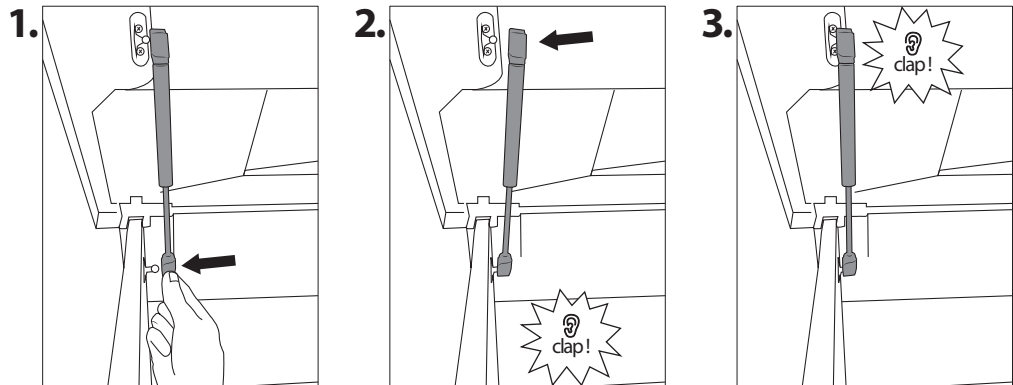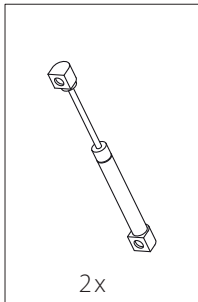

15.

ASSEMBLAGGIO PORTA | DOOR ASSEMBLY | MONTAGE DE LA PORTE | ARMADO DE LA PUERTA | MONTAGE DERTÜR

	
 M4x30 8 x	 M4x30 24 x
 R4x16 8 x	 R4x16 24 x
 M4 8 x	 M4 24 x
 TPd 8 x	 TPd 24 x

