



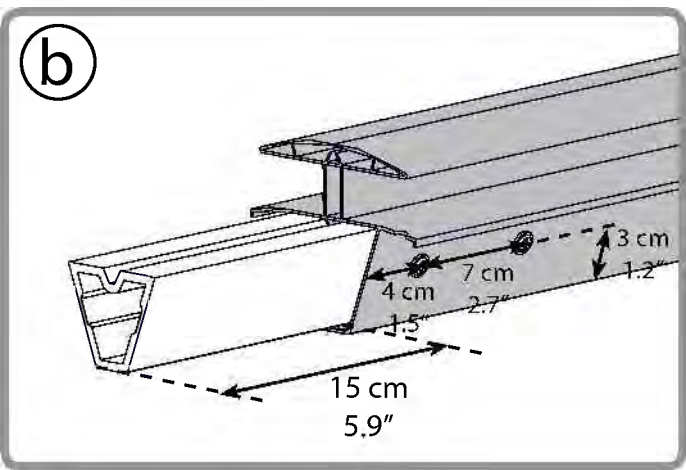
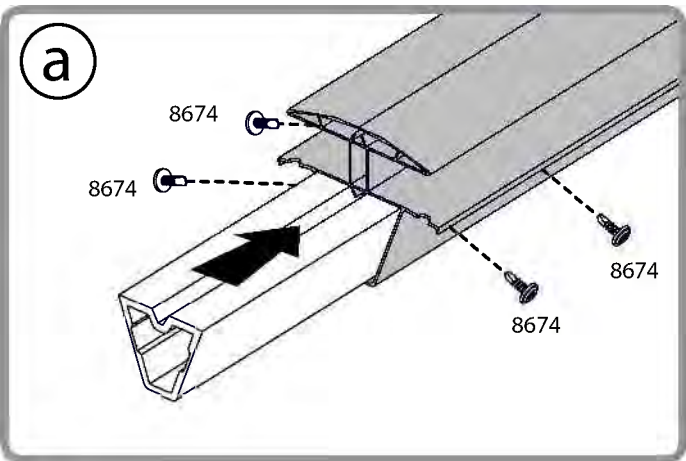
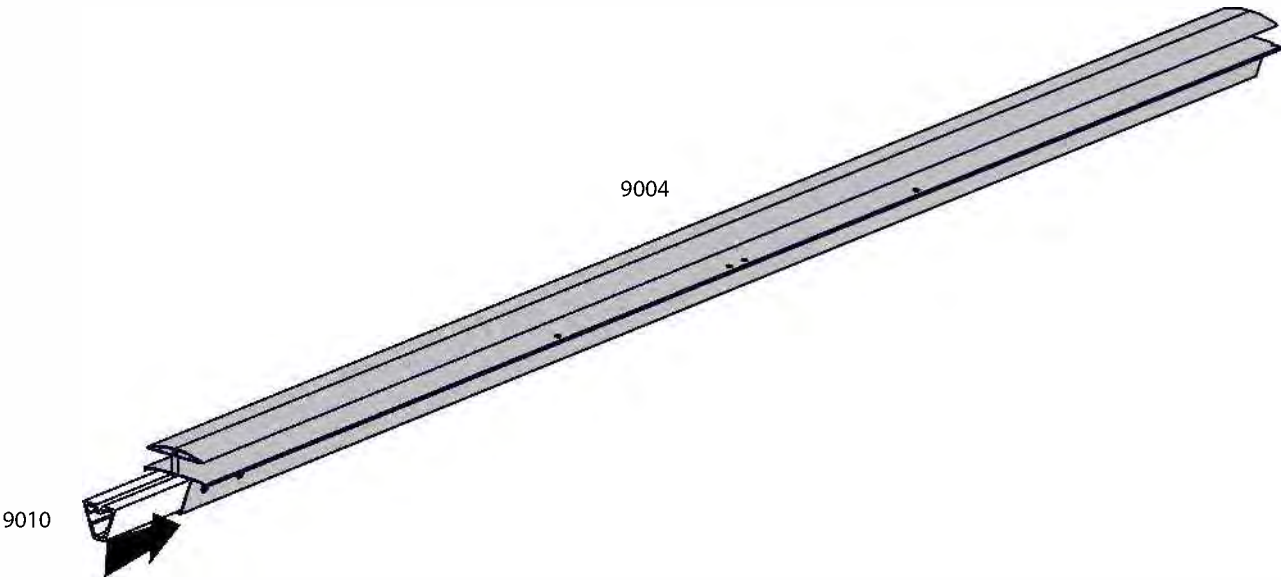
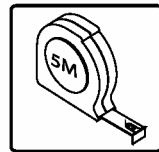
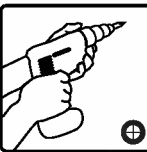
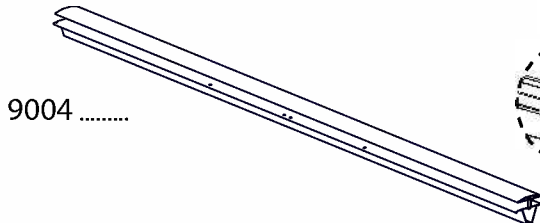
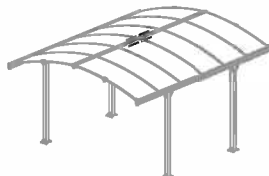
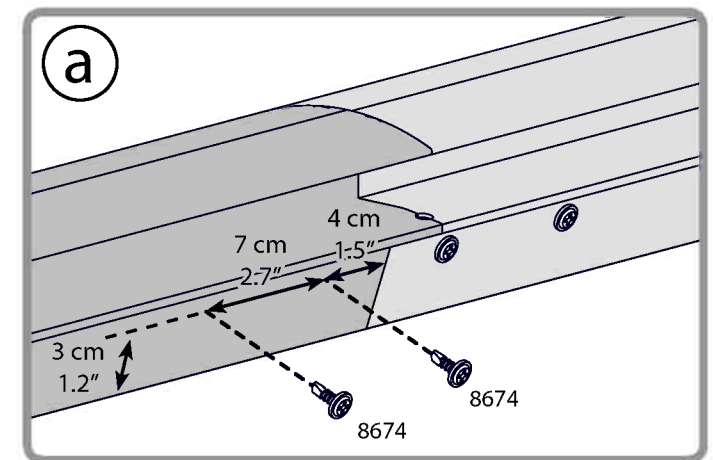
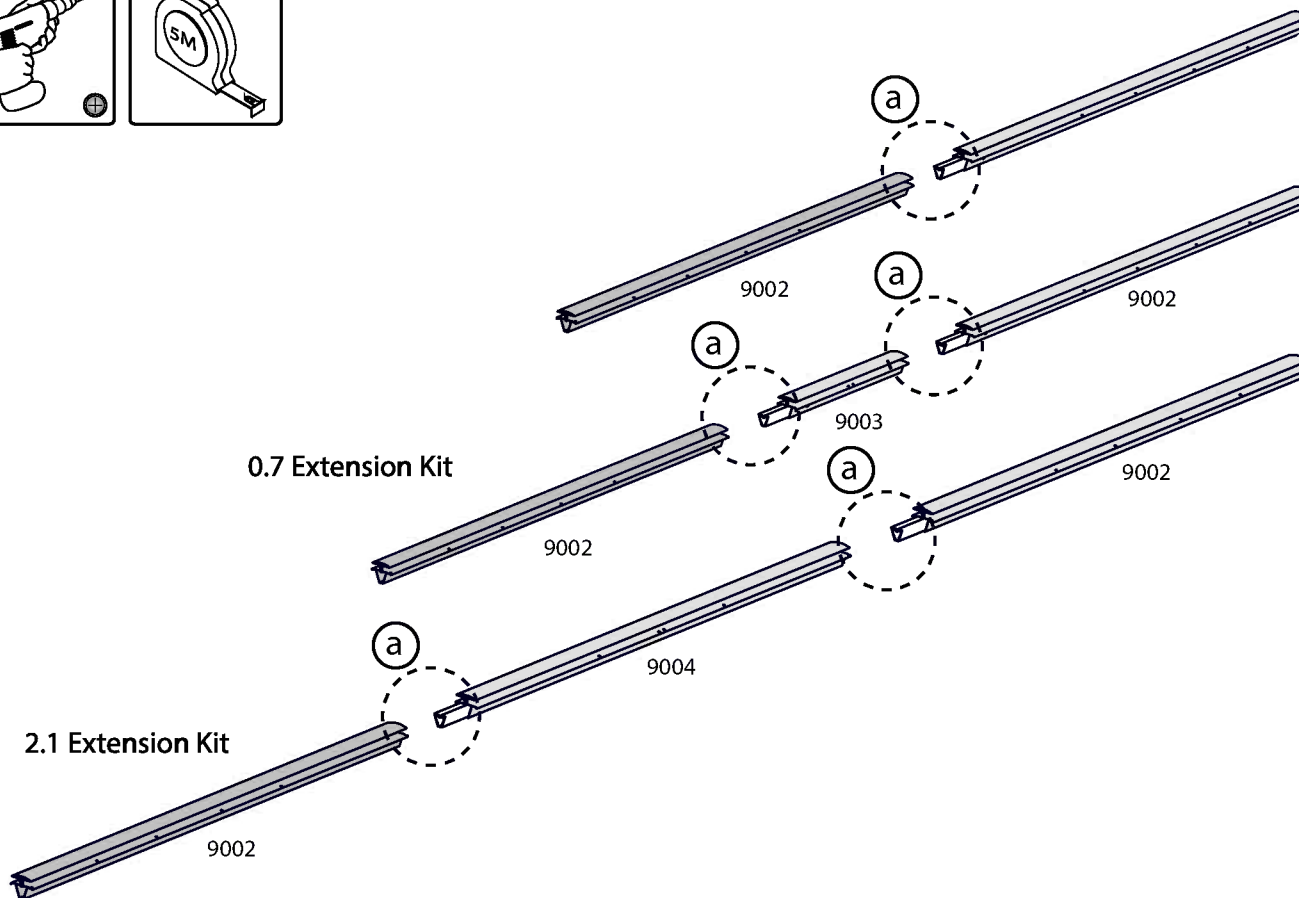


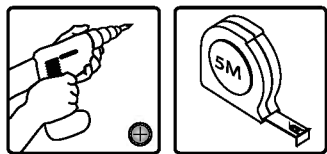

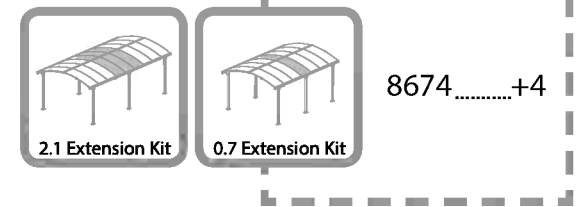

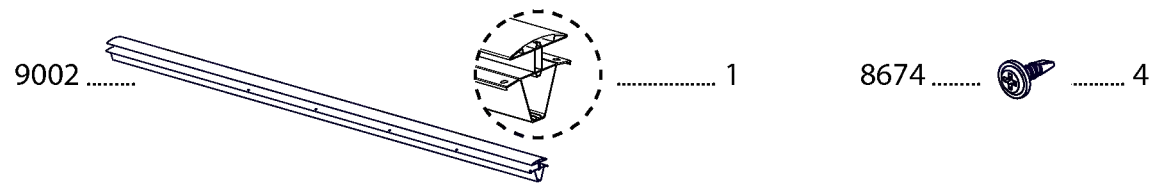






54  2



54+2



54+2

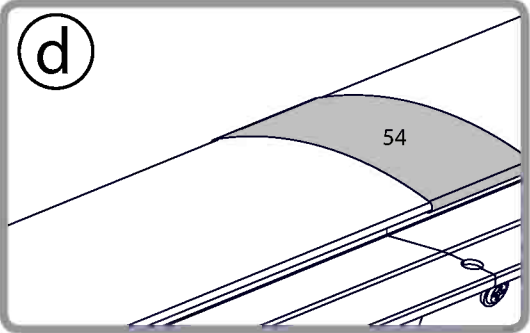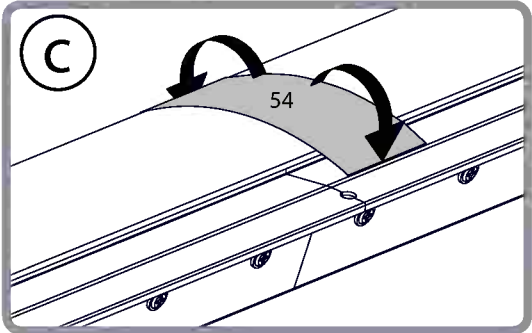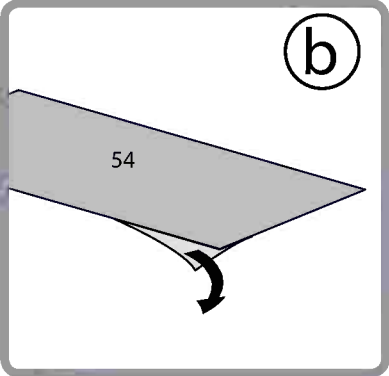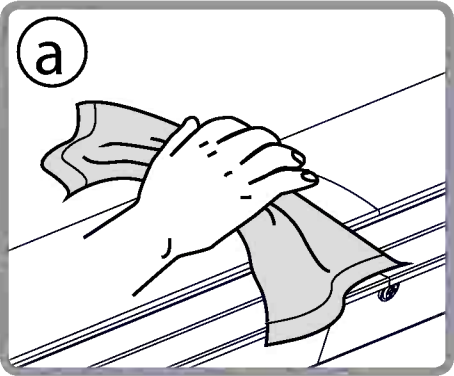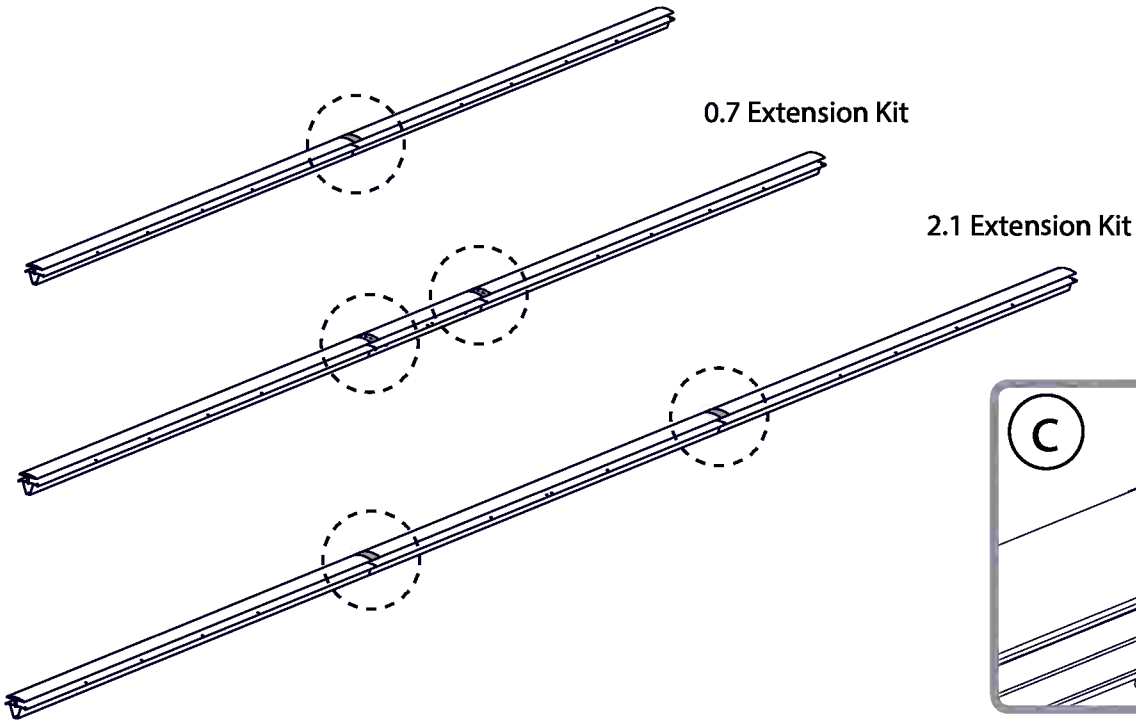



8192 14

466 14






0.7 Extension Kit


8192+2
466+2









2.1 Extension Kit








8192+6
466+6

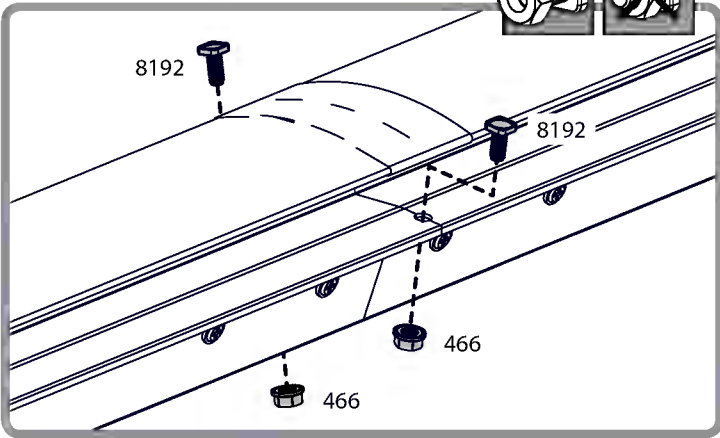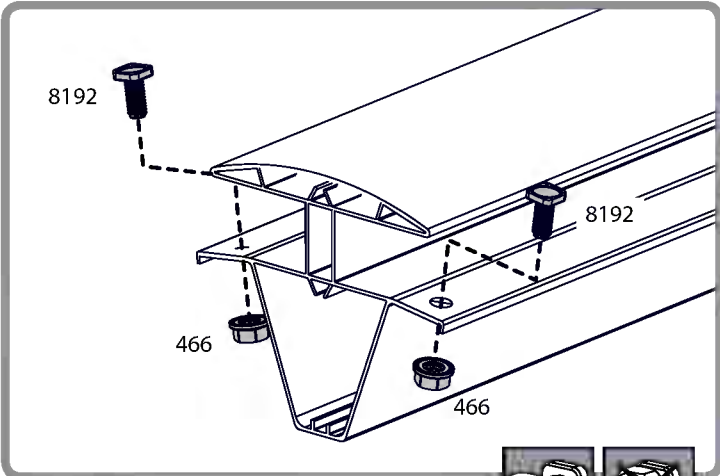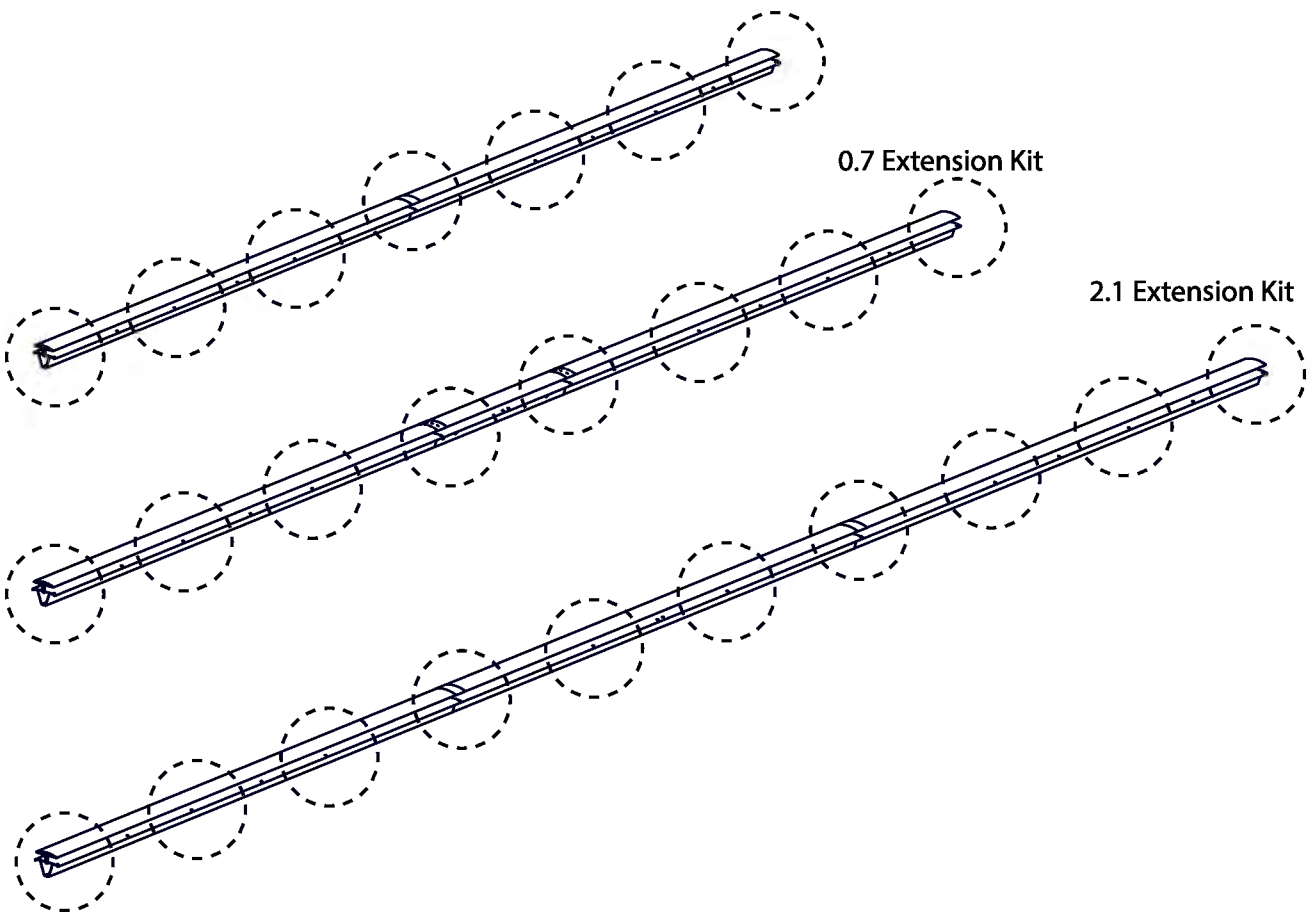

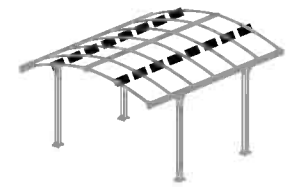

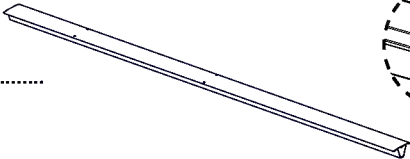
- 9005  2
- 9010  2
- 8674  8

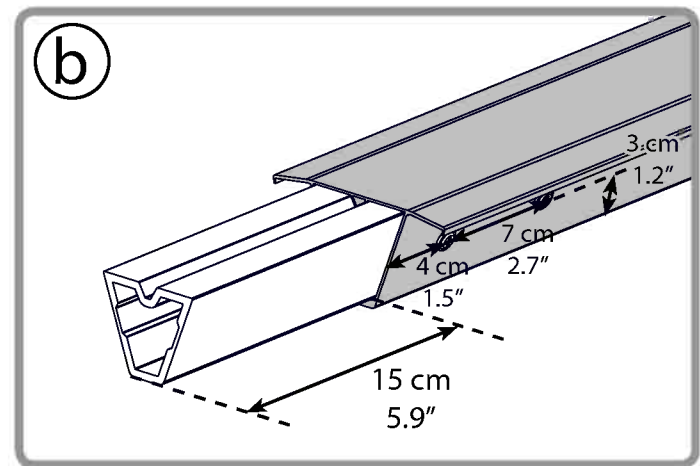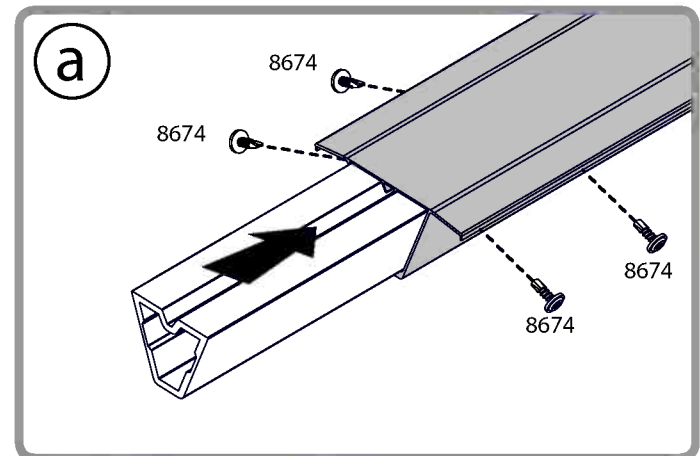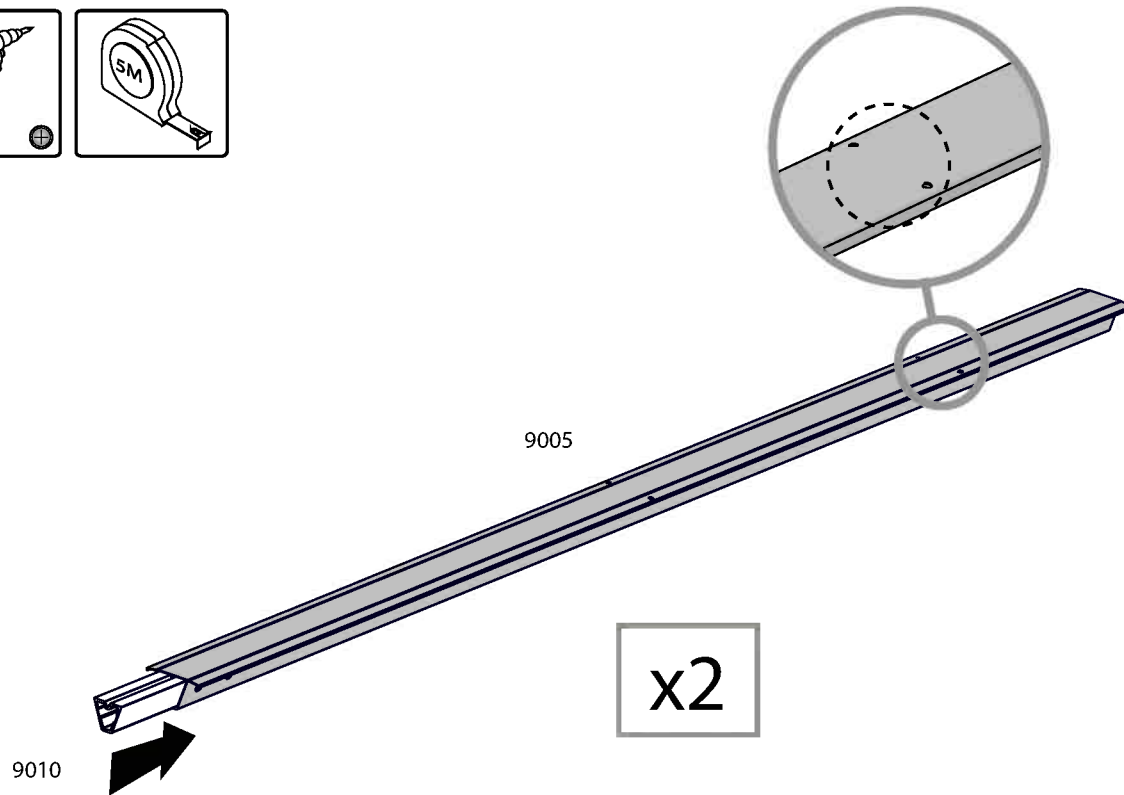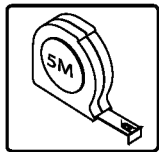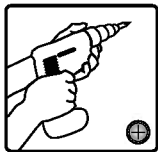

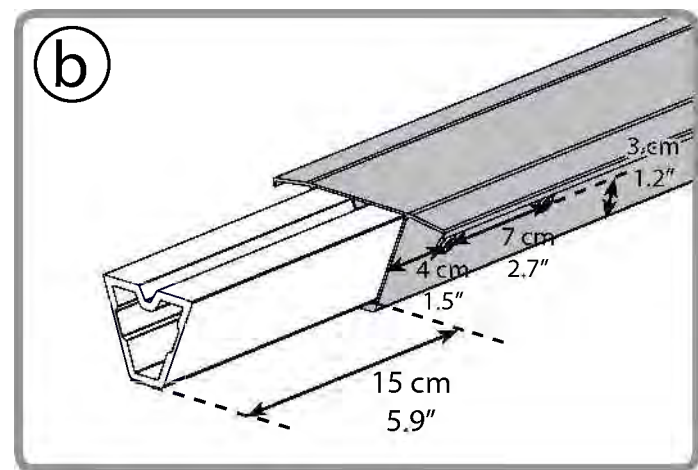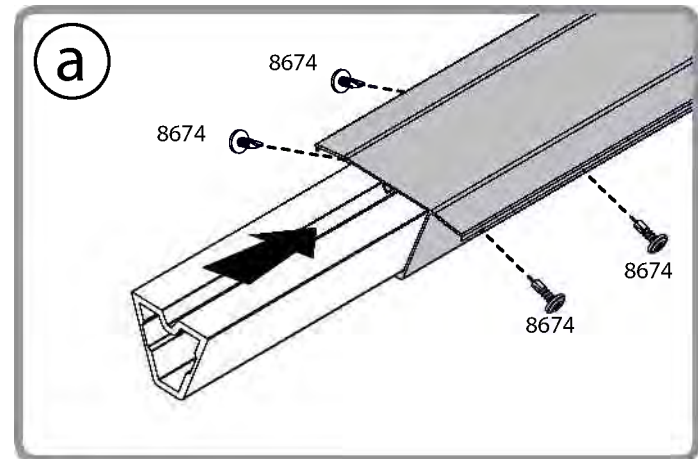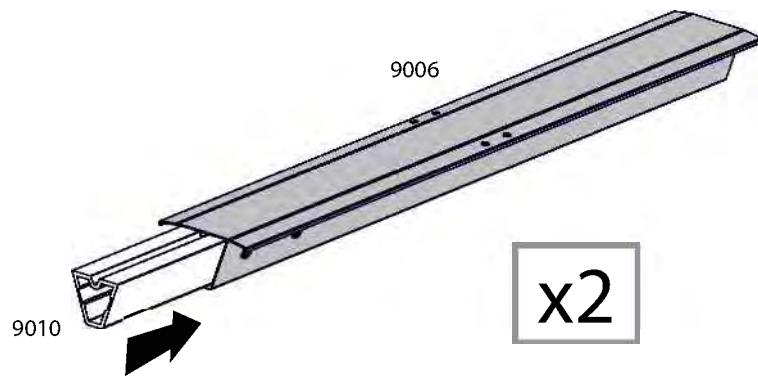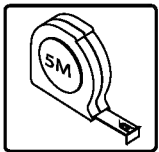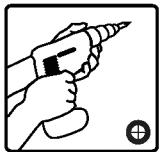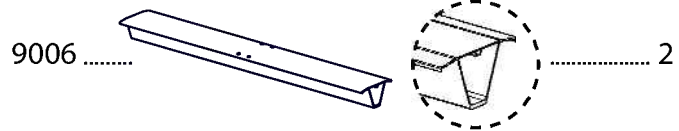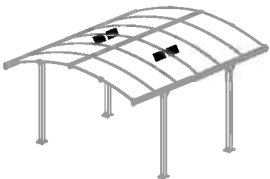




2.1 Extension Kit

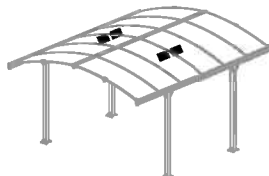

9007

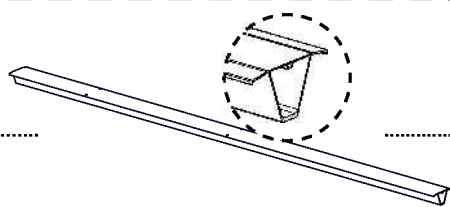

..... 2

9010






..... 2

8674




..... 8

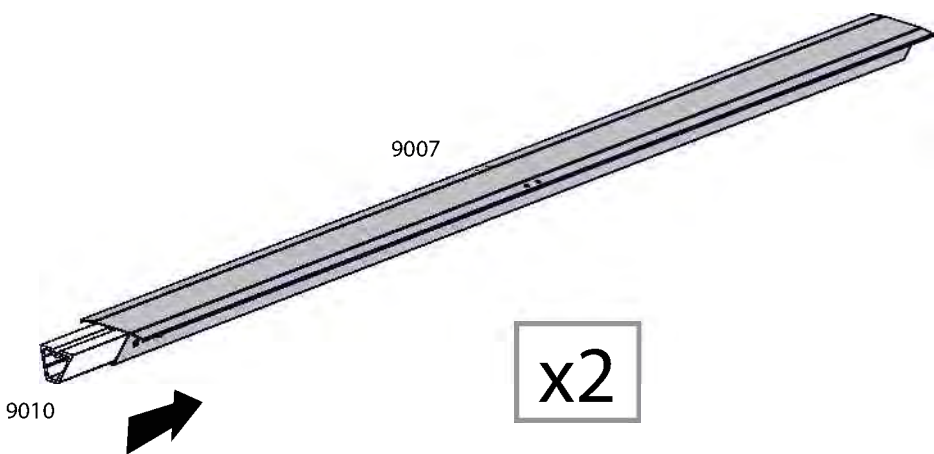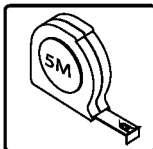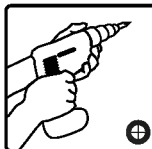




x2

a


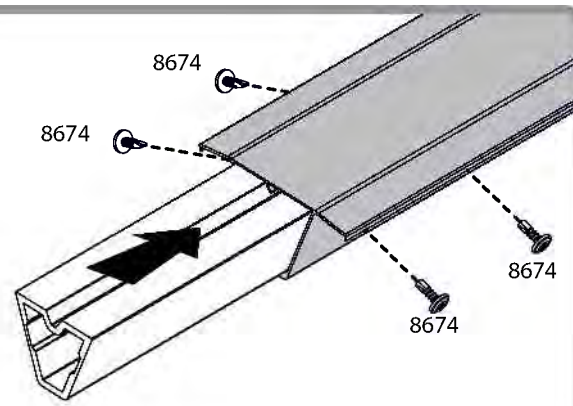


b


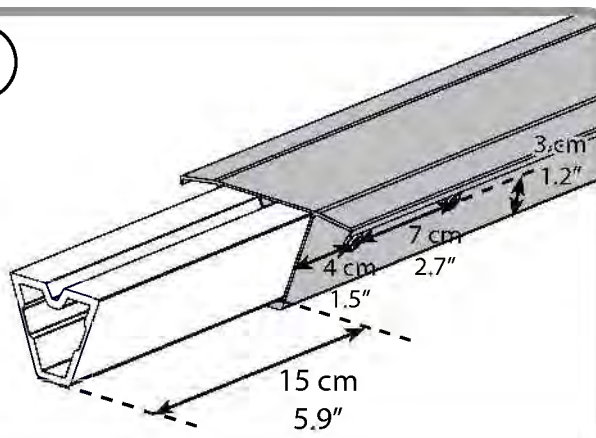







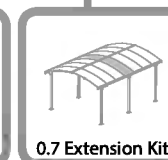
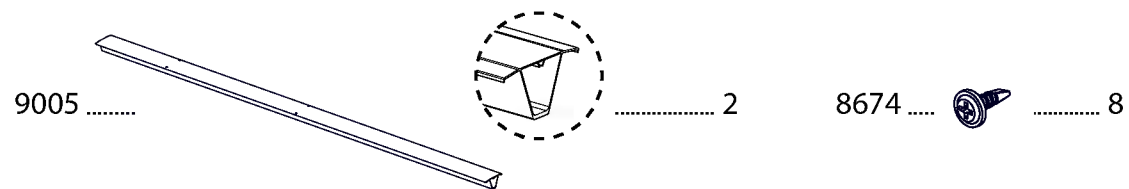


8674.....+8






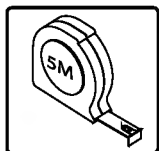
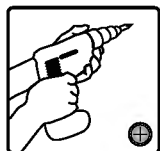


x2




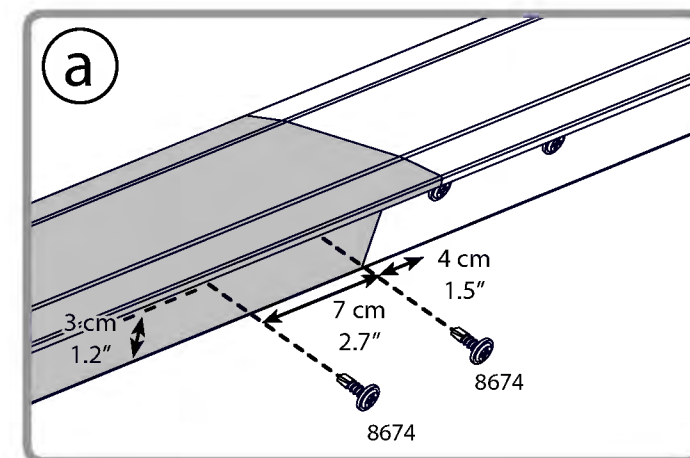
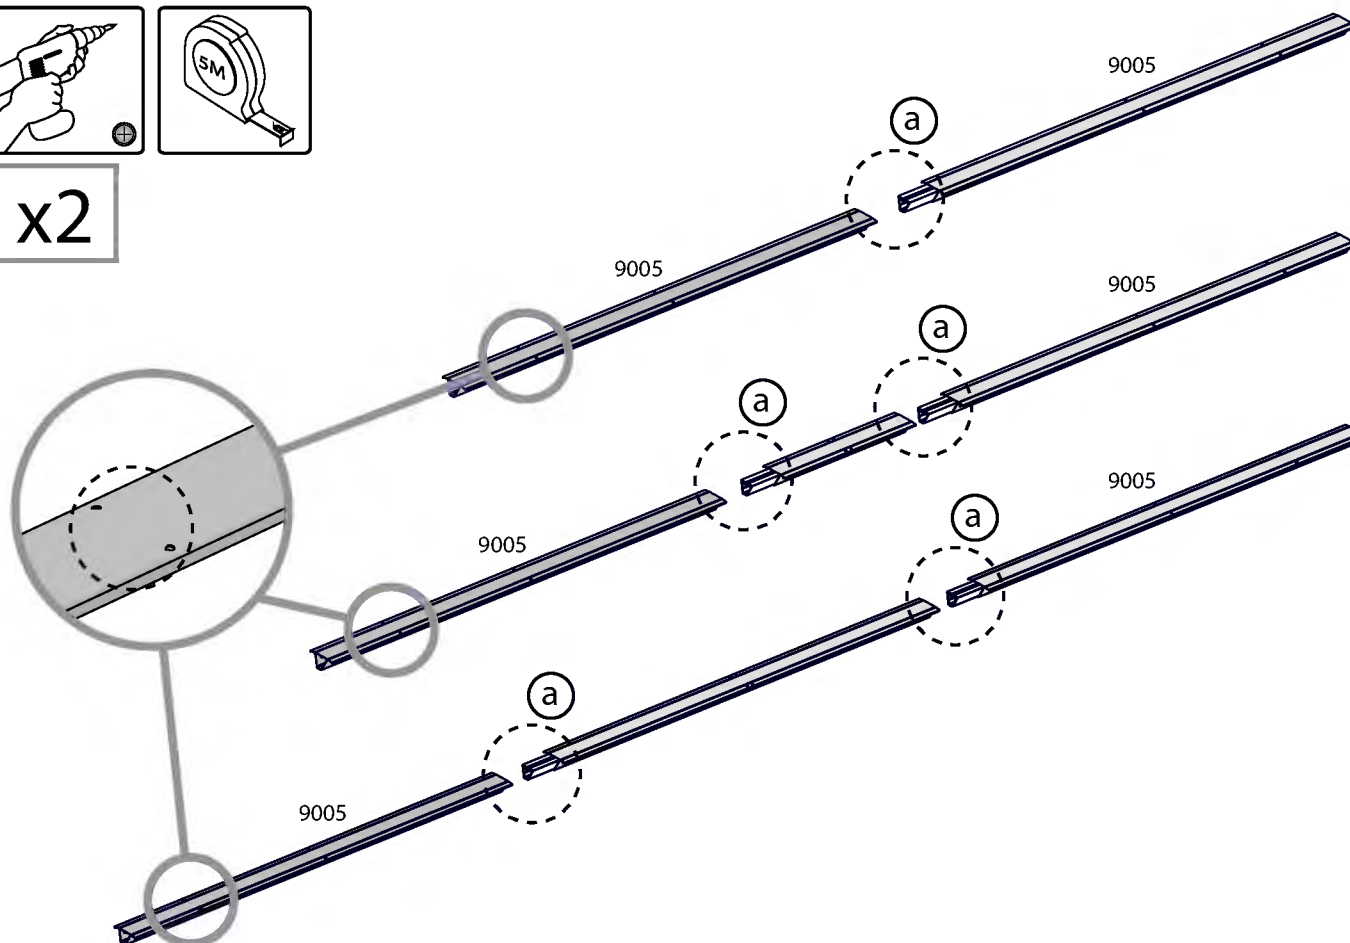


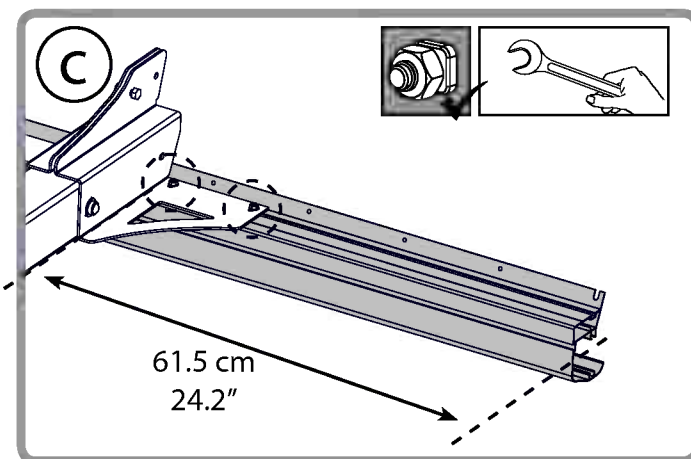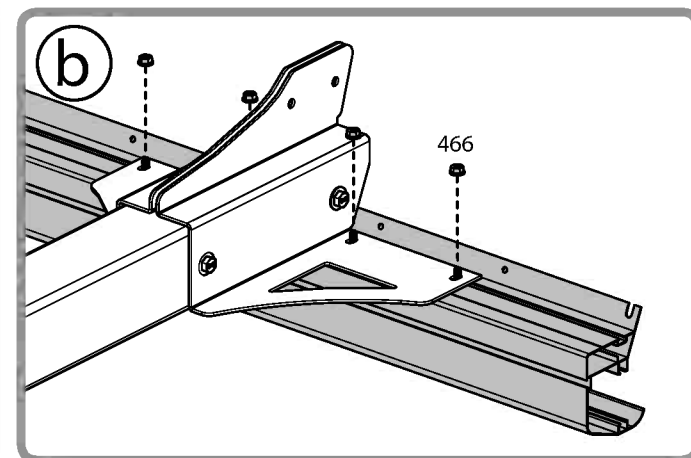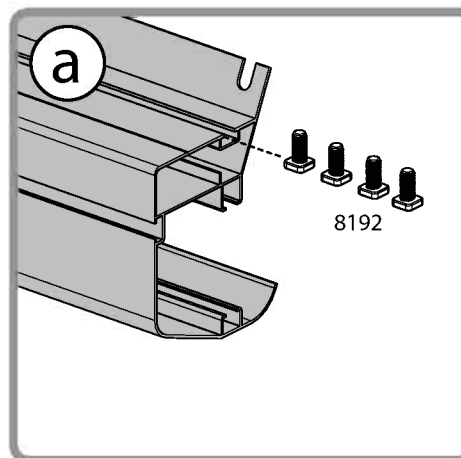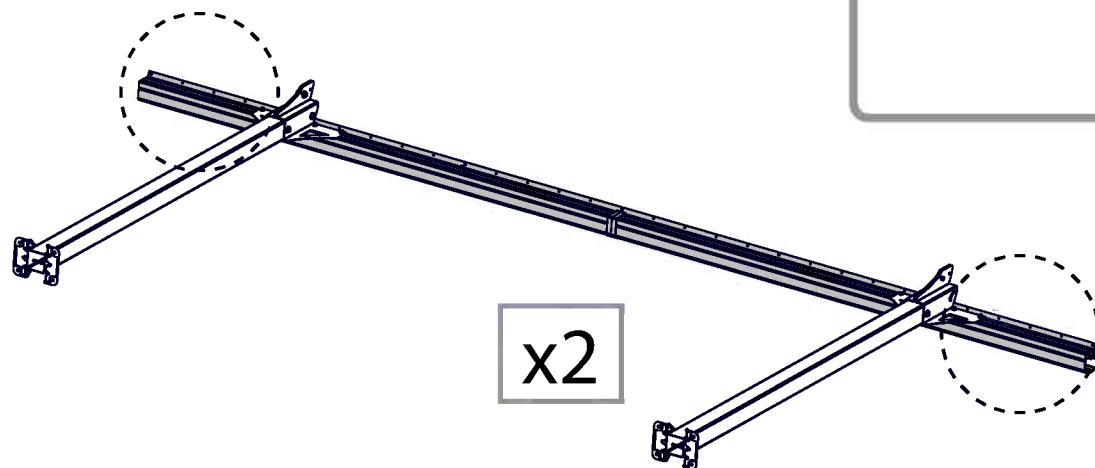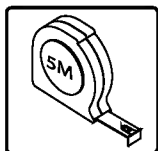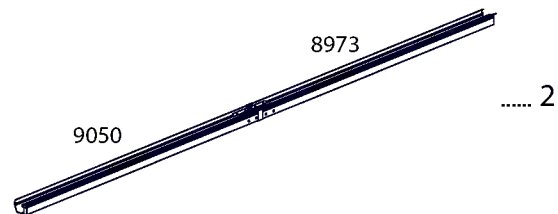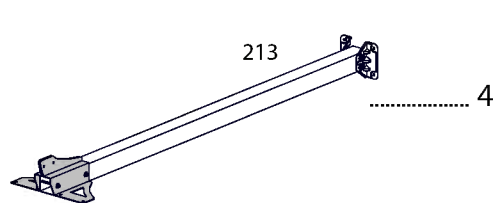


23 For Extension Kits

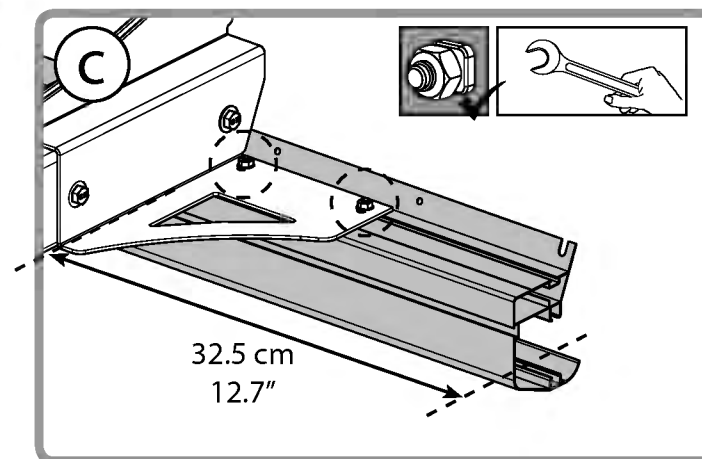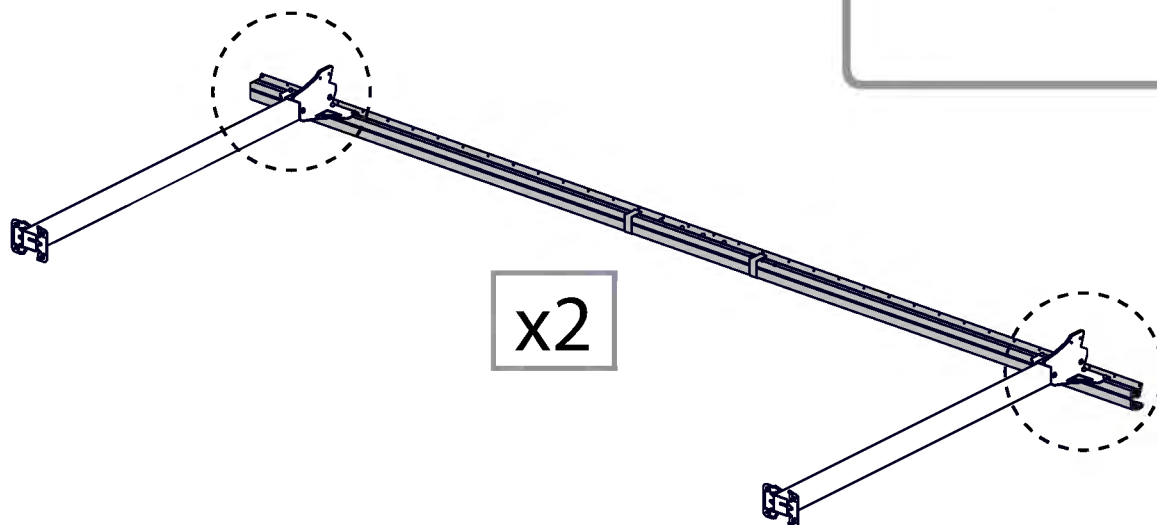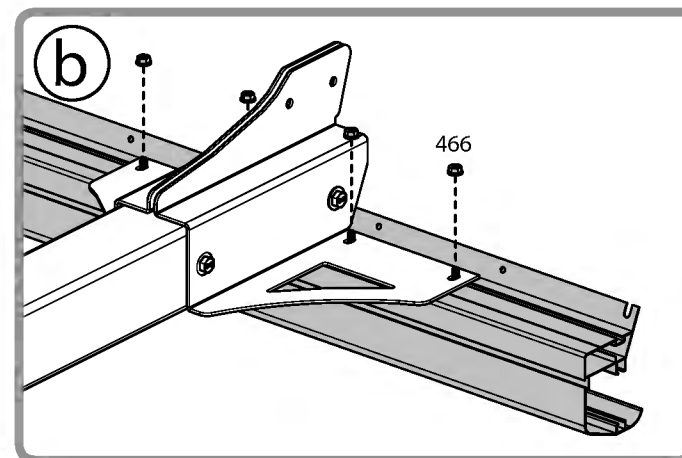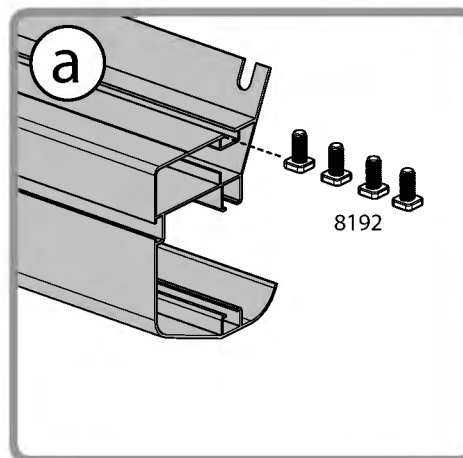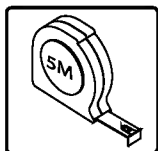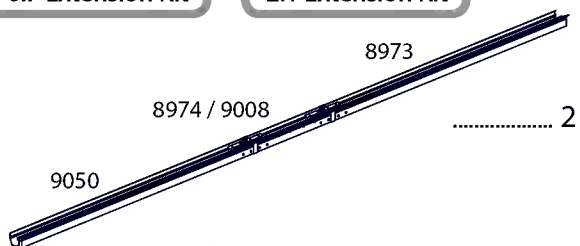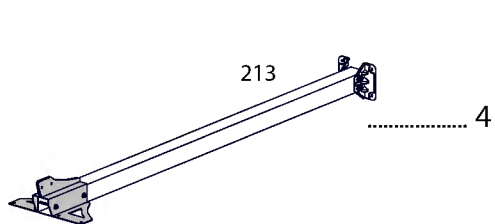


24 For Extension Kits

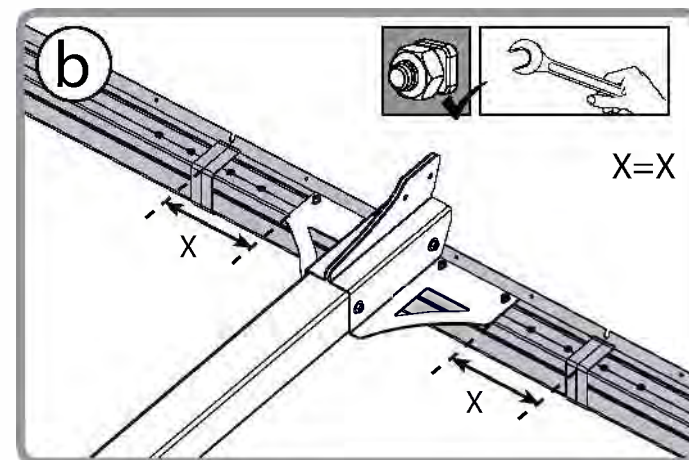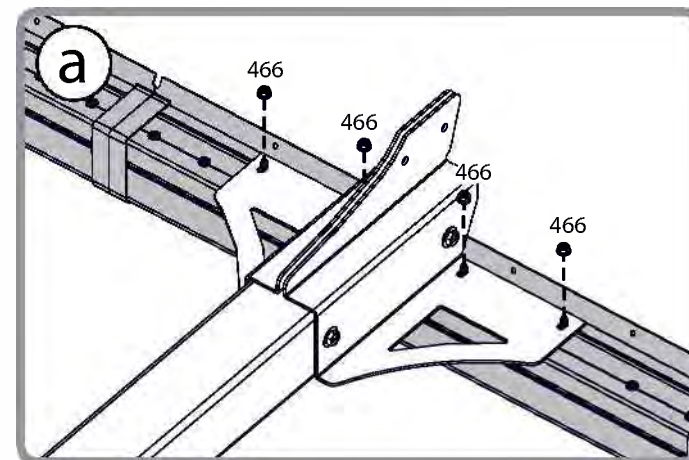
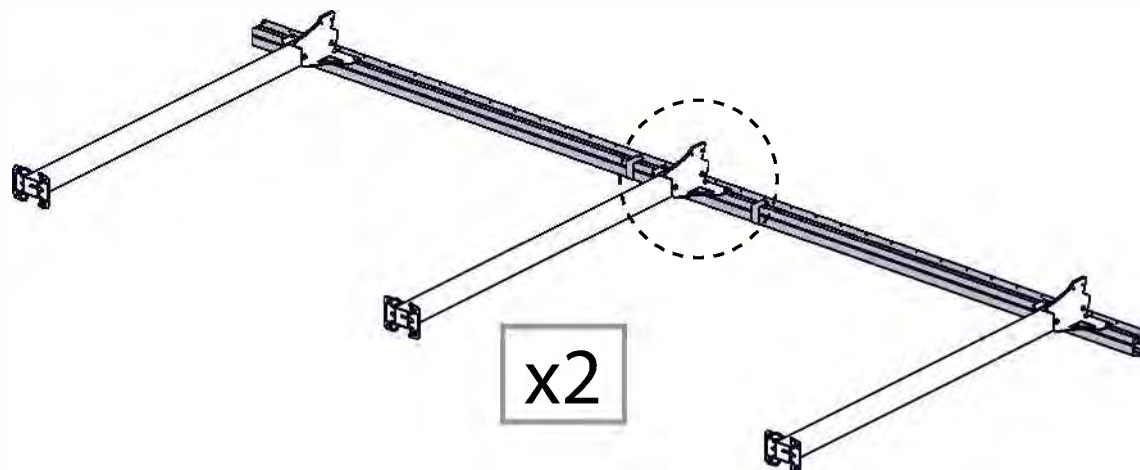
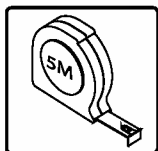
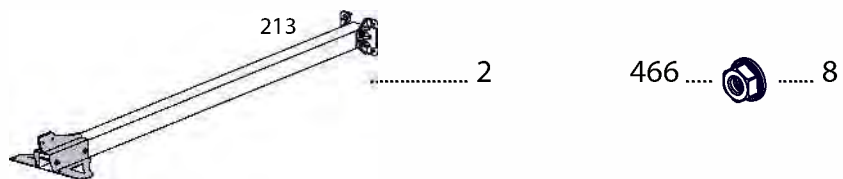


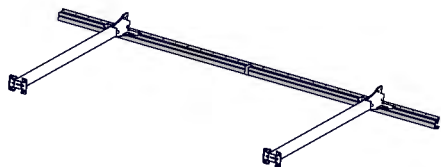

..... 2

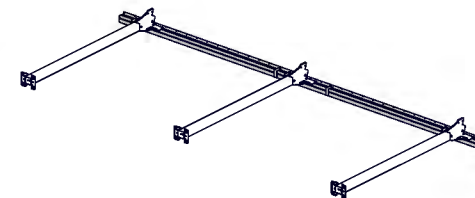

..... 2

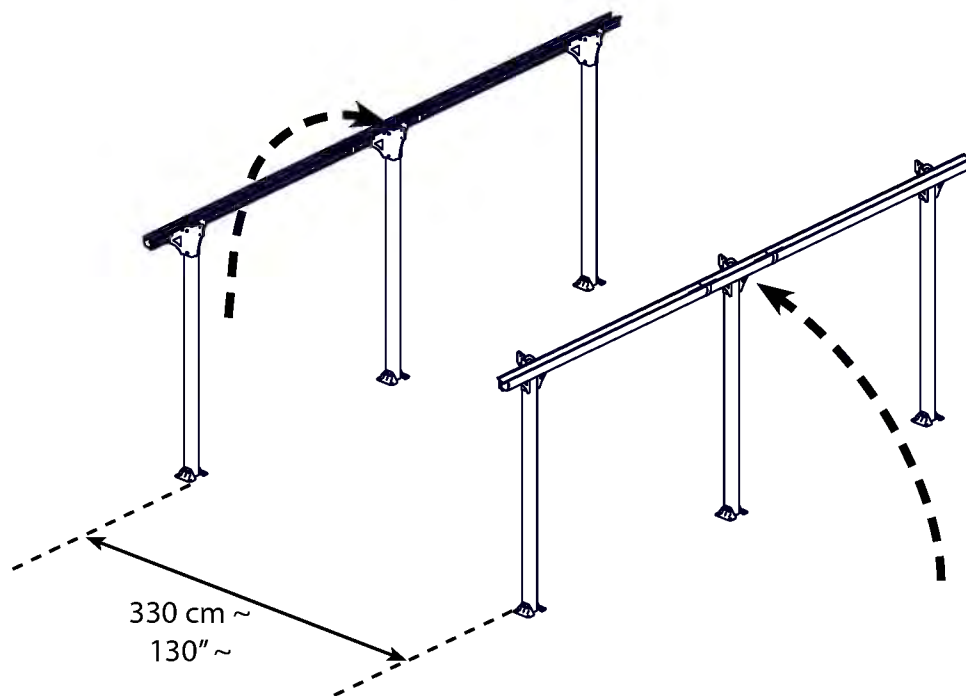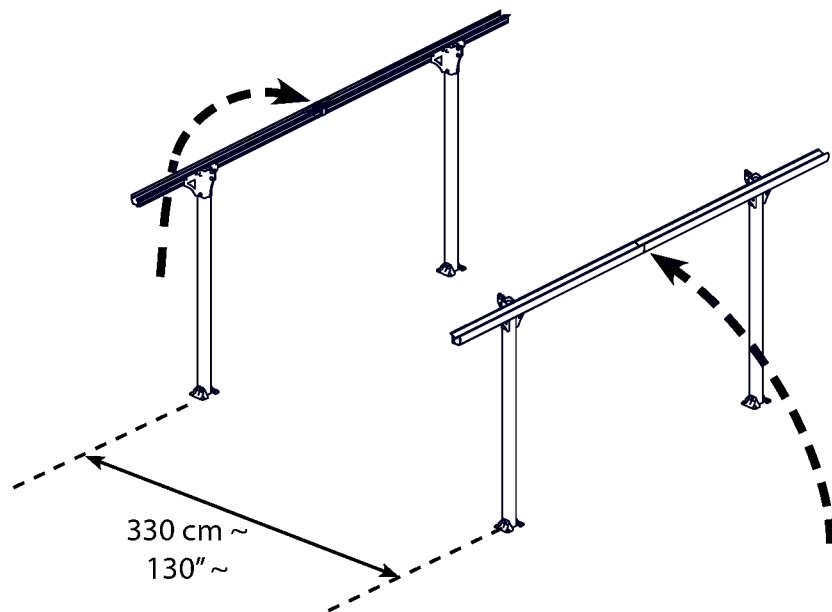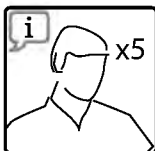
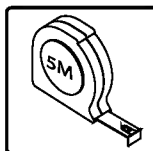


Extension Kits

26



Note the direction of the bows at the products' edges,
do not tighten the screws in drawing b.




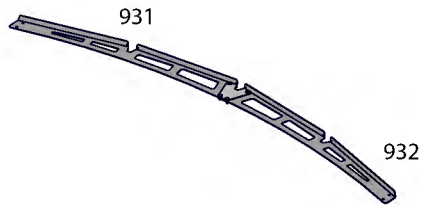
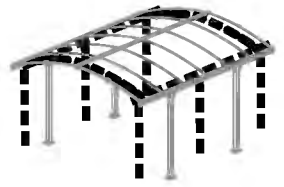


..... 2

4038 8

7121 8

426 16

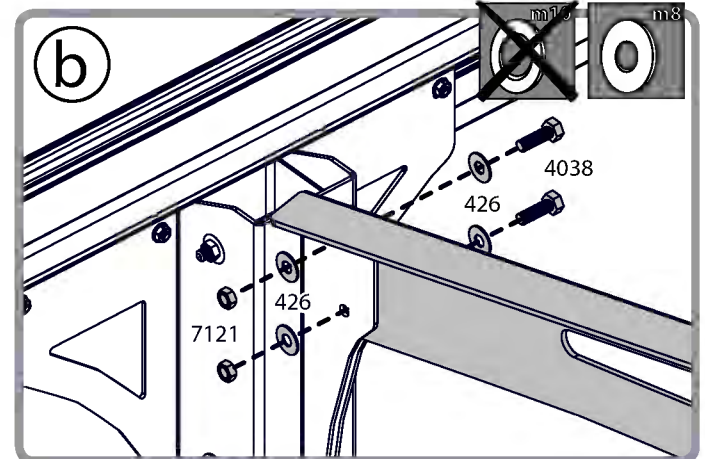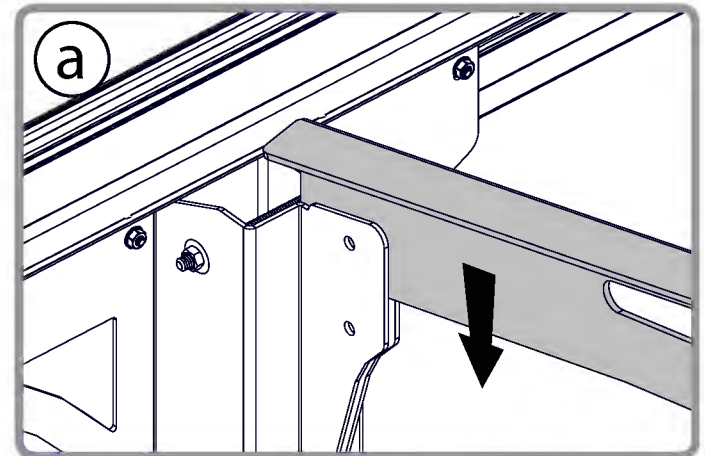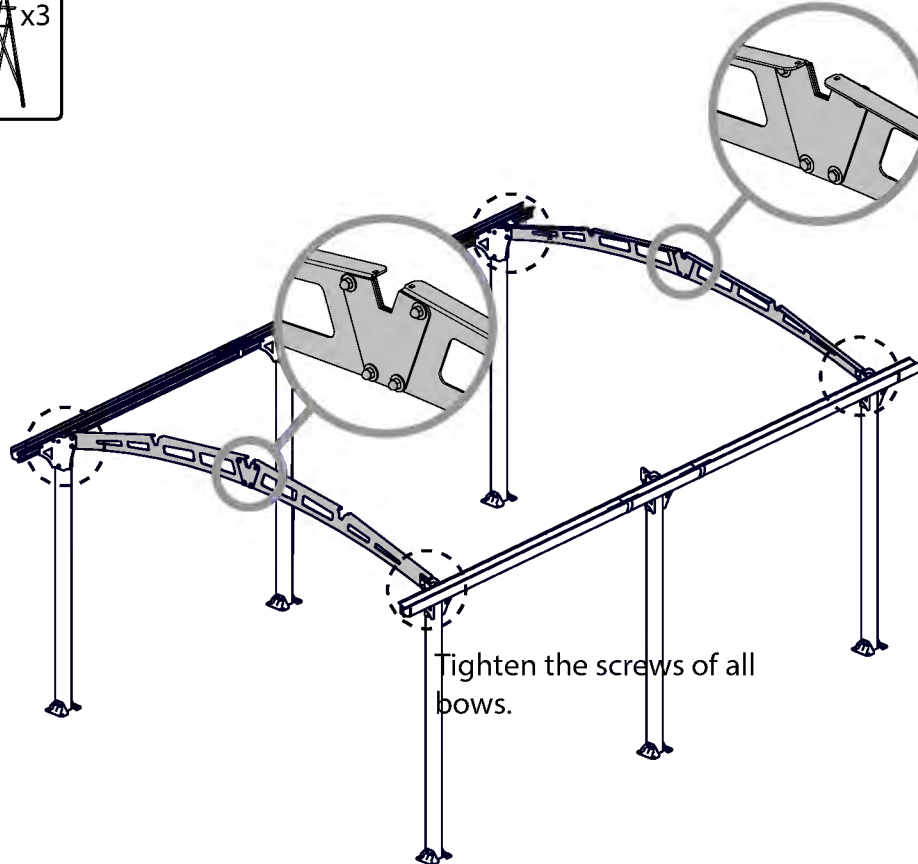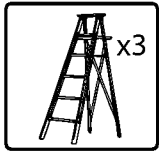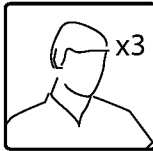

27




Tighten the screws of all bows.

0.7 Extension Kit

2.1 Extension Kit

For Extension Kits






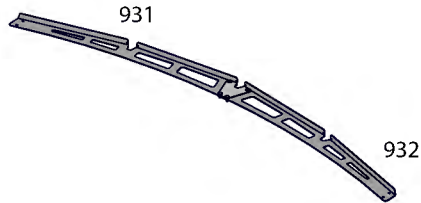



..... 3

4038  4




7121  4

426  8

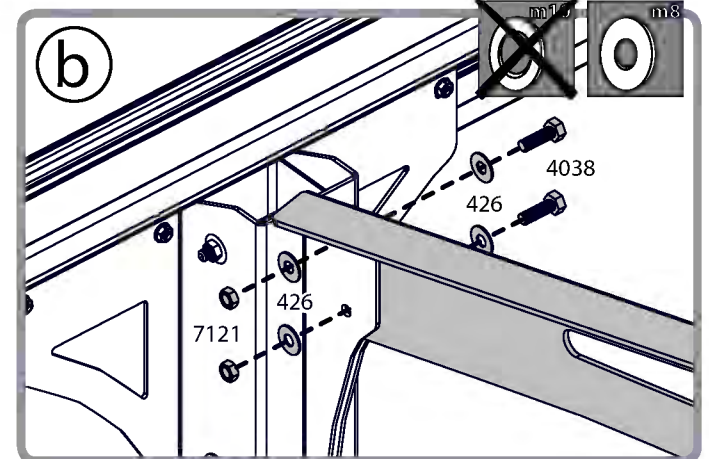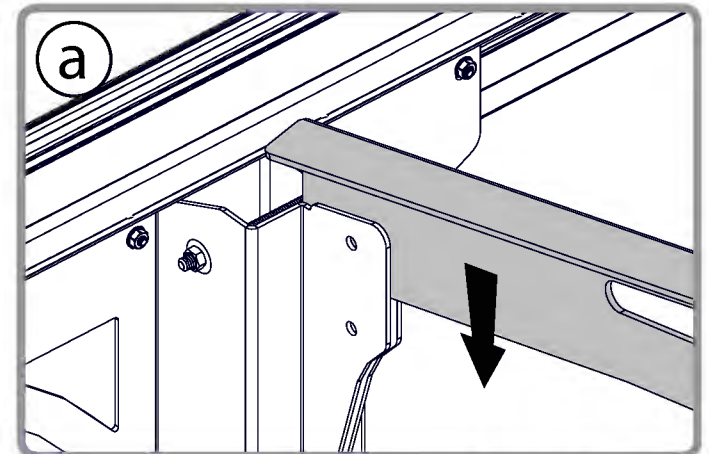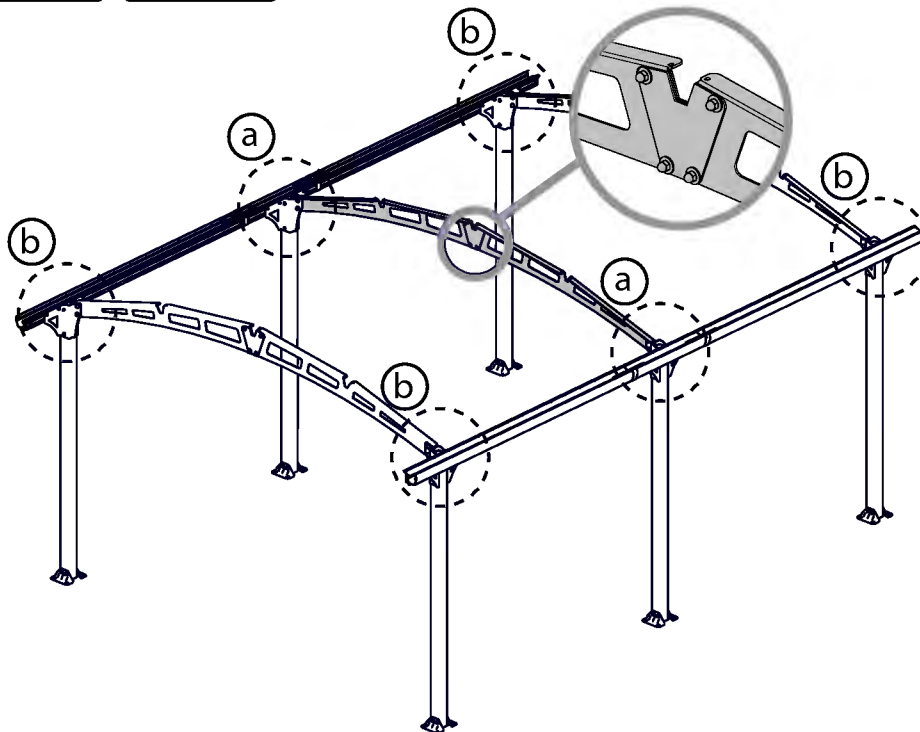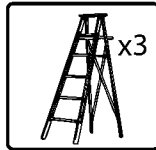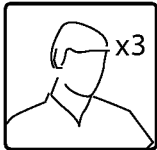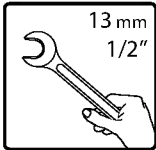

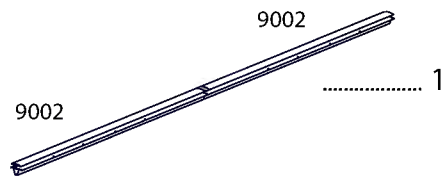


x2

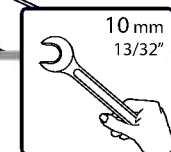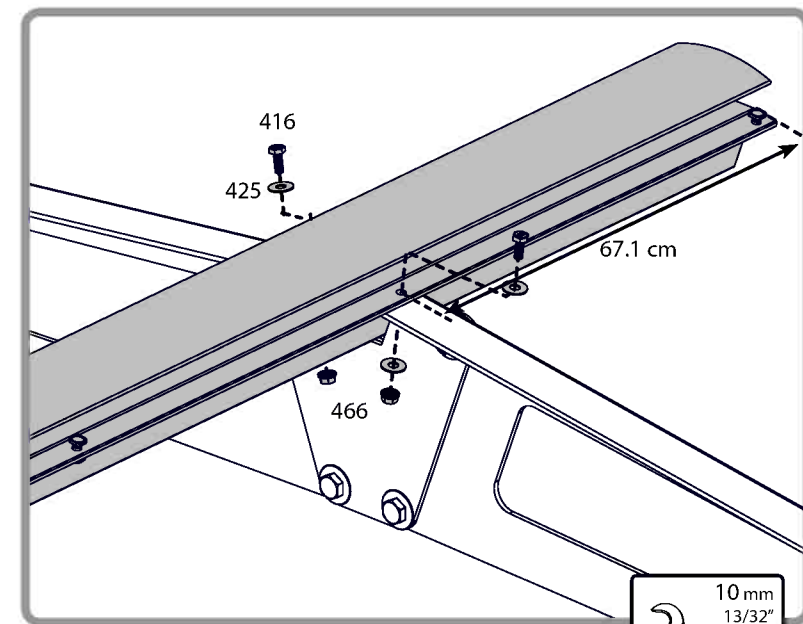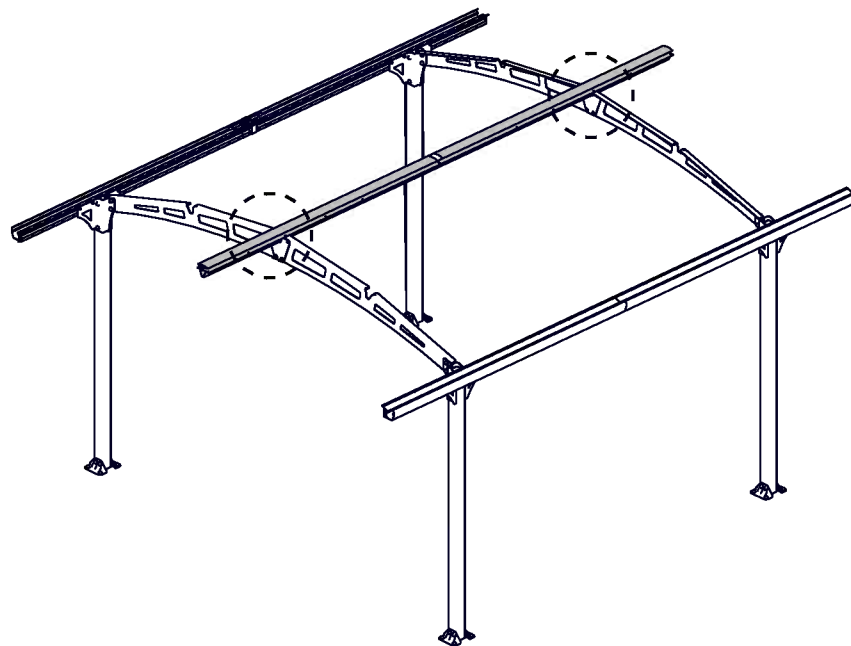

10 mm
13/32"

29 For Extension Kits



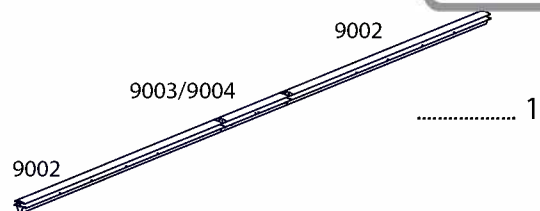






..... 1

416  6

466  6

425  6

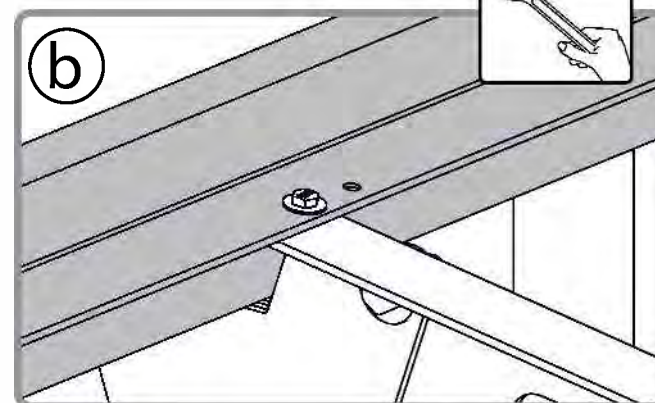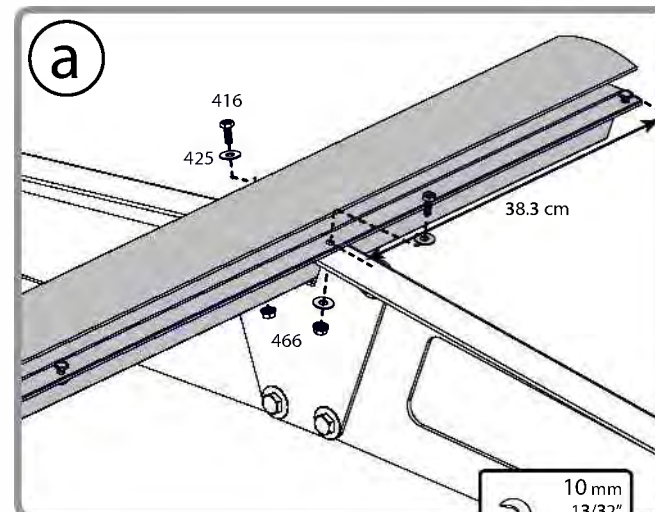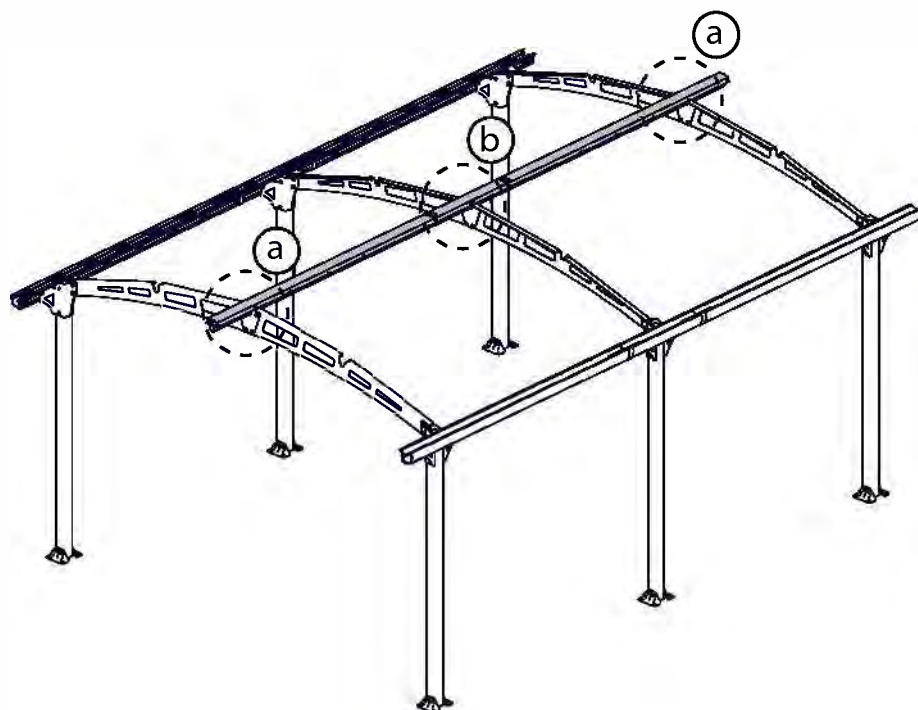

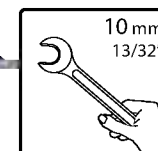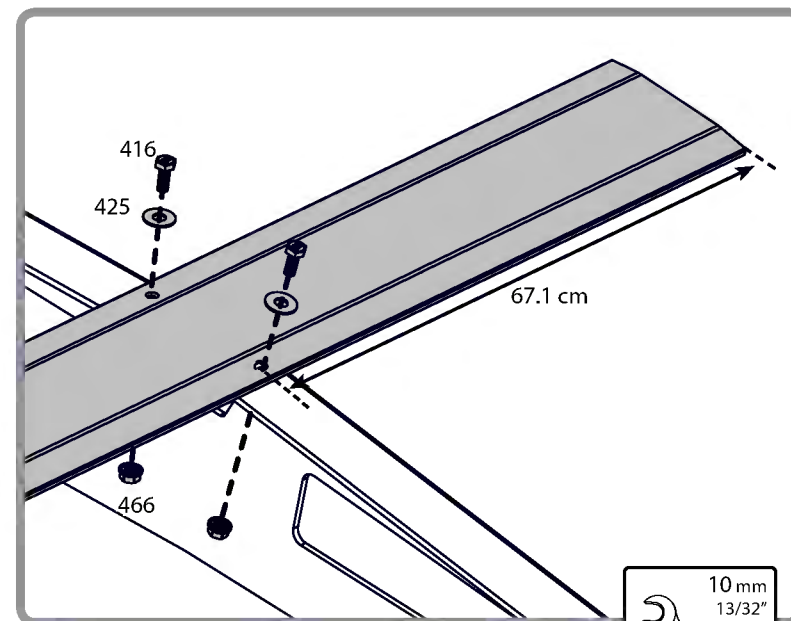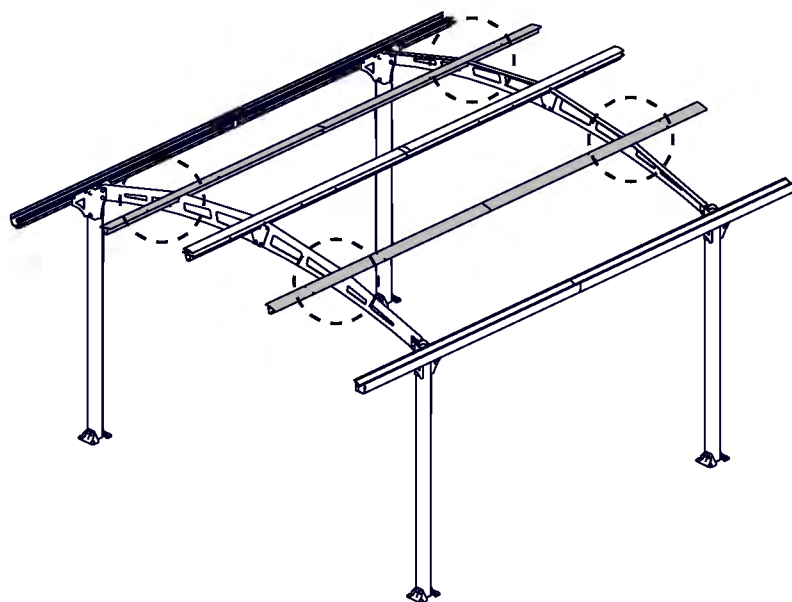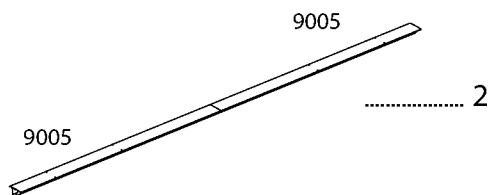



31 For Extension Kits



0.7 Extension Kit






2.1 Extension Kit


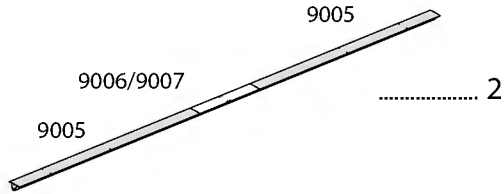
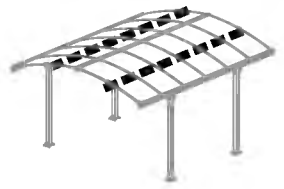


416 12

466 12

425 12

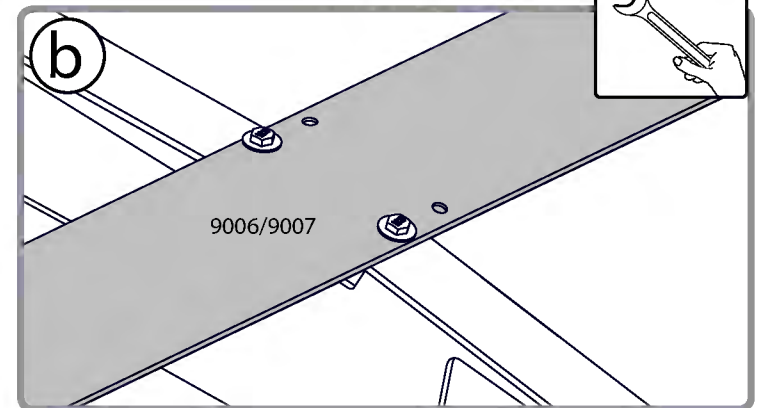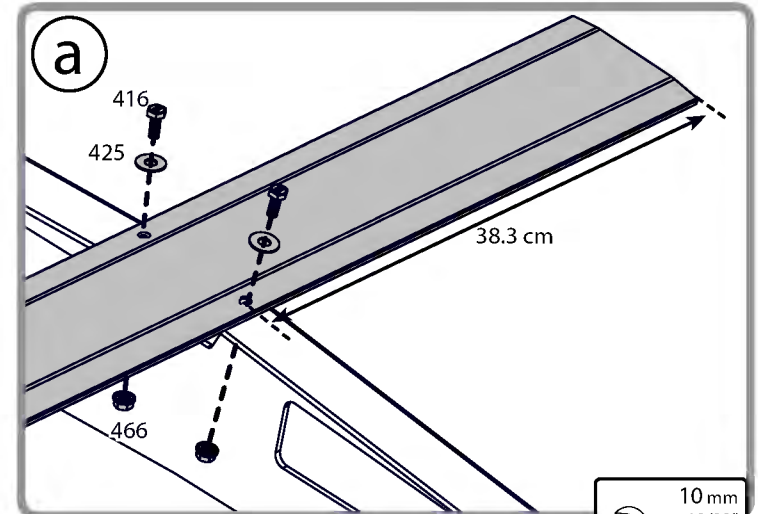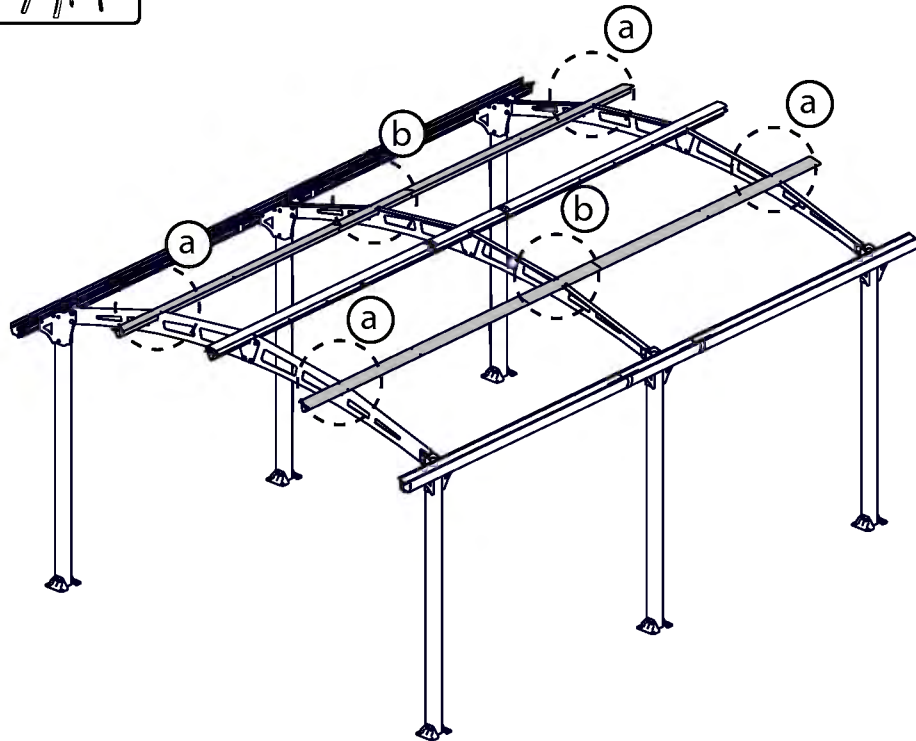

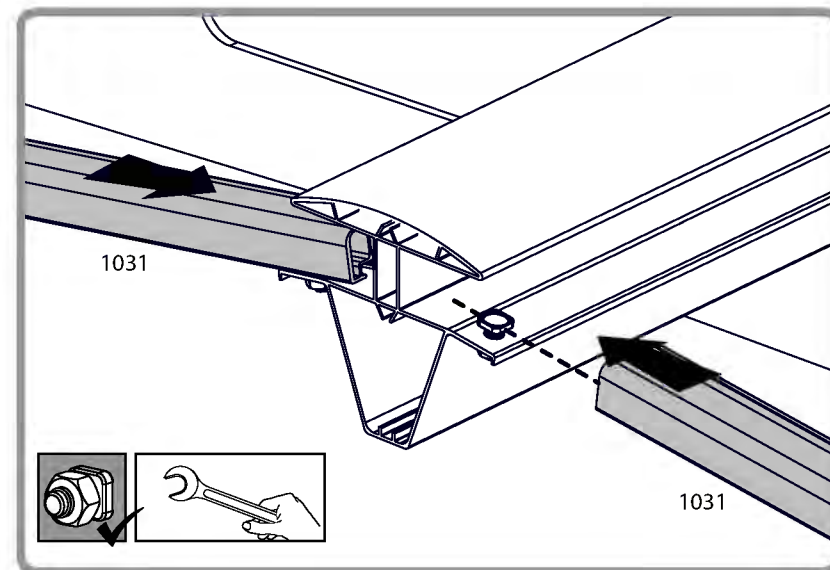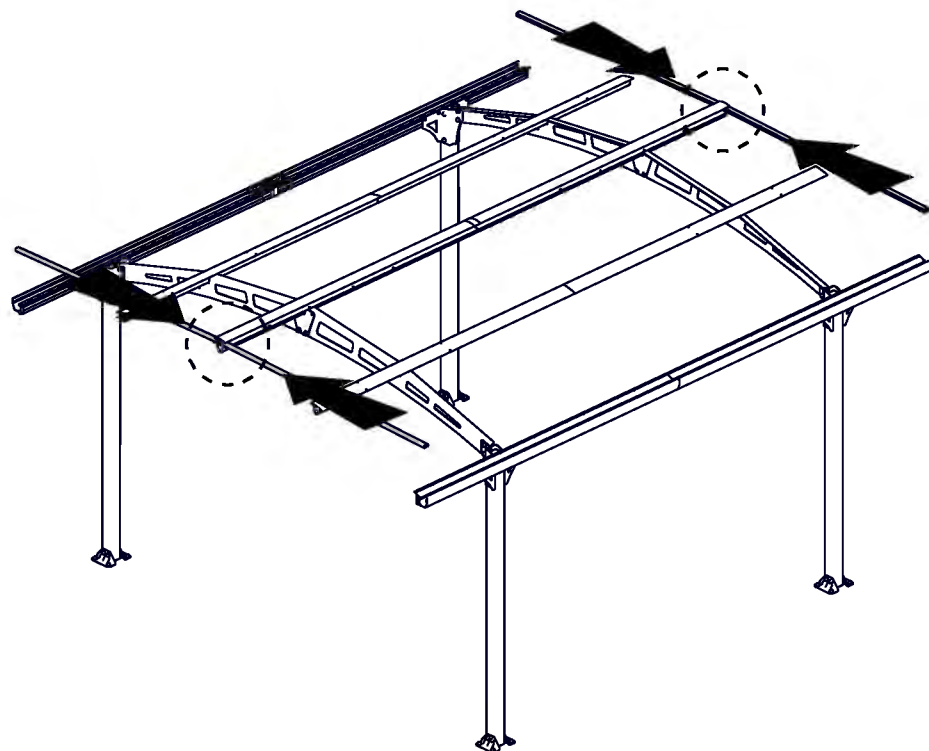
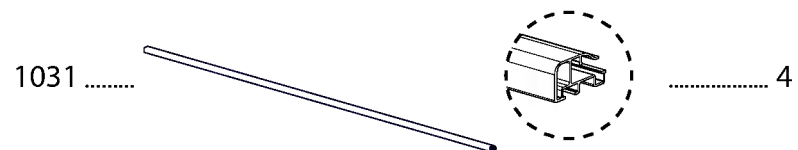




1032+2




1032+6

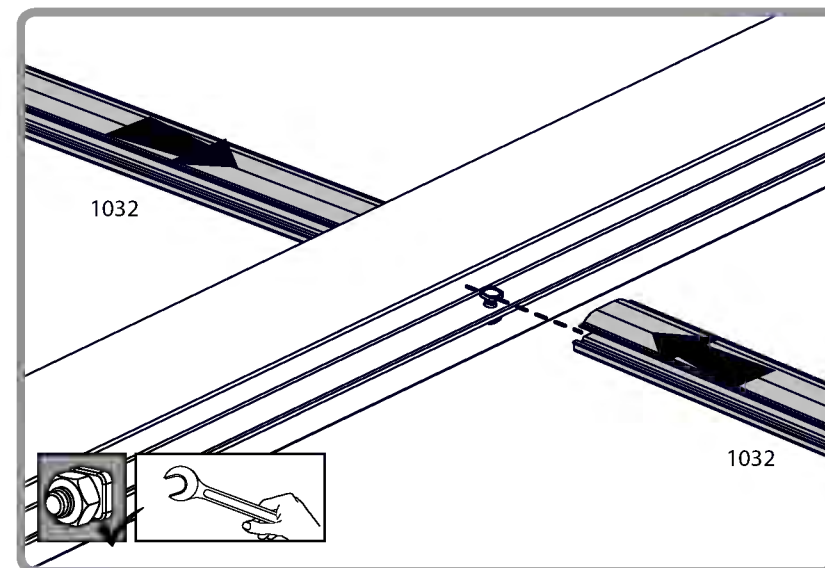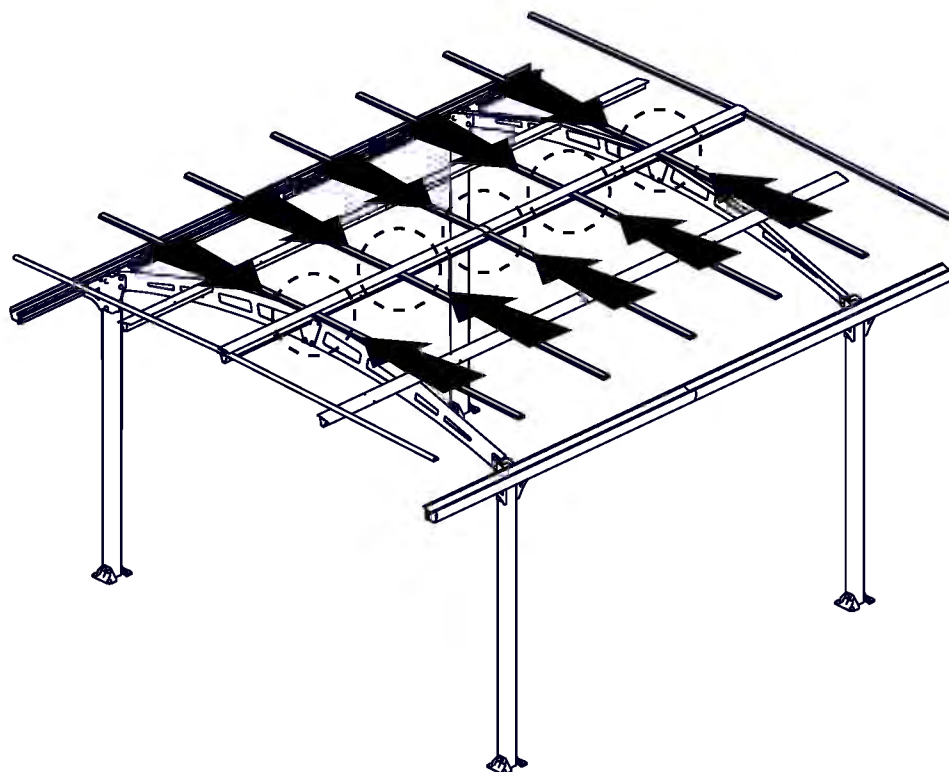



9217

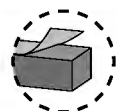



.....12



9217+2




9217+6

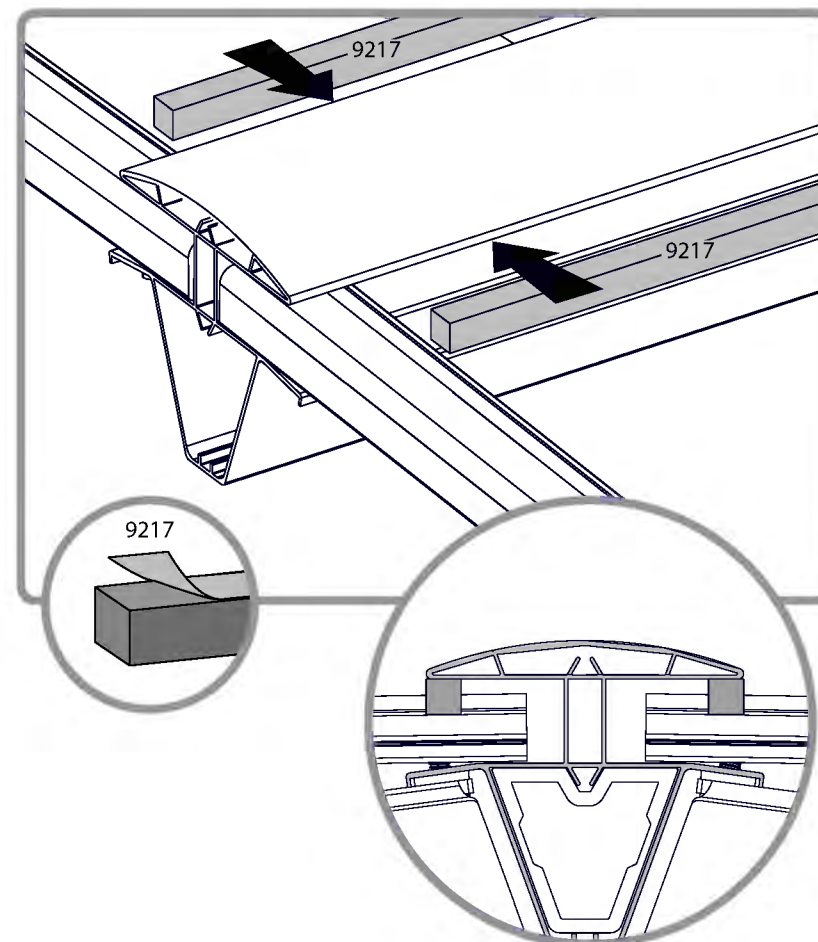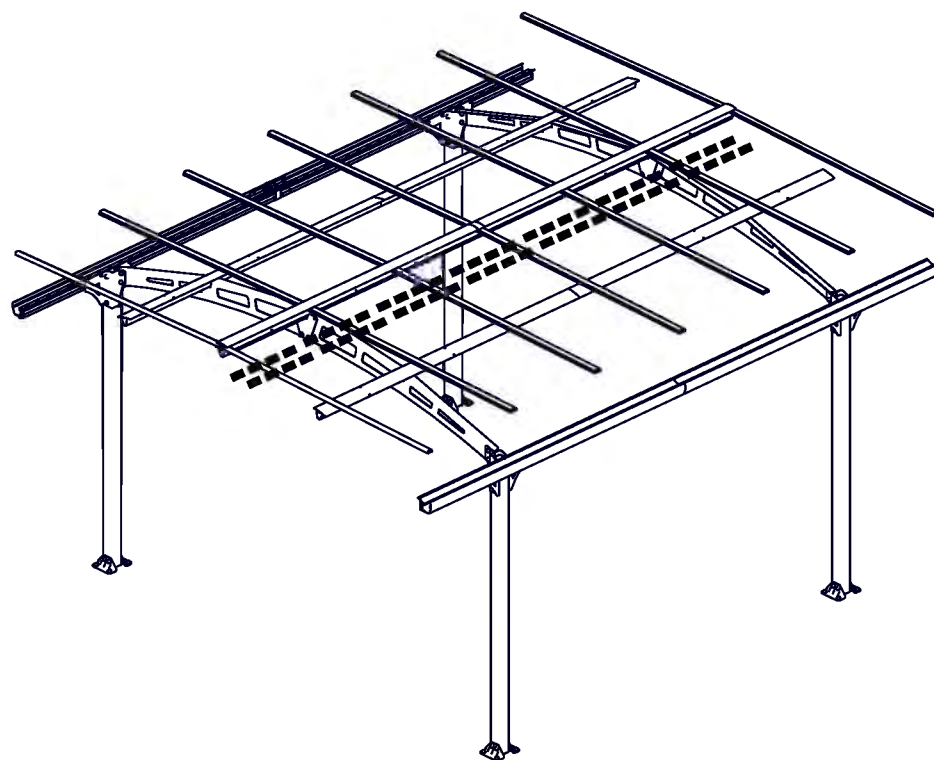

35  Make sure all panels are placed with the "THIS SIDE OUT" sticker facing up .
Make sure the panels are inserted all the way into the profile in the middle.



9087

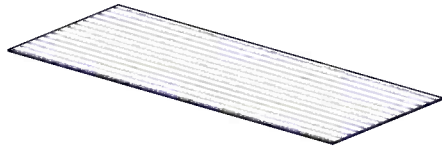

.....12







0.7 Extension Kit


1032+2



2.1 Extension Kit

1032+6

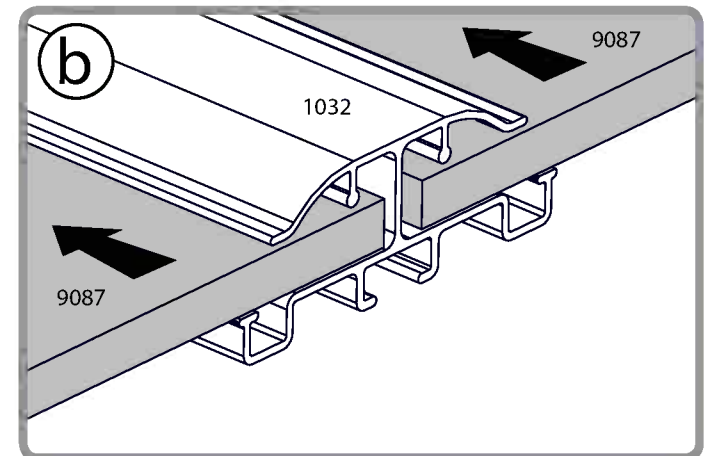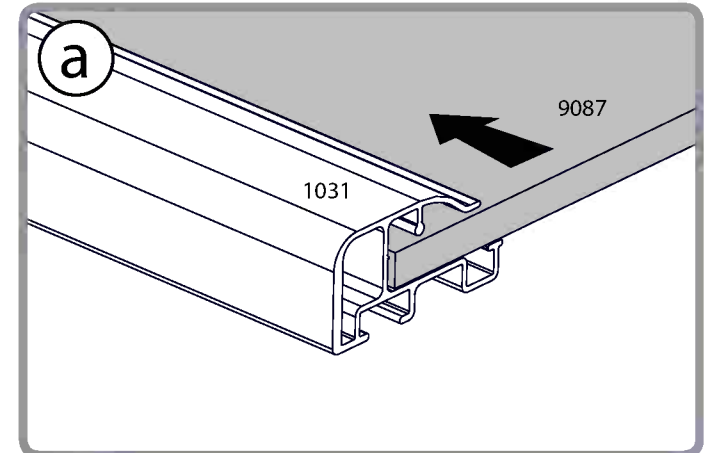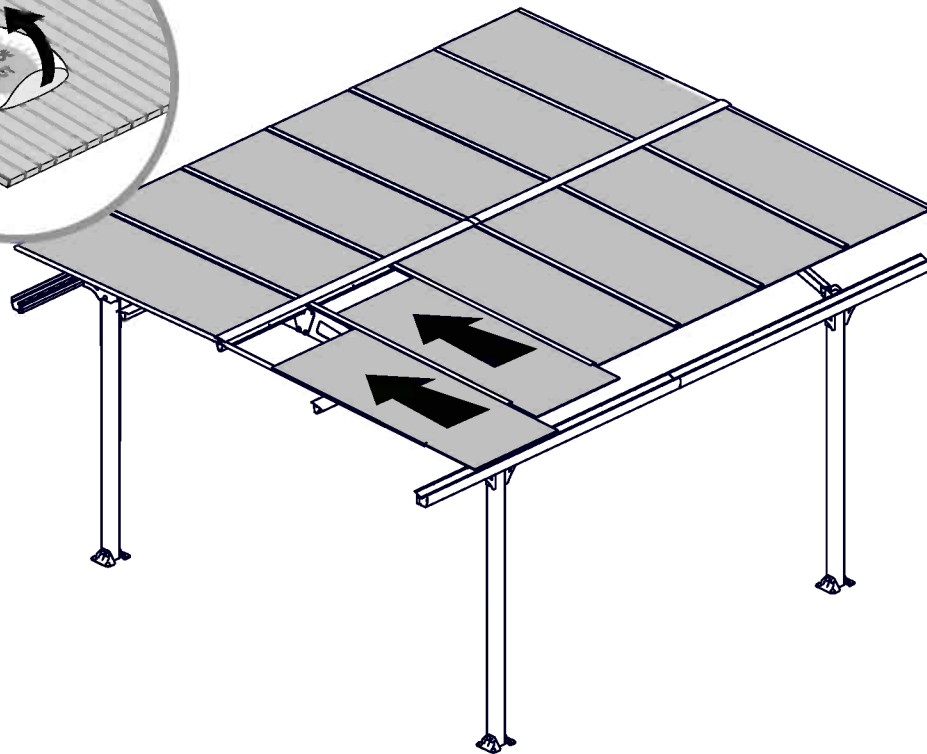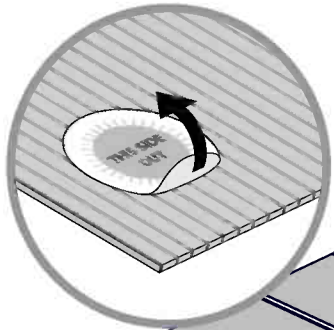


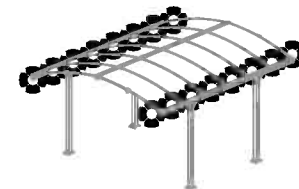




8192 14 466 14








8192+2
466+2

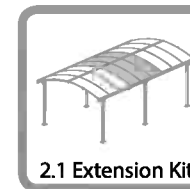

8192+6
466+6

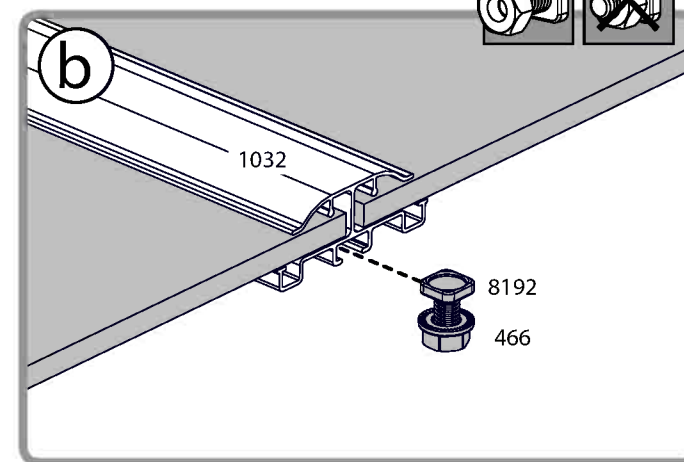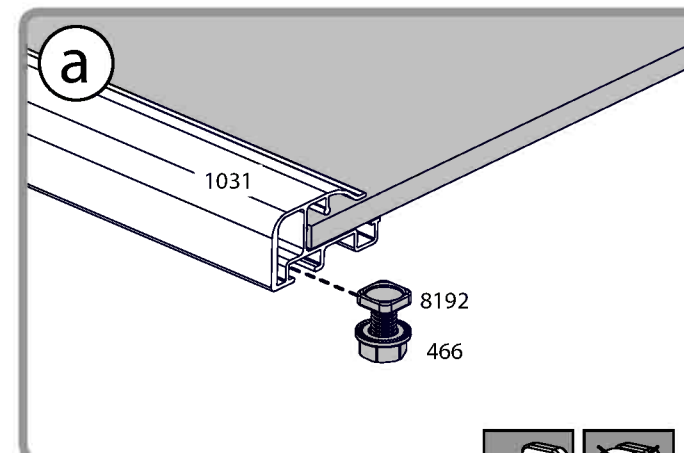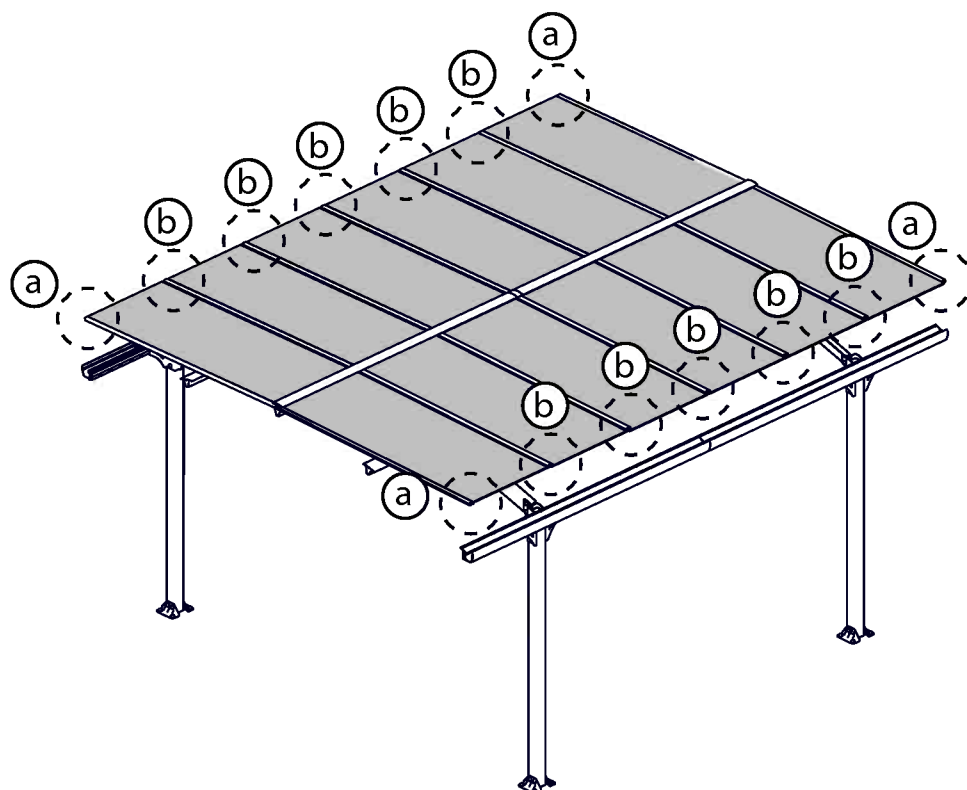


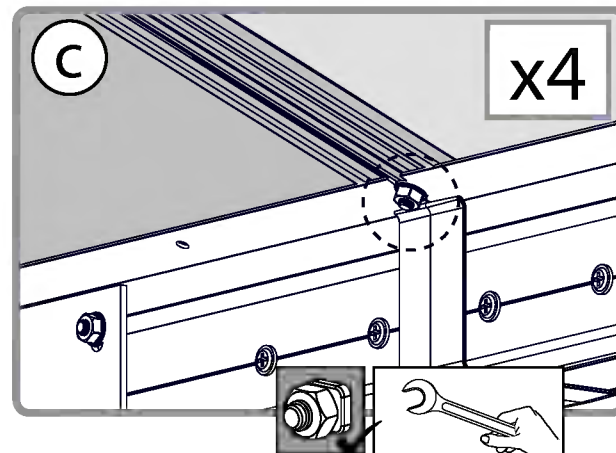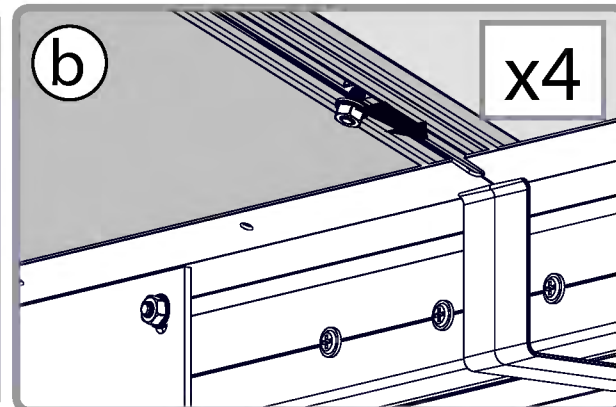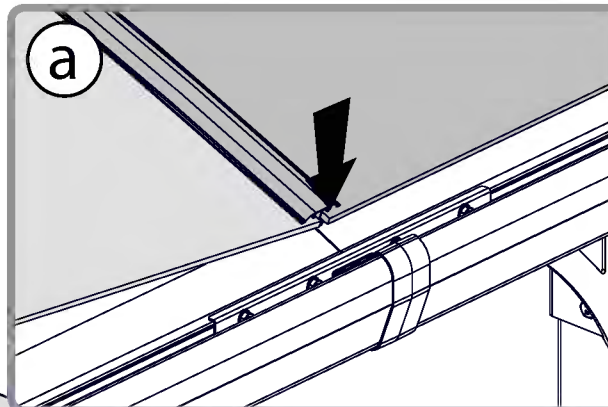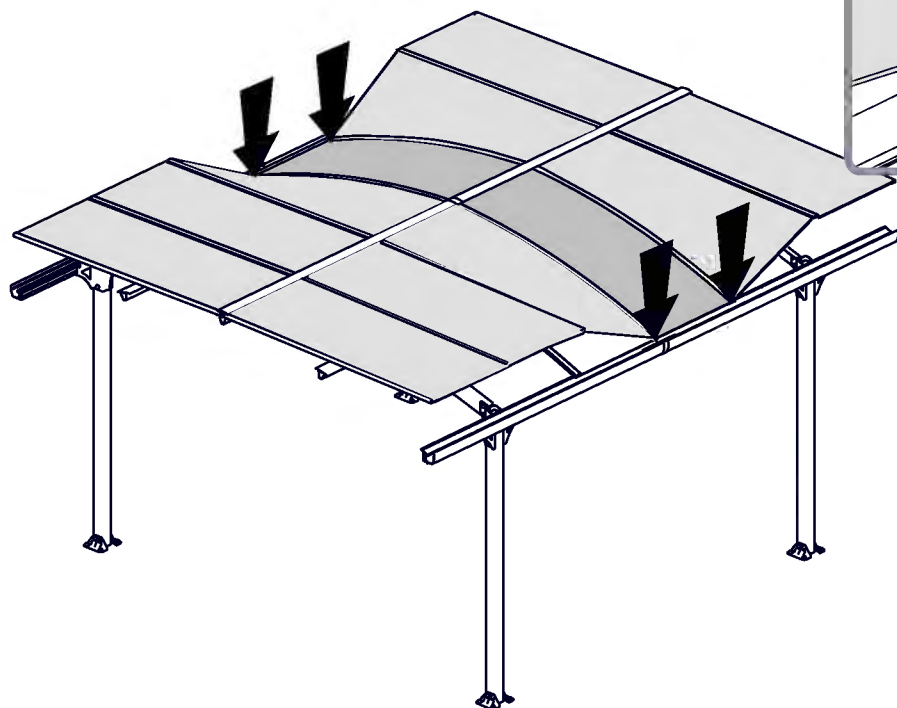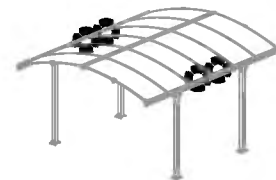

38



Make sure the edge profiles are in line with the longitudinal beams, see drawing c.

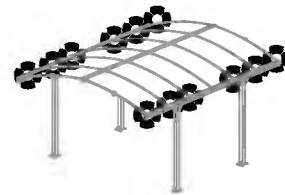





x12




x16



x2

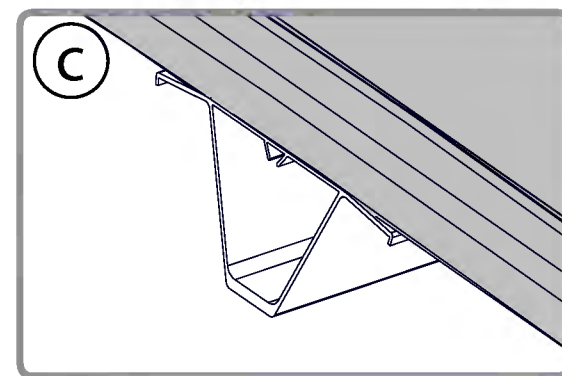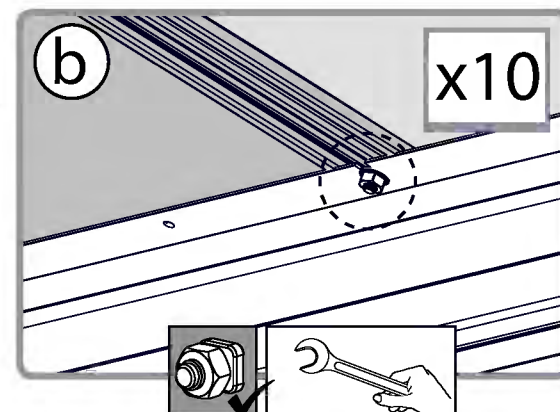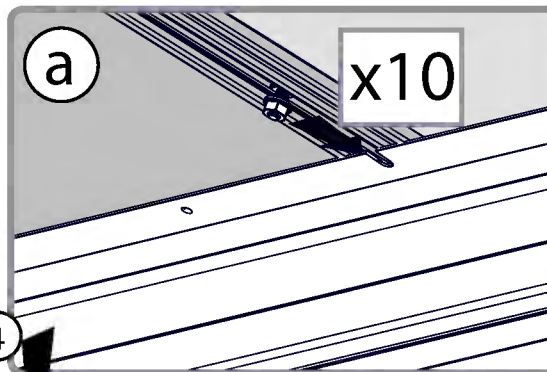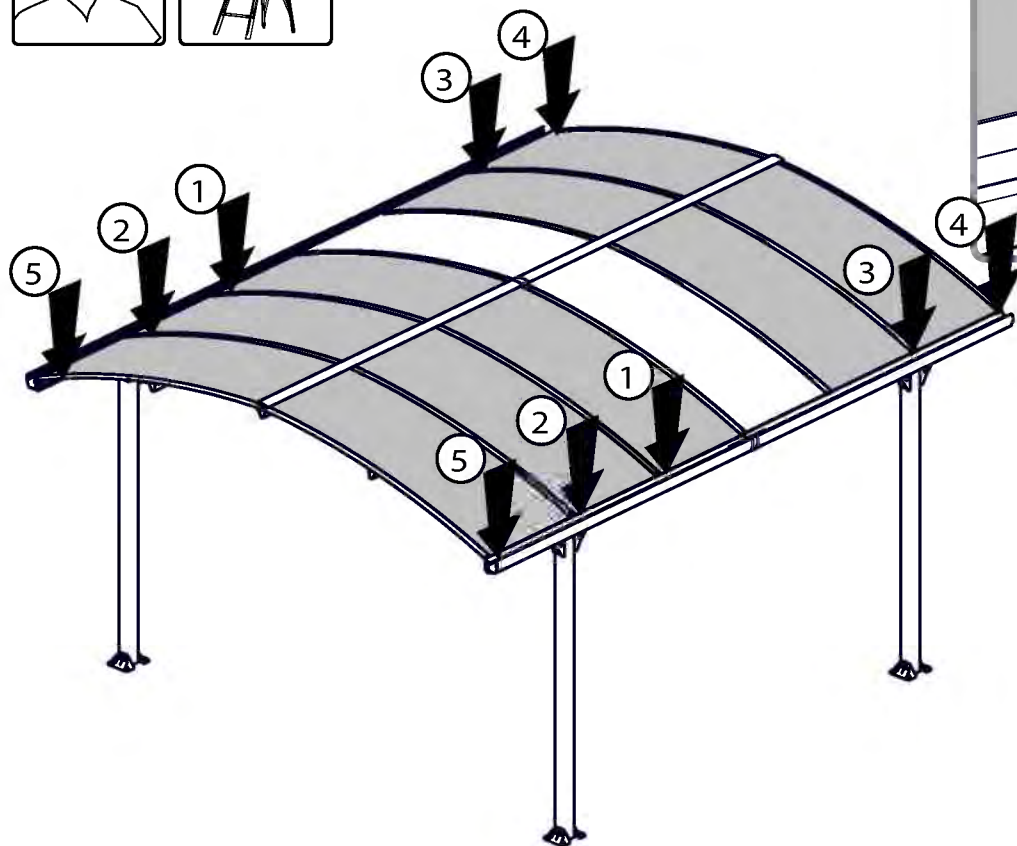

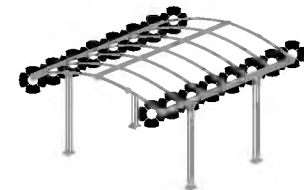







421 48 427 48 7024 48




7024+8
427+8
421+8



7024+24
427+24
421+24

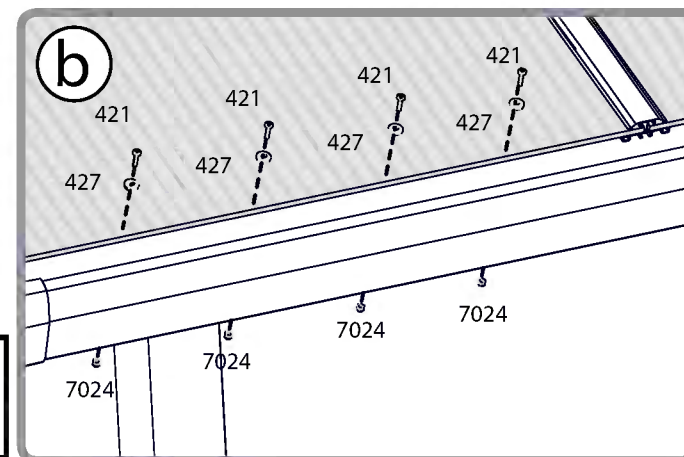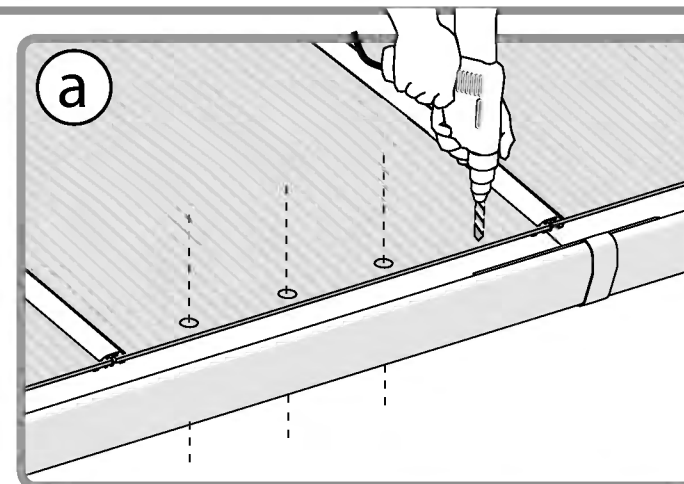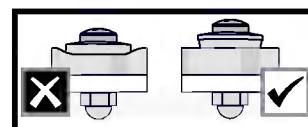
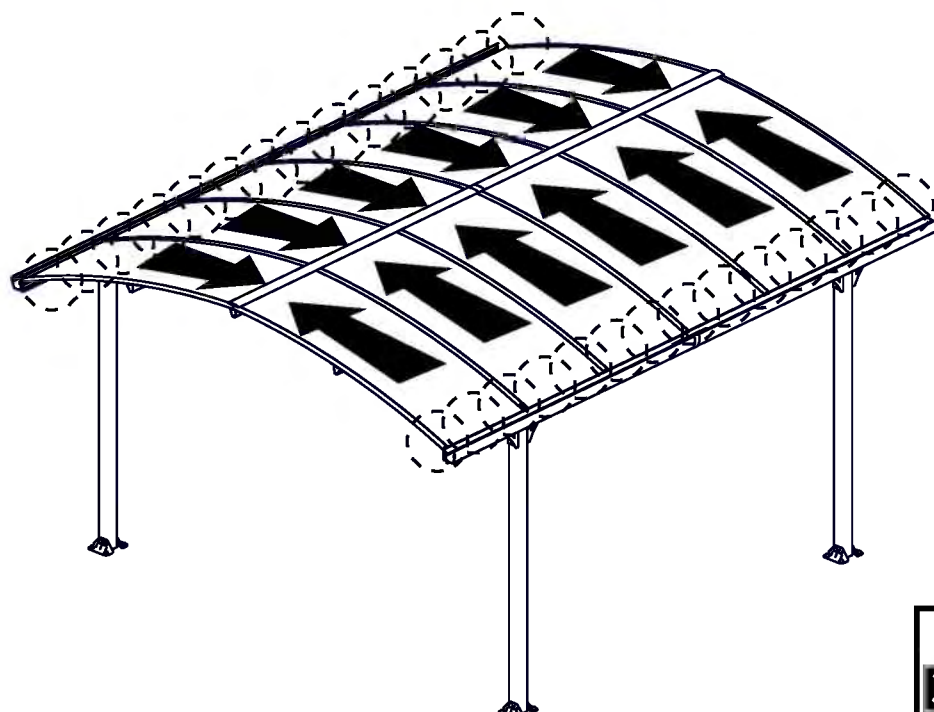
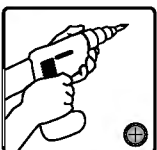
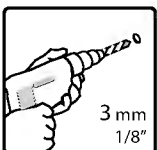


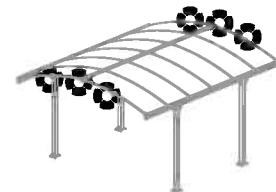


8970 6









447 6

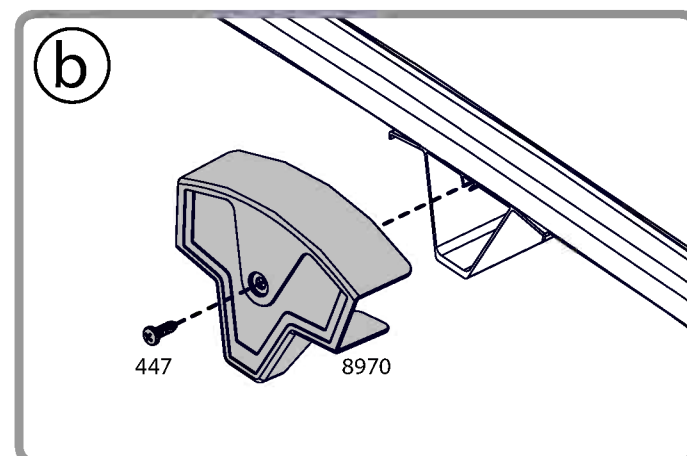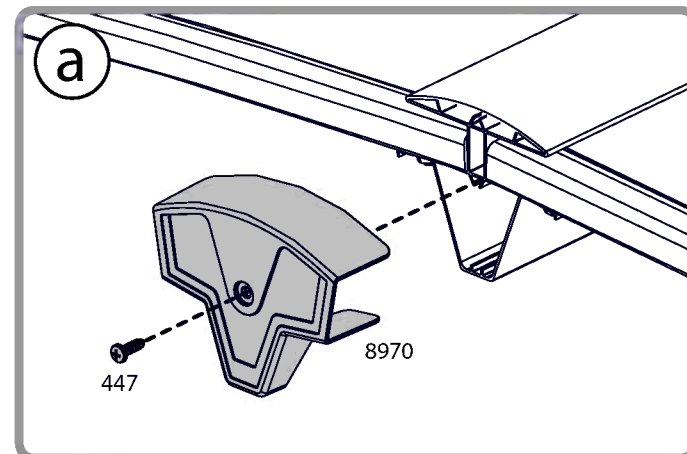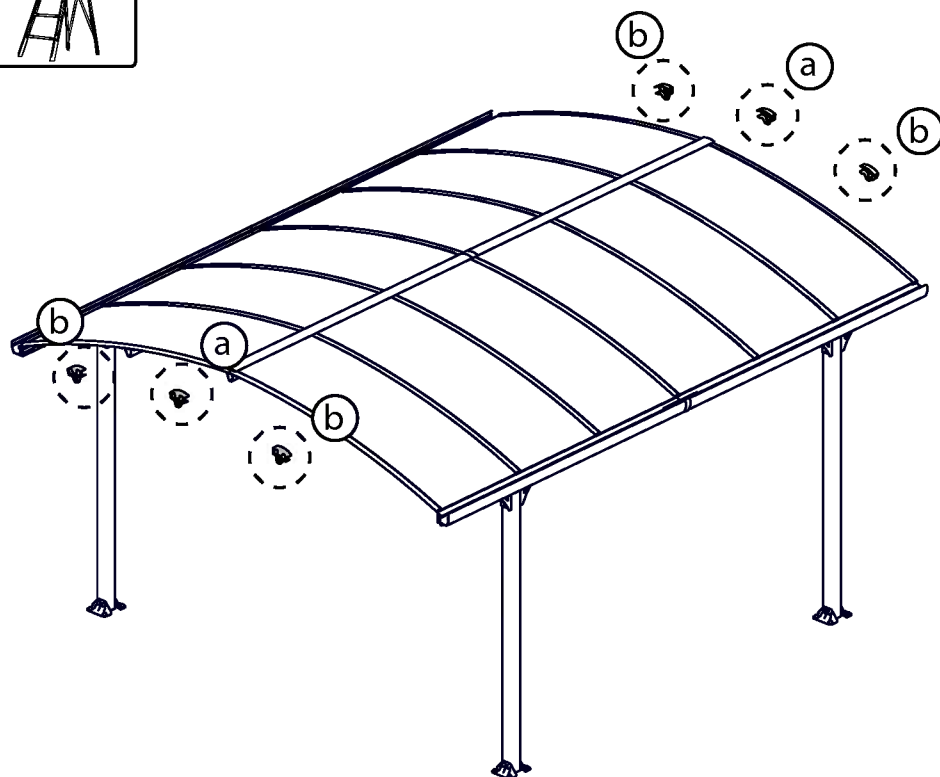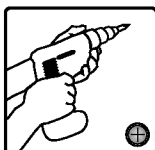

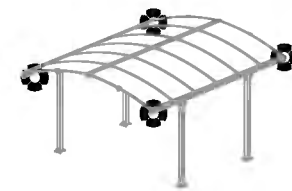

- 8972  2 8971  2 8192  4 466  4

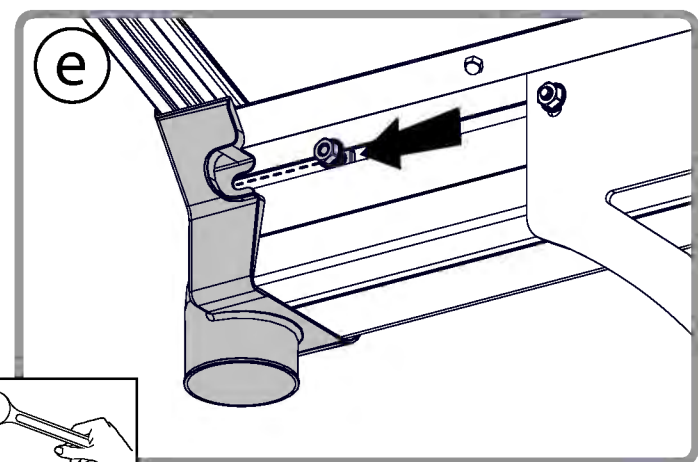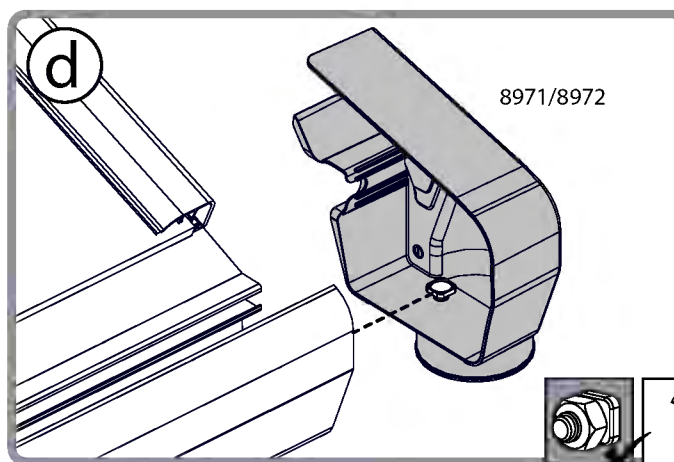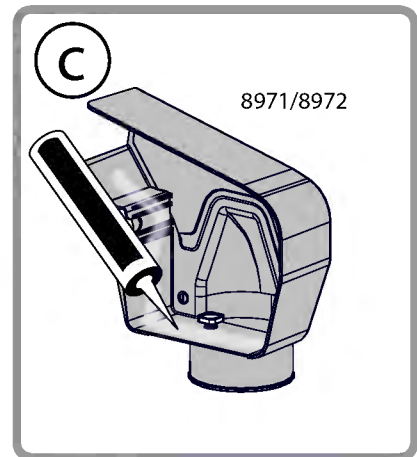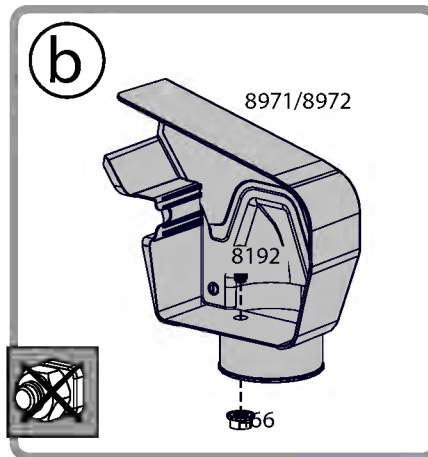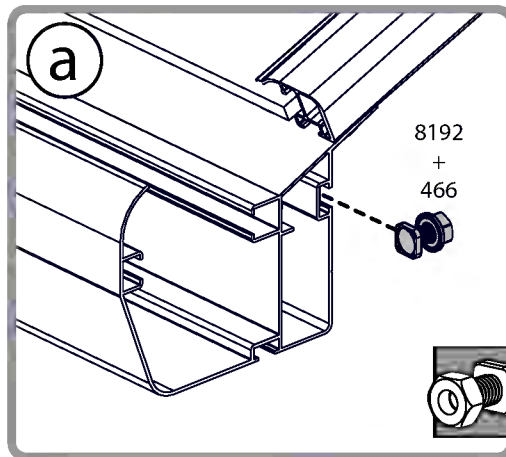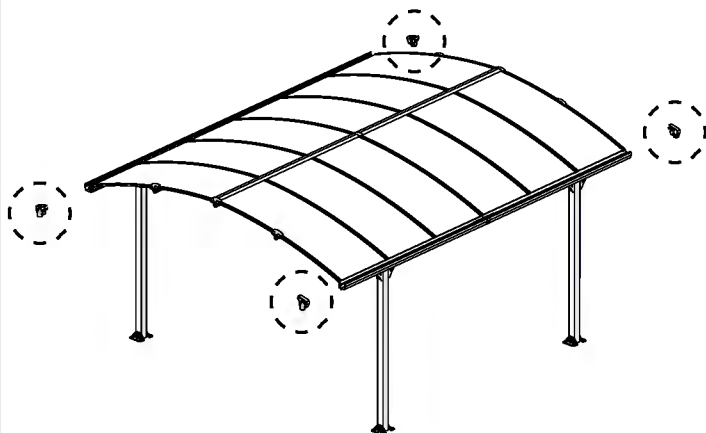


42




Check the product's diagonals and make sure they are identical. Please level the posts and adapt screws and plugs to your specific foundation type.



If you've purchased the Arcadia Alpine Kit, you should refer to their instructions at this

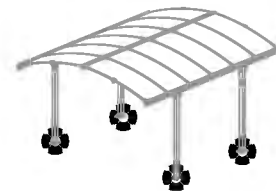


4000

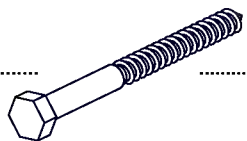

.....16

4010

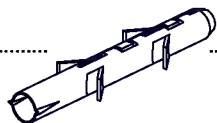

.....16

426



..... 16



2.1 Extension Kit








0.7 Extension Kit


4000+8

4010+8


426+8

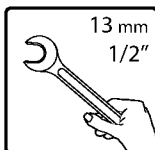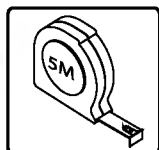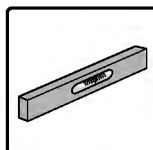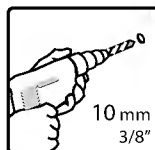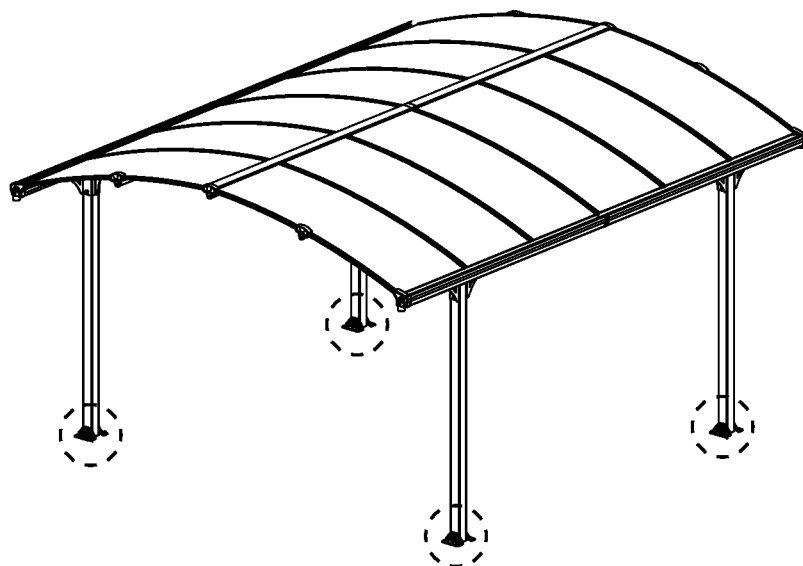13 mm
1/2"10 mm
3/8"

a

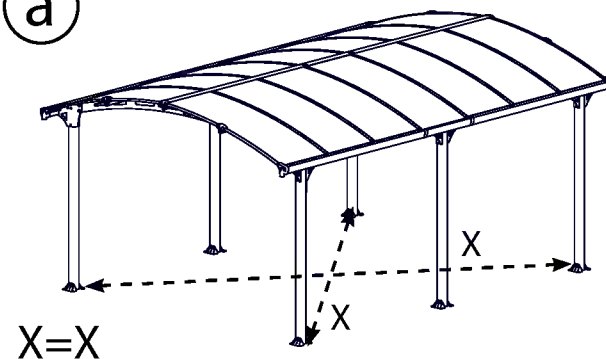

b

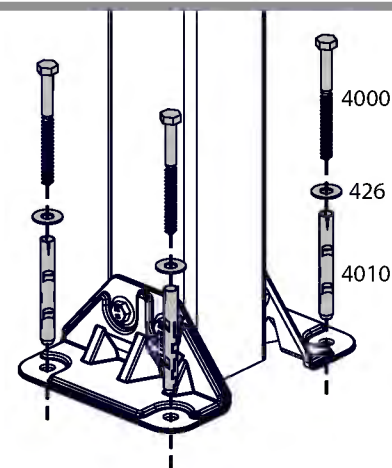



5000 64

5001 68



5001 +24
5000 +32



5001 +26
5000 +32

