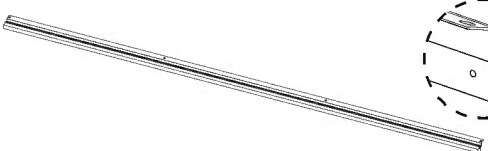
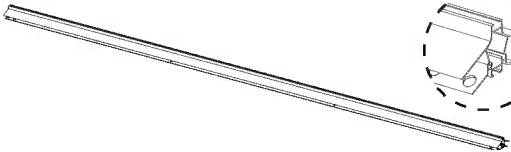




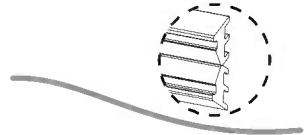















Contents

Item		Qty.
8268		2
8269		6
9823		1
9737		4
9736		6
9804		2
8258		4
9803		2
9805		1






Item		Qty.
7725		2
8263		1
8264		1
8265		1
8266		1
9806		2
8259		4
9824		2


Item		Qty.
9227		6 (+2)
9922		4
9808		2
7356		4
8480		1
7869		1
9707		2

Contents

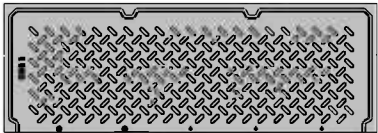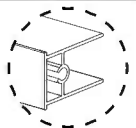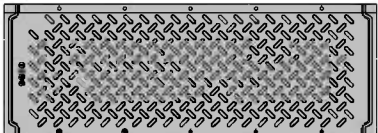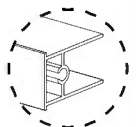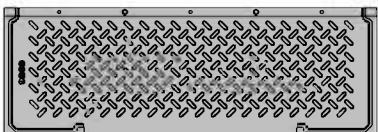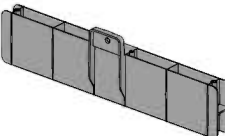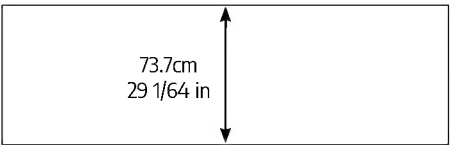


Item		Qty.	Item		Qty.	Item		Qty.
9811		1	8254		1	7726	 	2
9810		1	8255		1	9932	 	2
9809		1	7602		4	9822	 	8
8278		6	8447		3			
9700		9	7981		2			
9826		2	7980		2			
9827		2	7979		2			
9828		2	8468		1			
9829		2	8466		1			
			8465		4			

Contents

Item		Qty.
8192		60 (+6)
7284		8 (+1)
7682		2
421		10 (+1)
7441		10 (+1)
7442		72 (+7)
7444		26 (+1)
8422		10
4009		10 (+1)
9819		12 (+1)
4010		12 (+1)






Item		Qty.
466		66 (+4)
8050		2
422		10 (+1)
7175		10 (+1)
7524		8 (+1)
9708		6
4008 Silver		4
4008 Black		8






TORX T40	
-------------	---


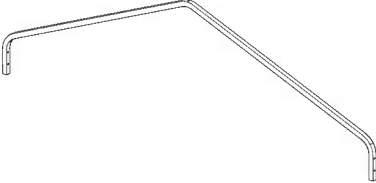


Item		Qty.
9825		2
9735		2
8104		2








7441 10 4009 10

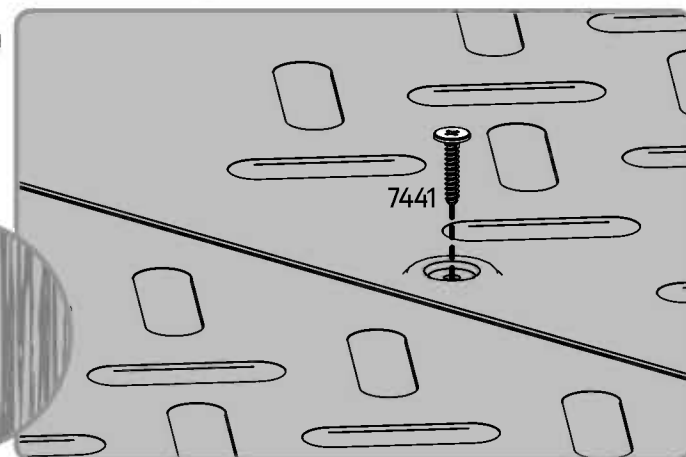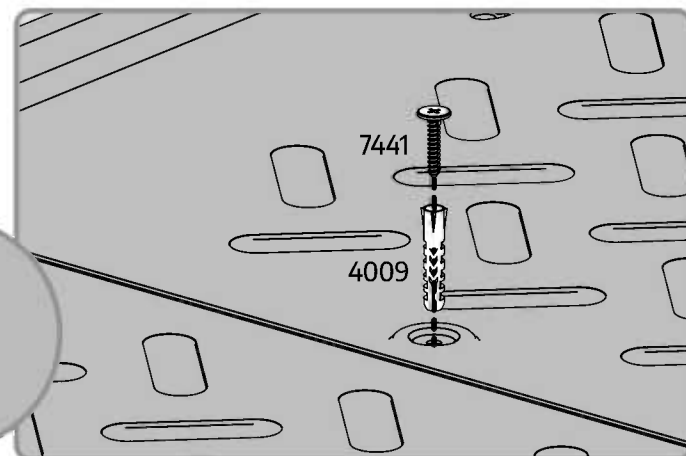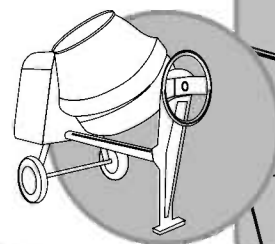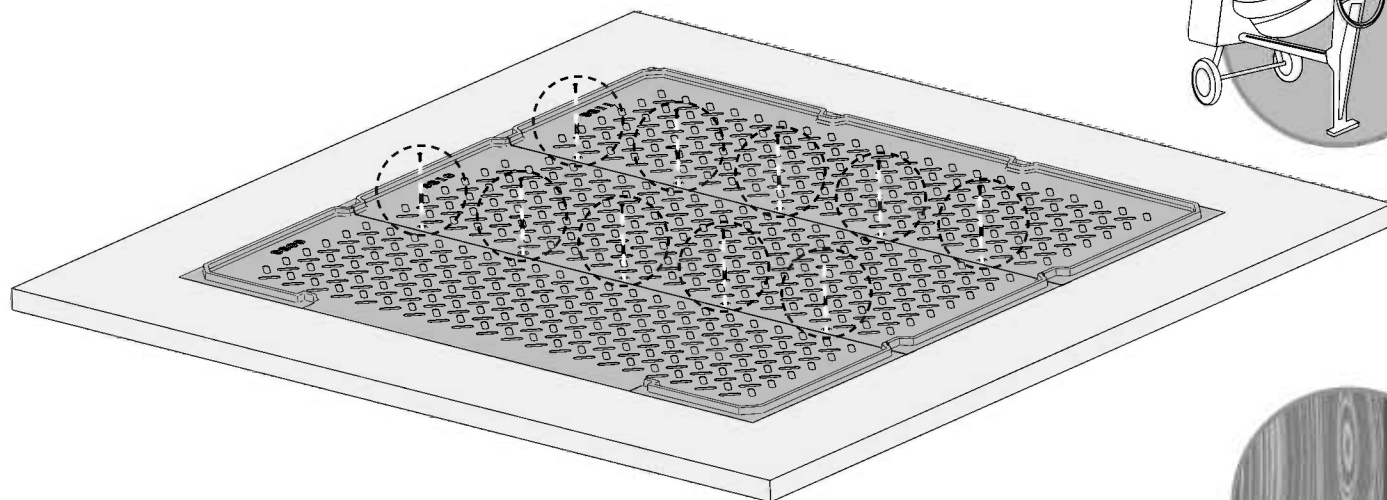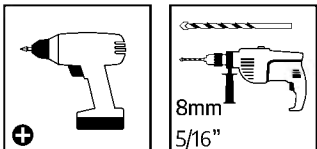


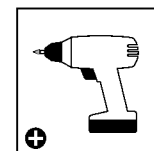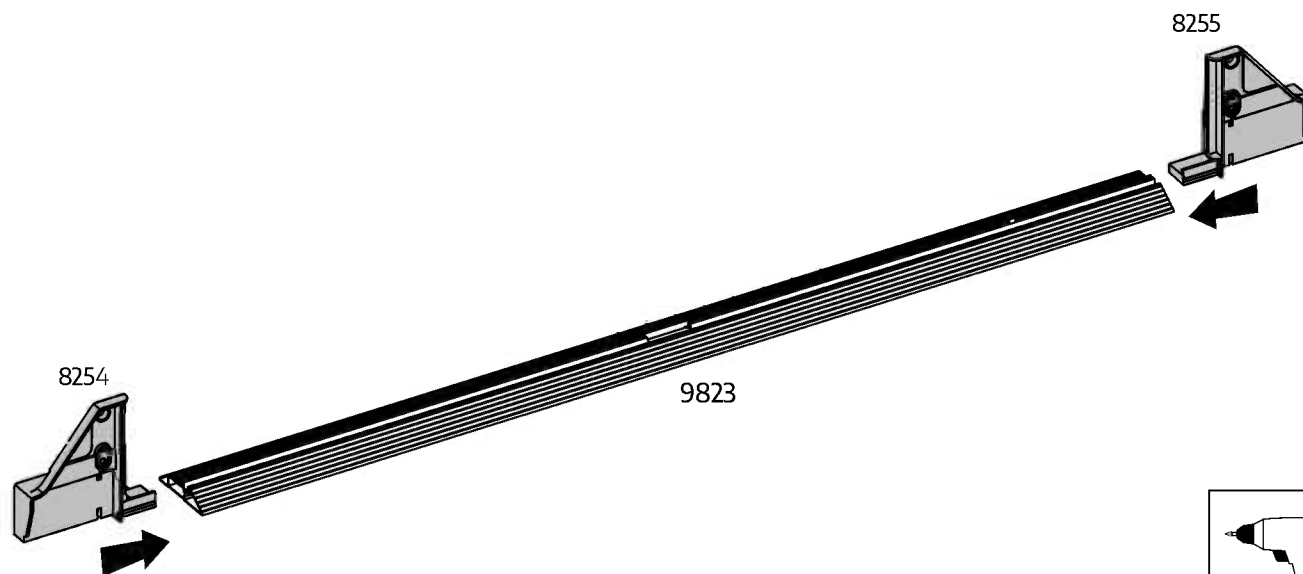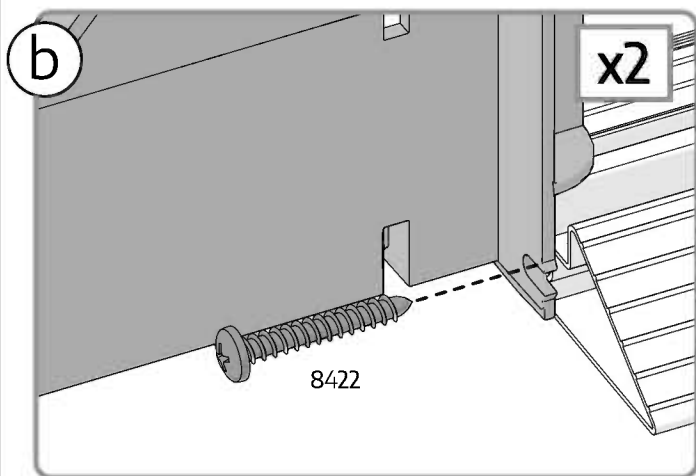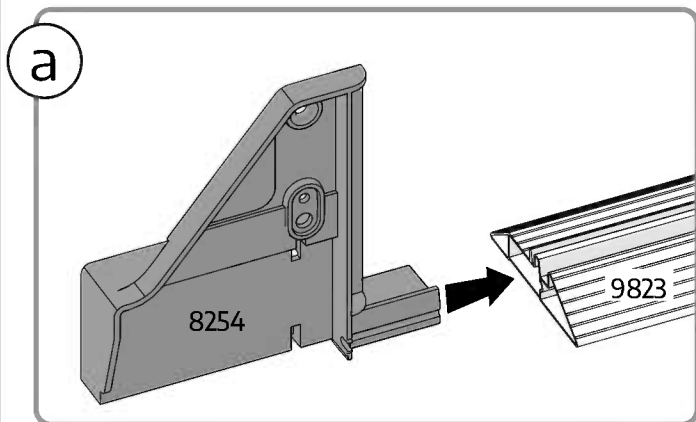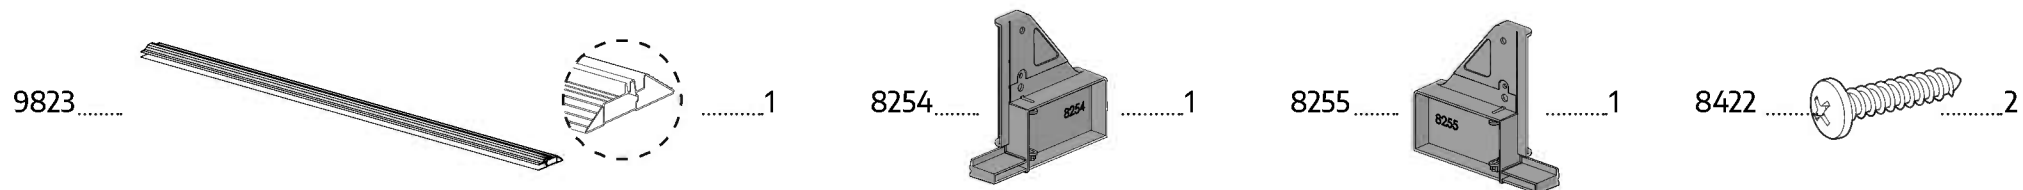

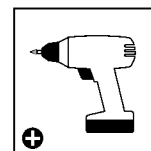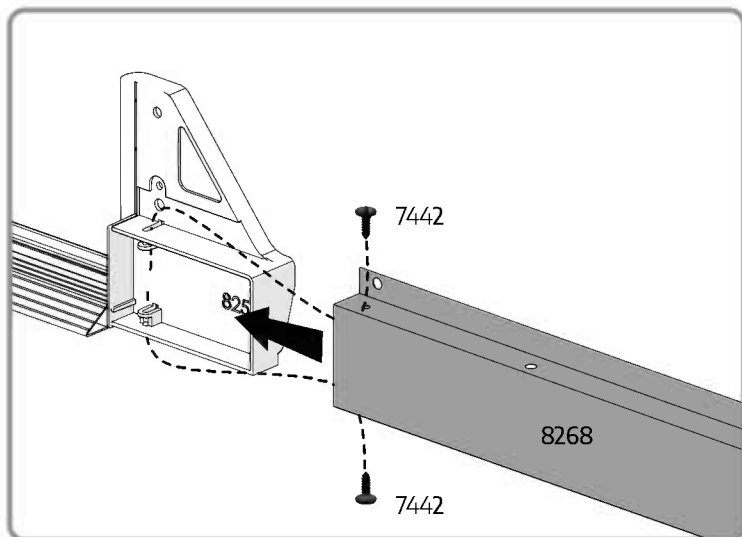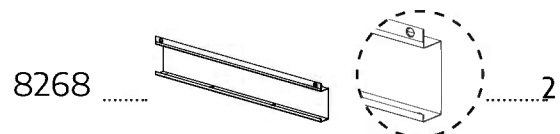


5

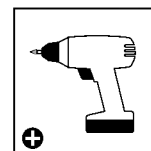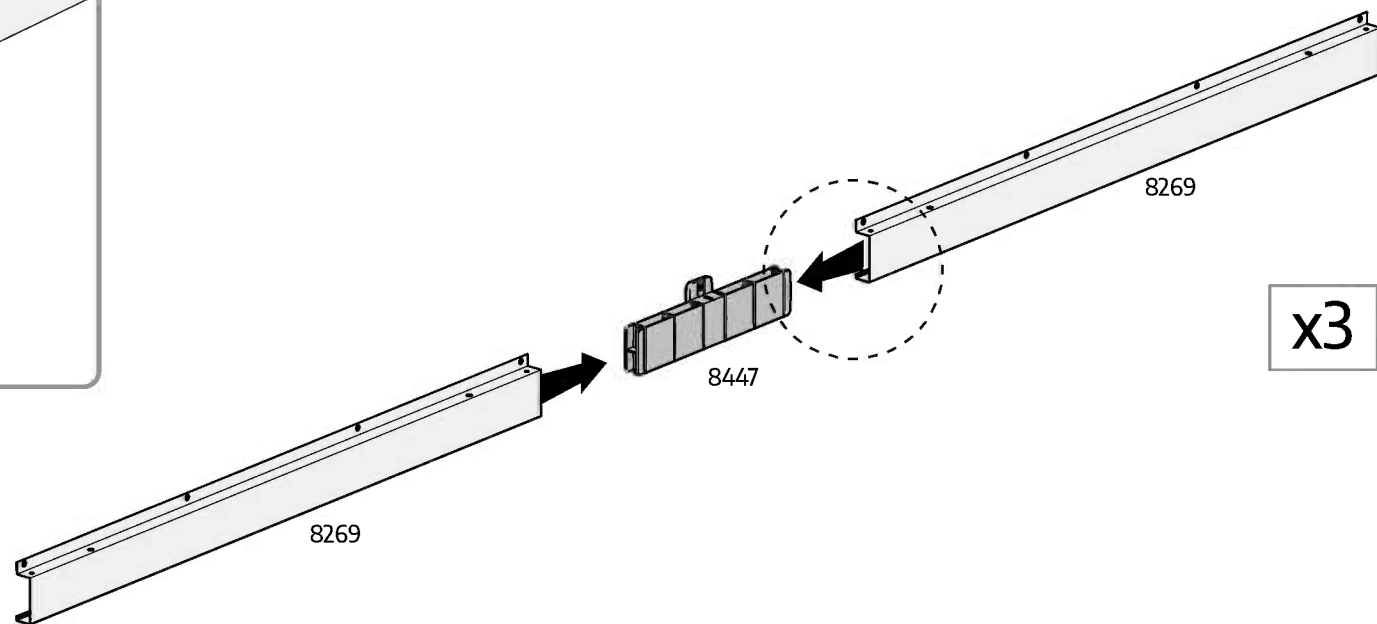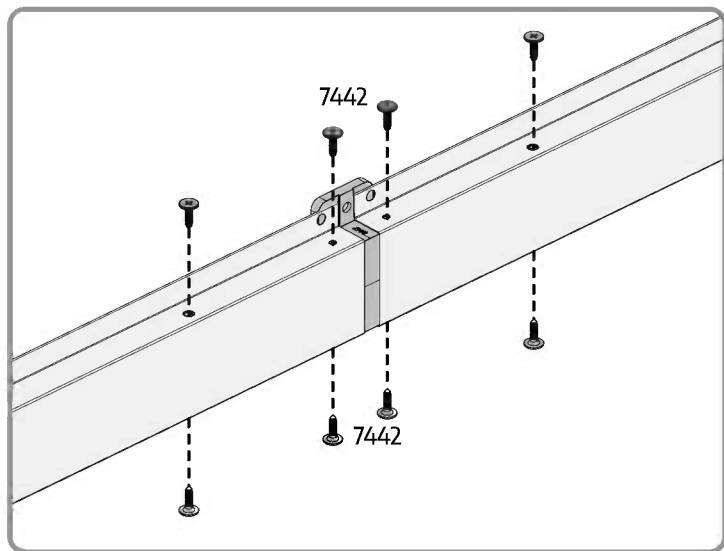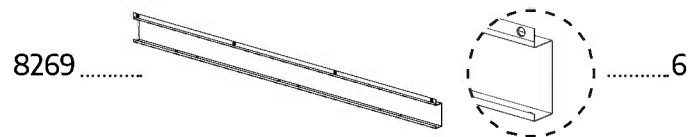










7602 4









7442 16

x4

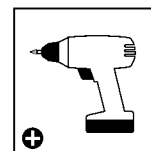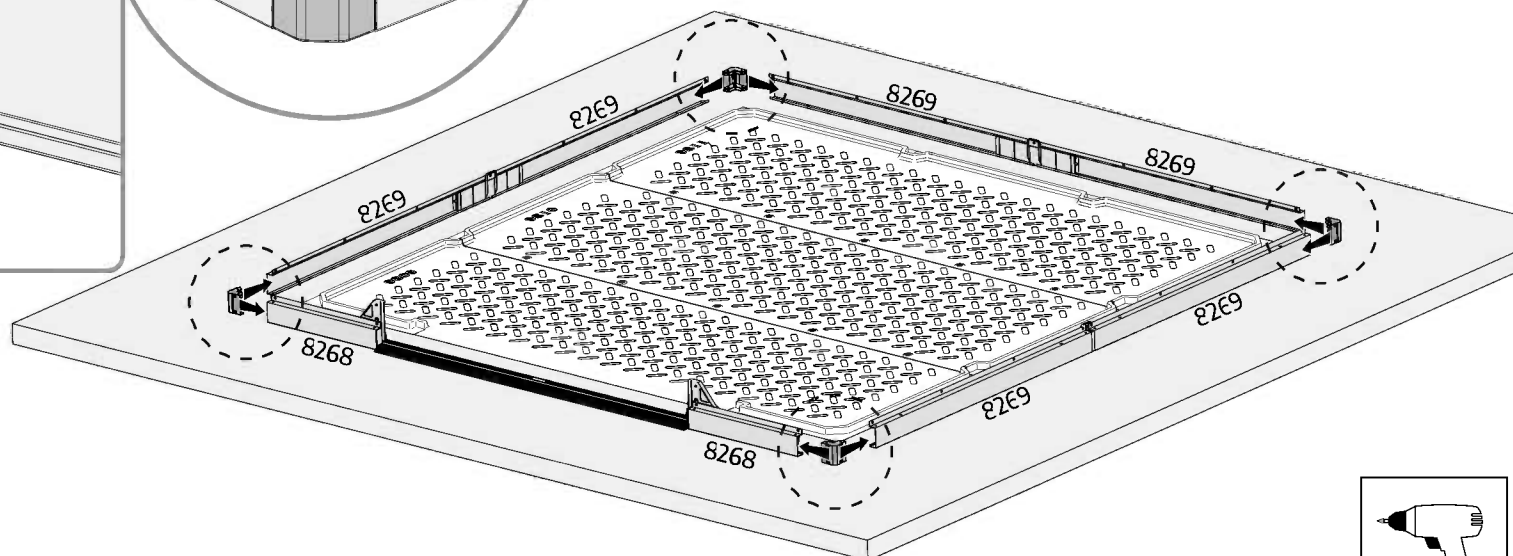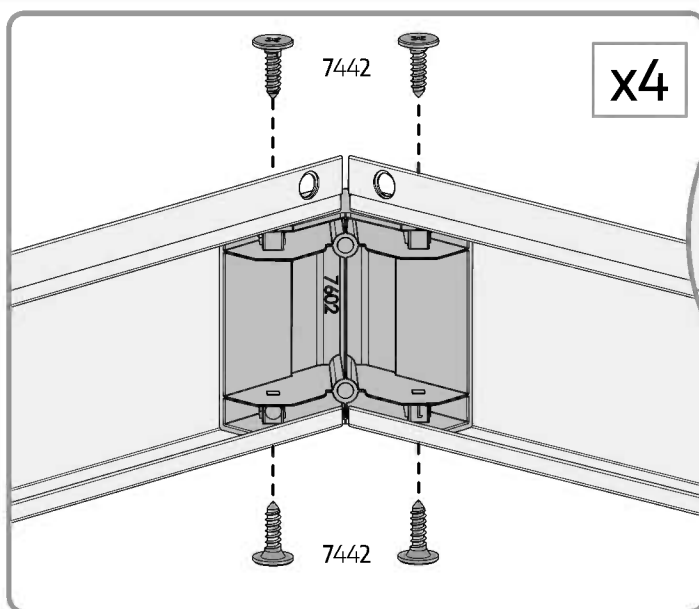


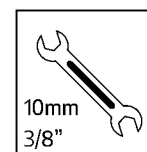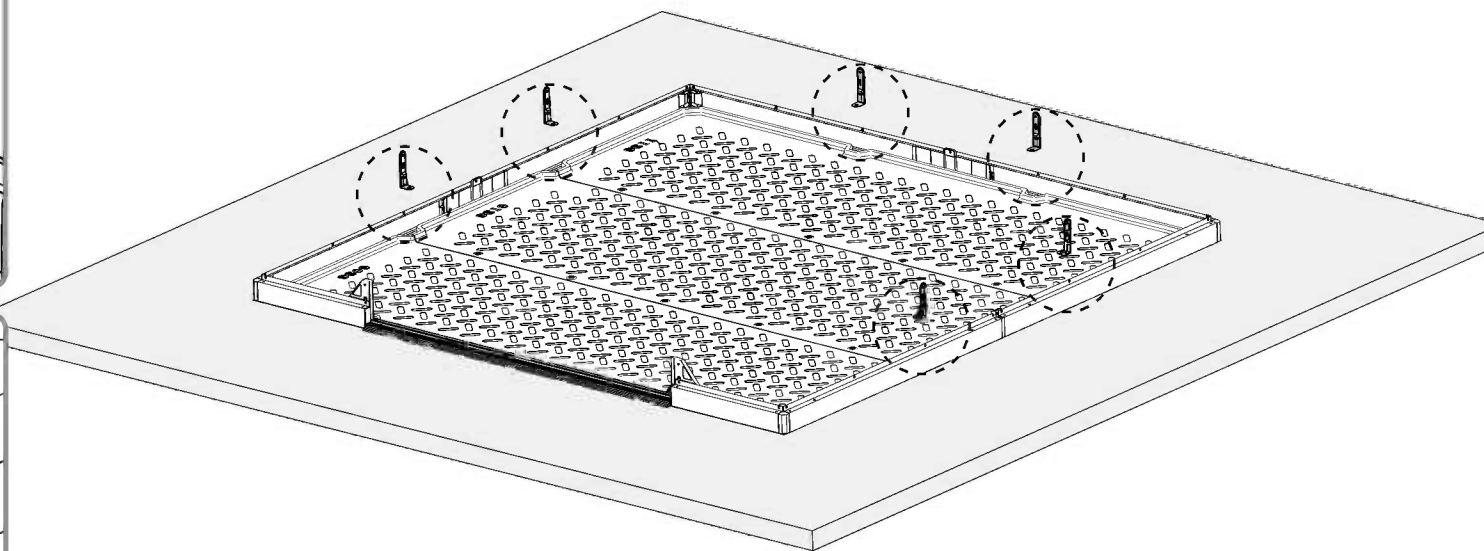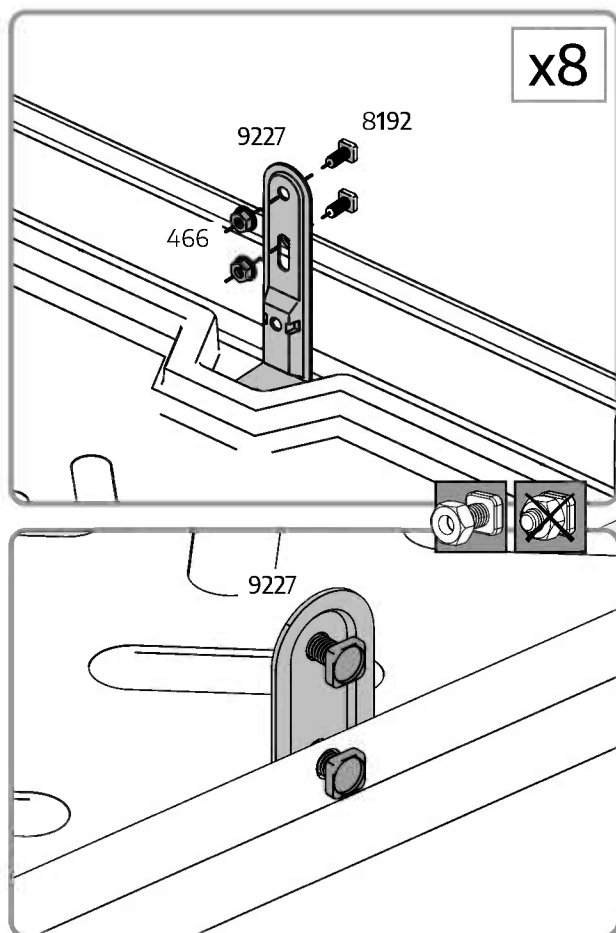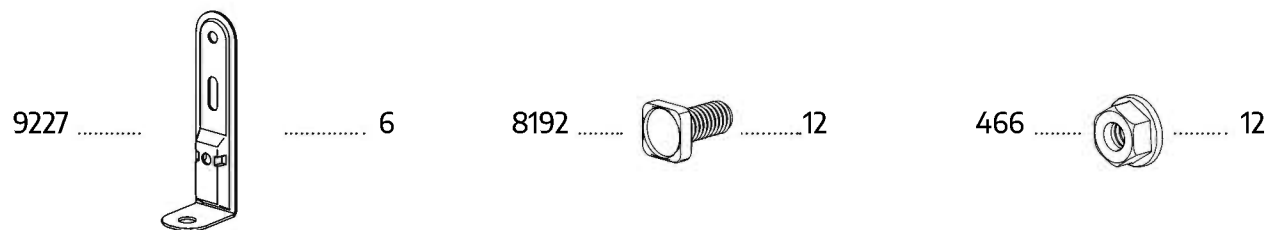

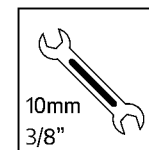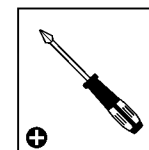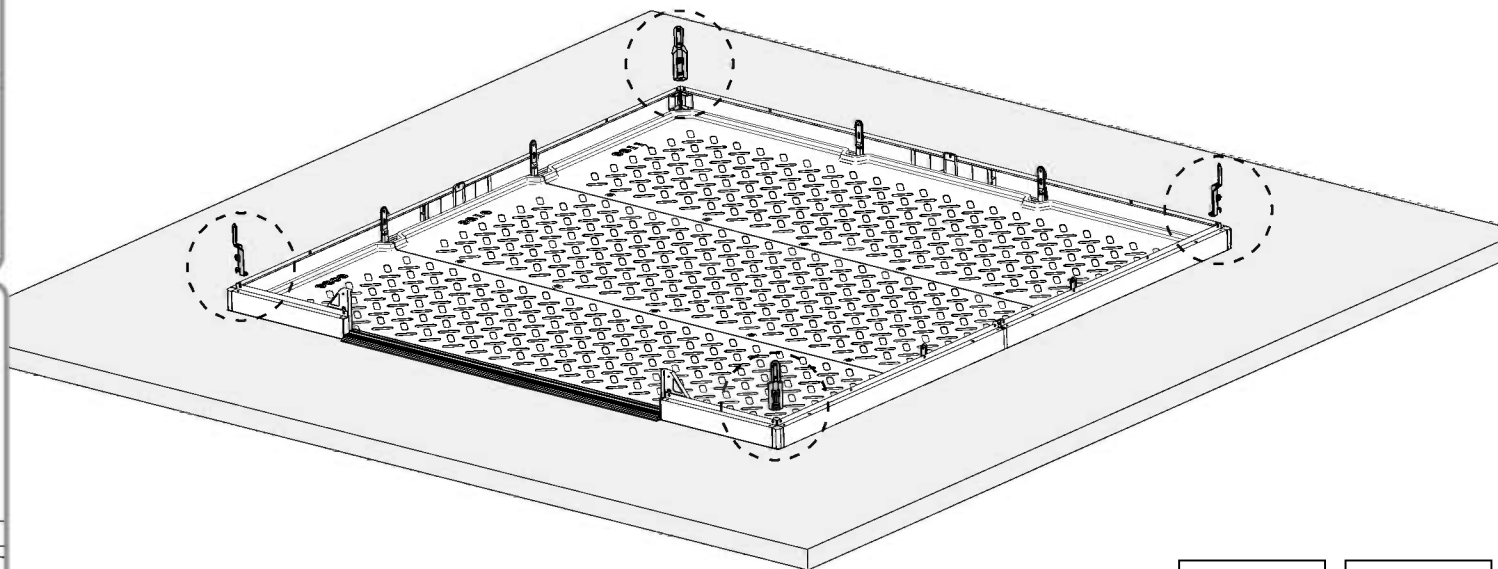
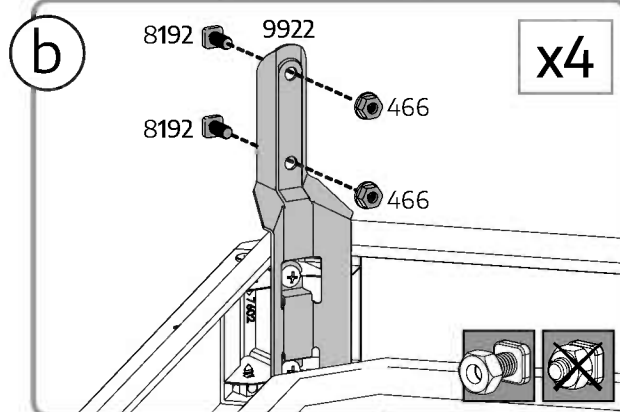
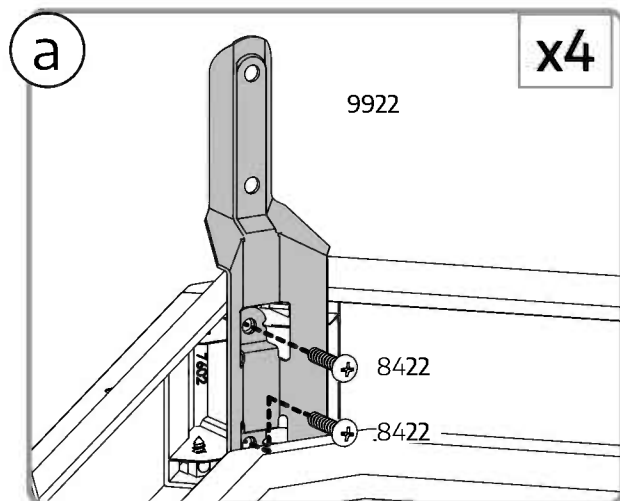


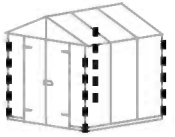








a



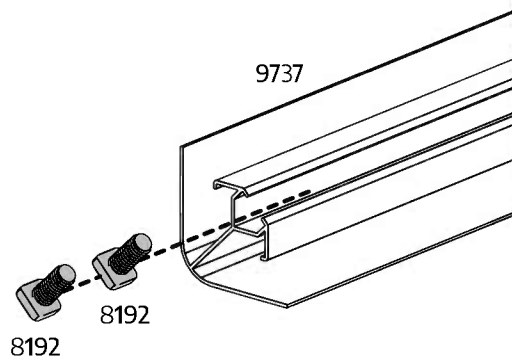





b

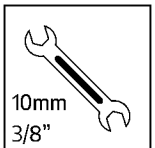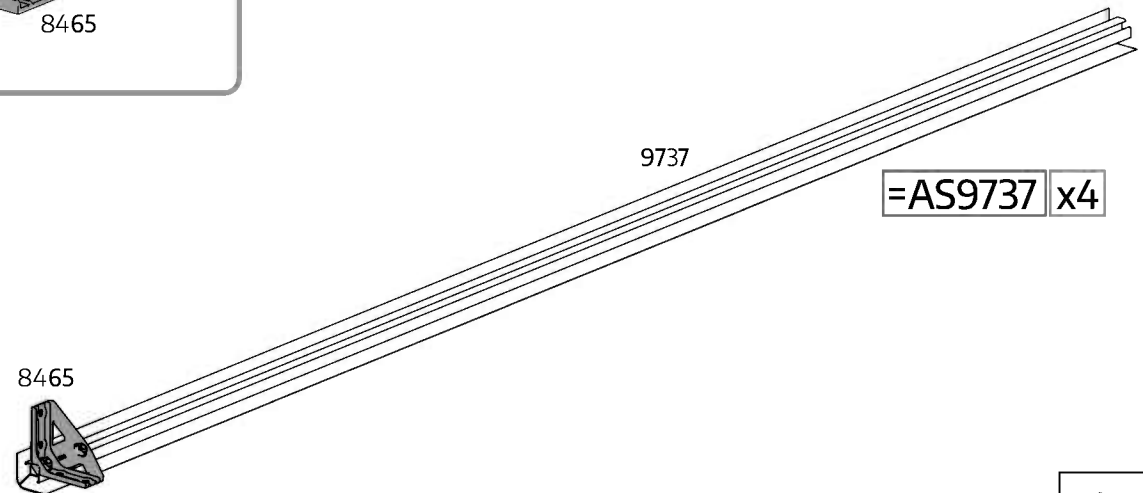
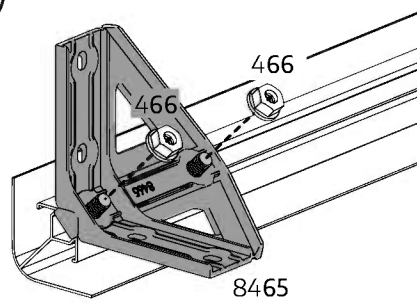


10mm
3/8"

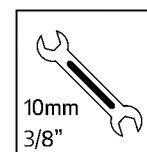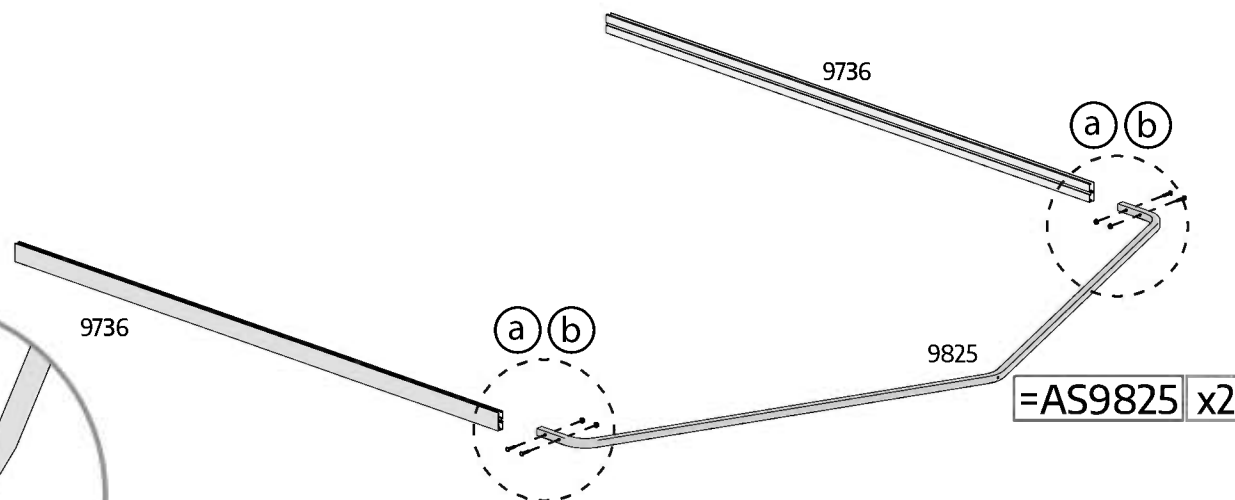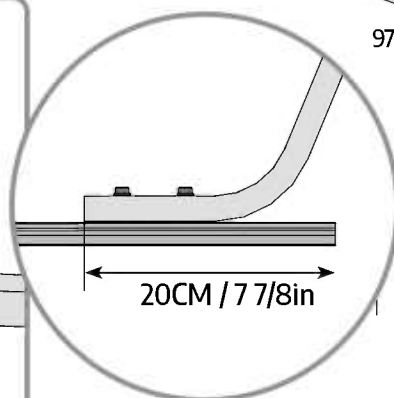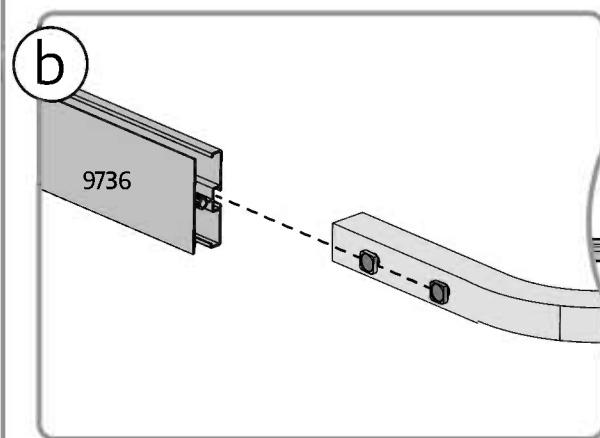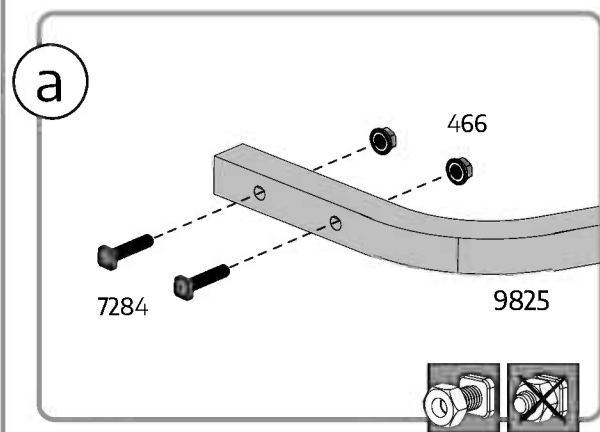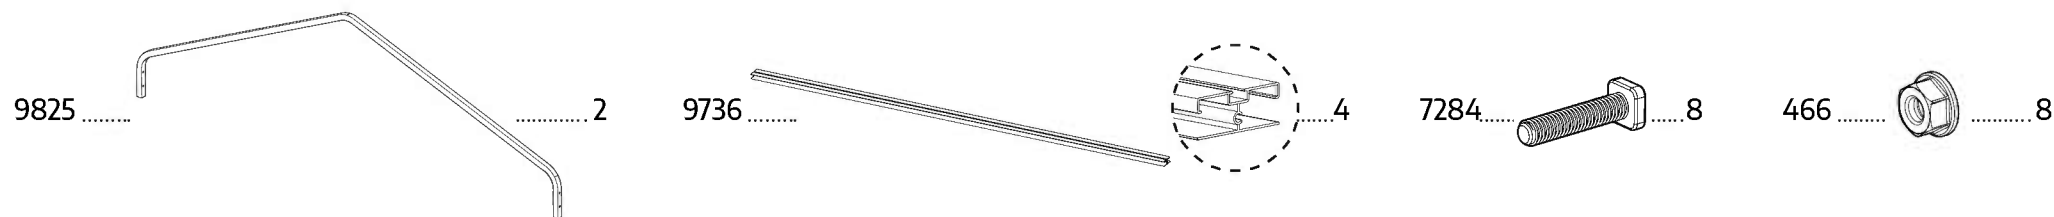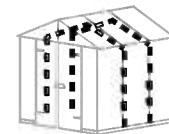

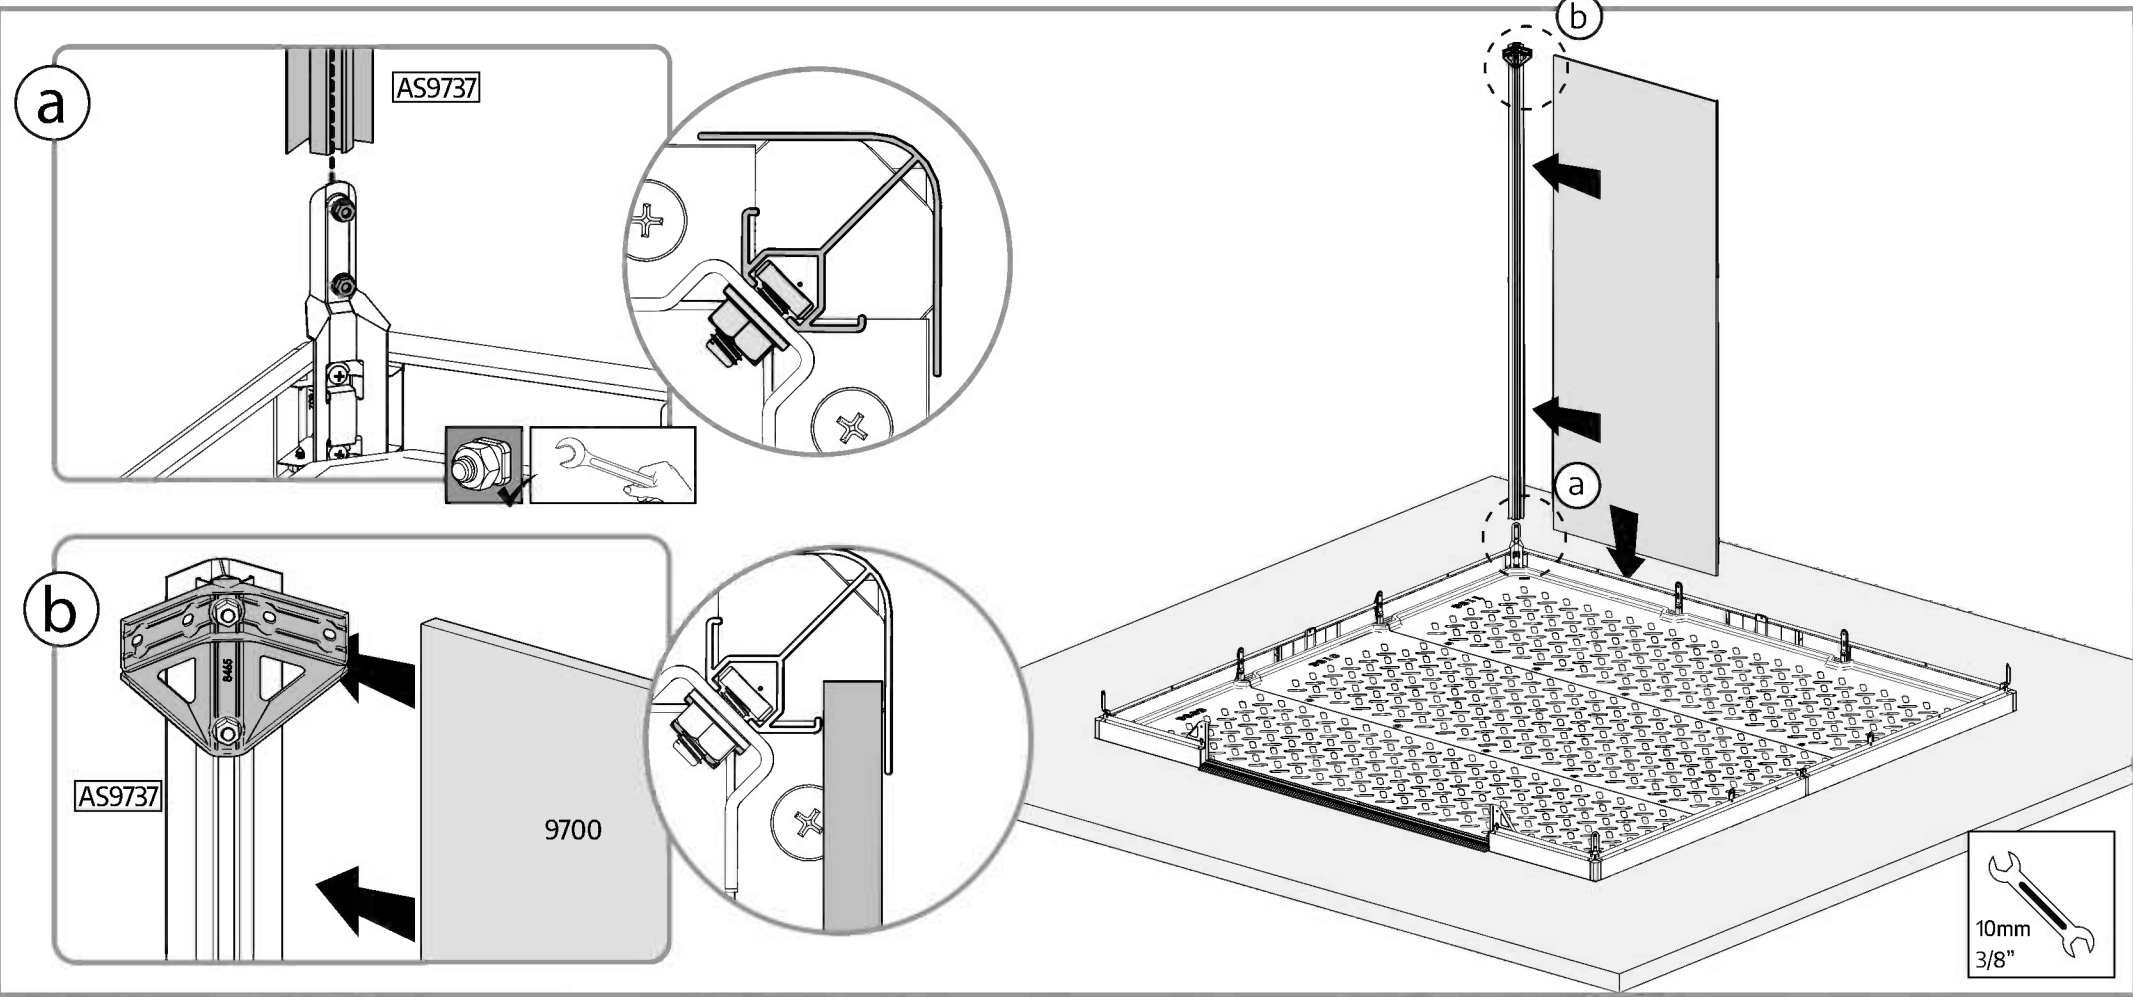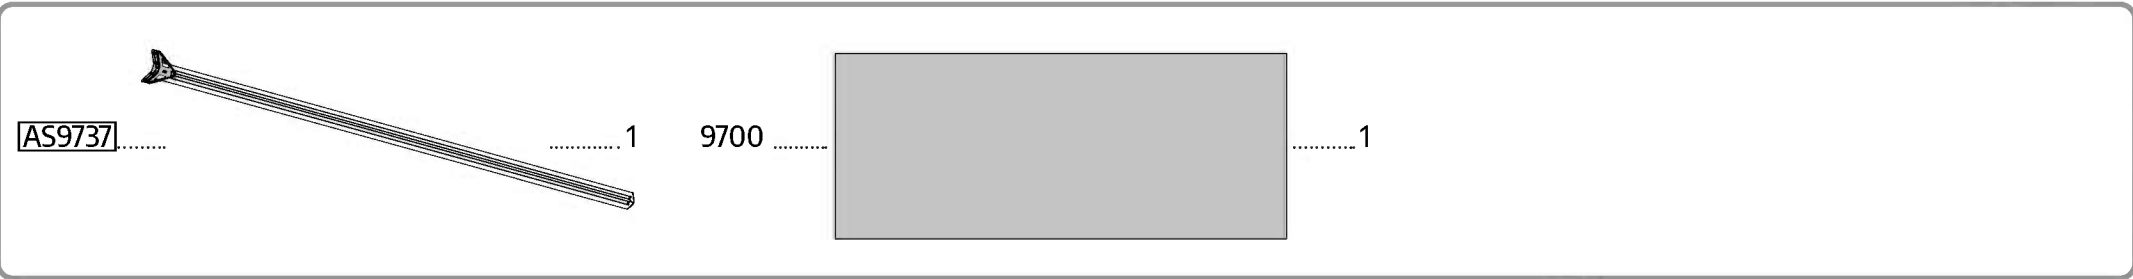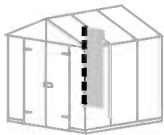

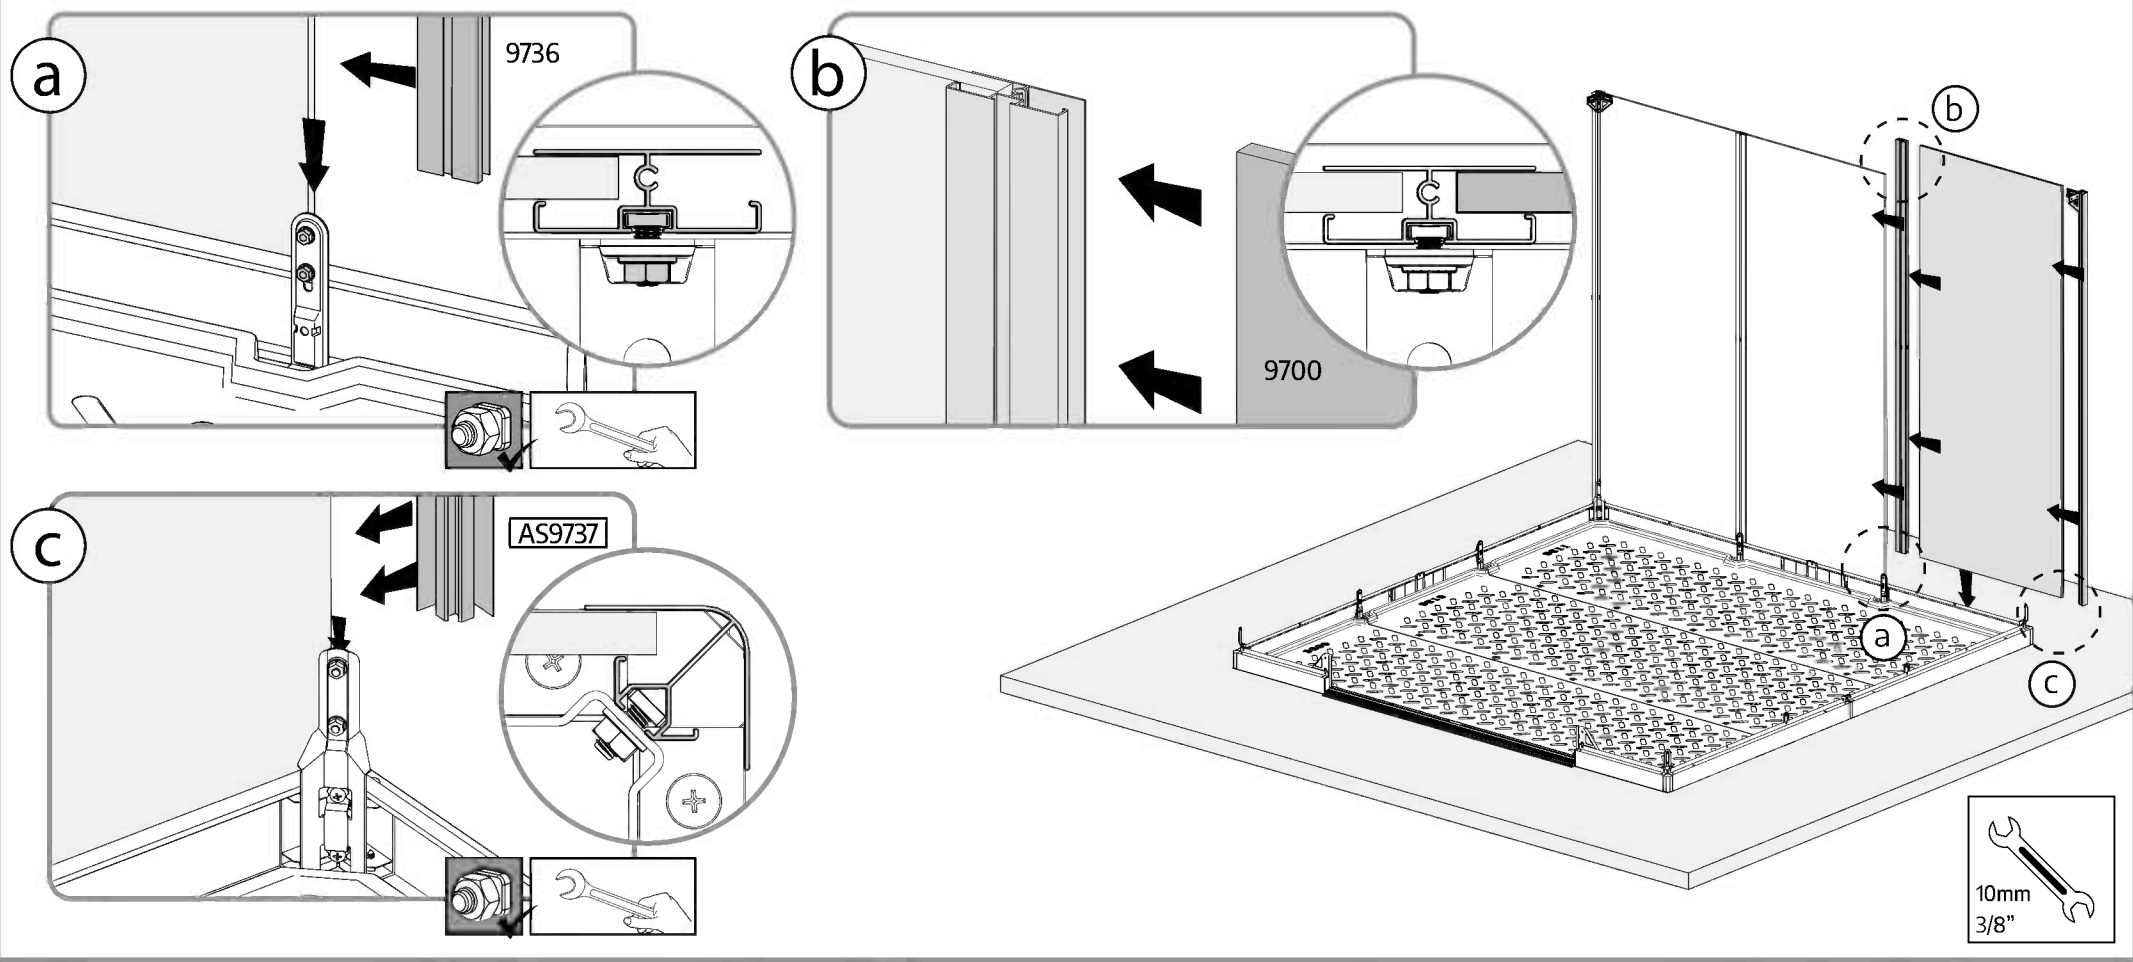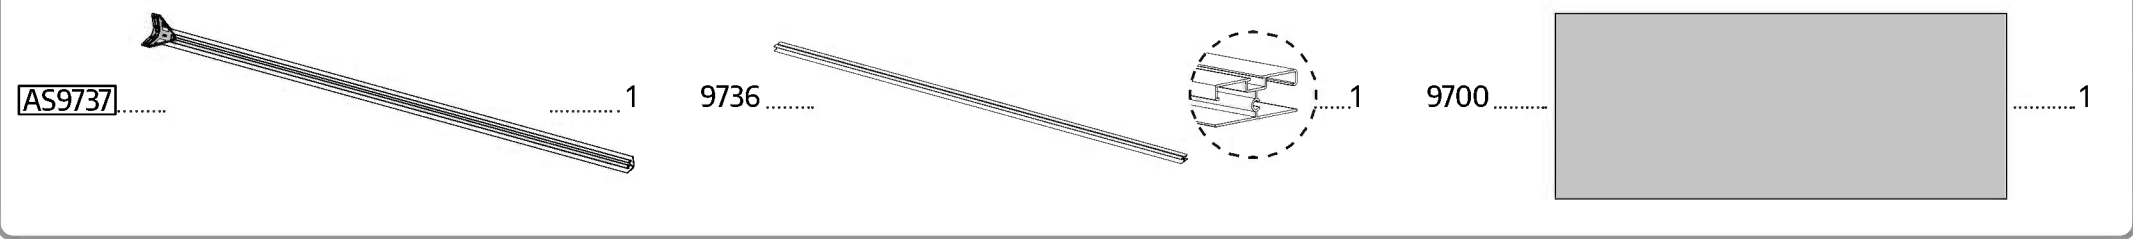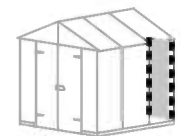



1

8192

 $\bar{Z}$

466



.....2

7442




Δ






8192

9804







466












7442


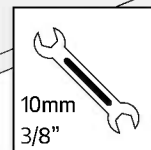
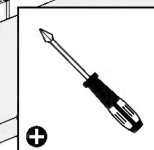
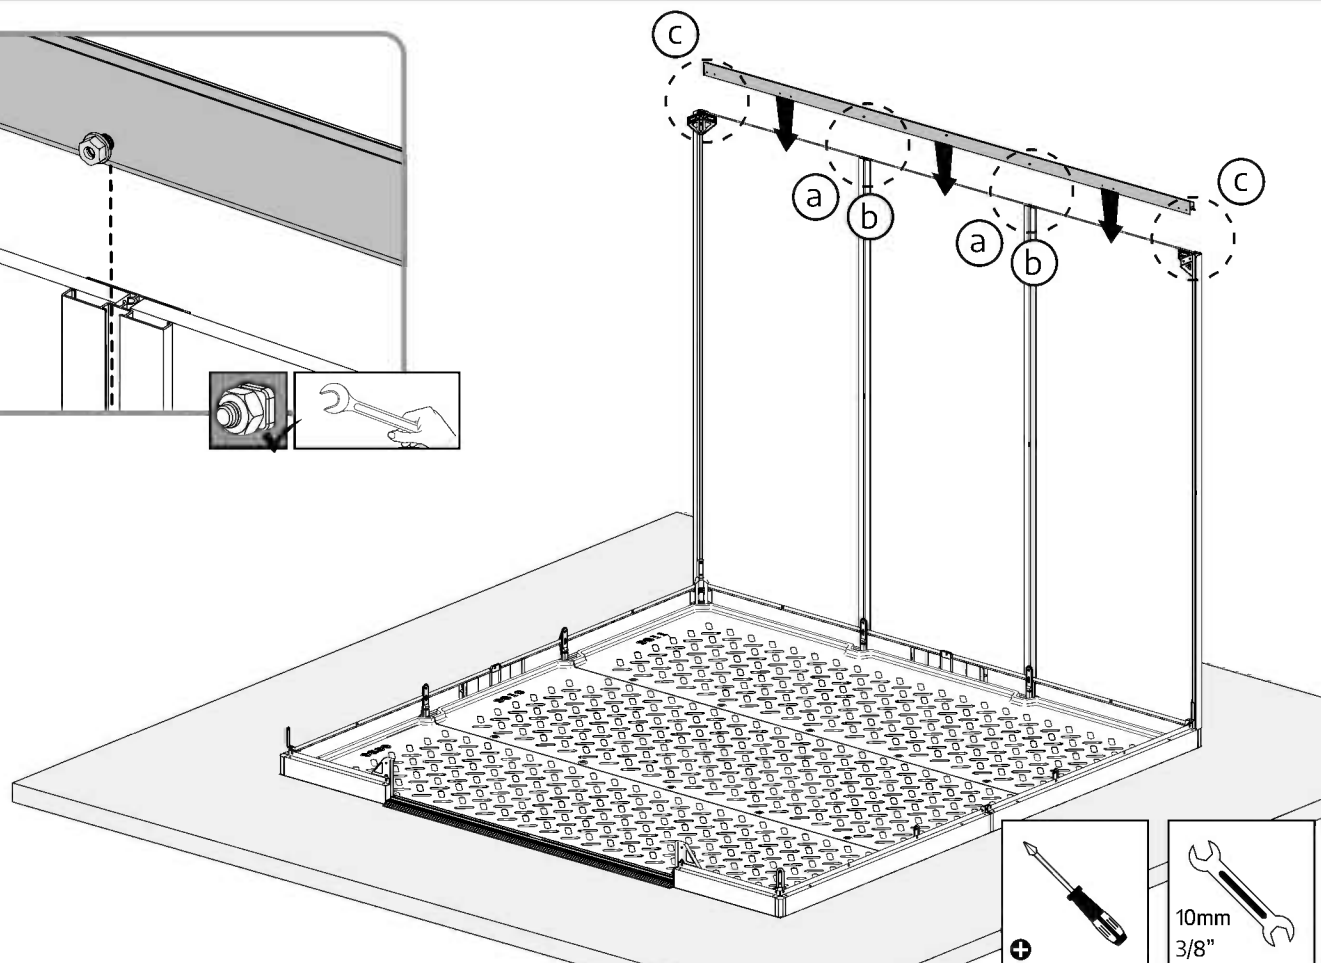








10mm
3/8"


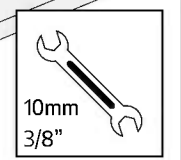
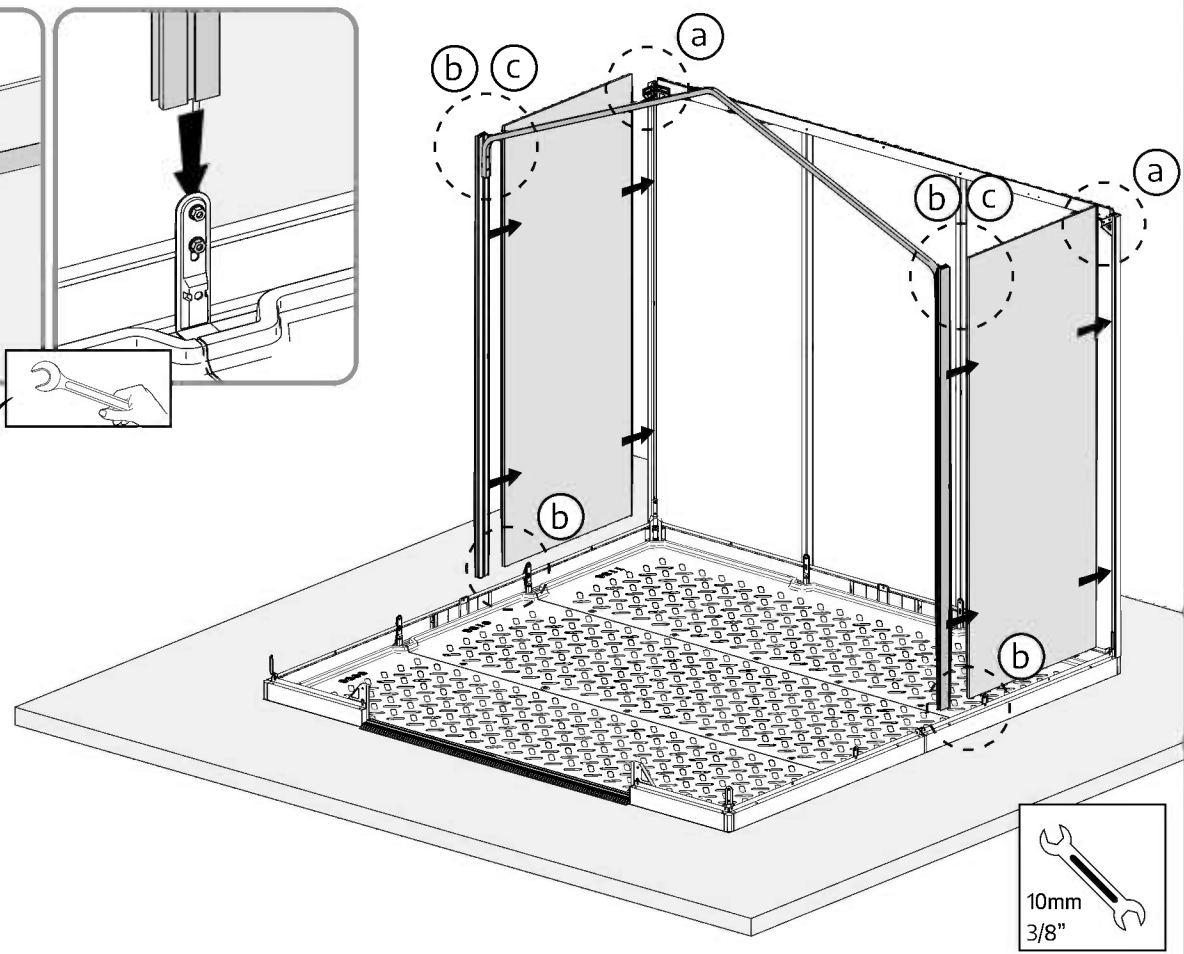
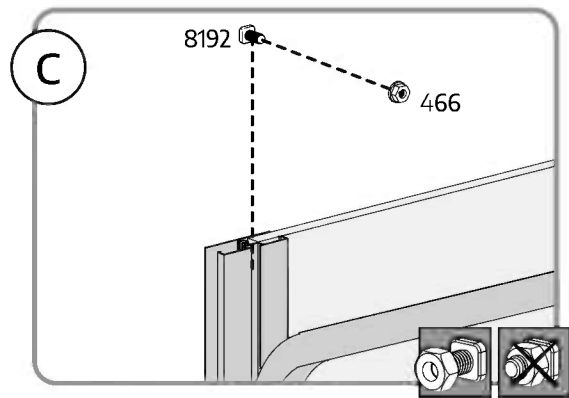
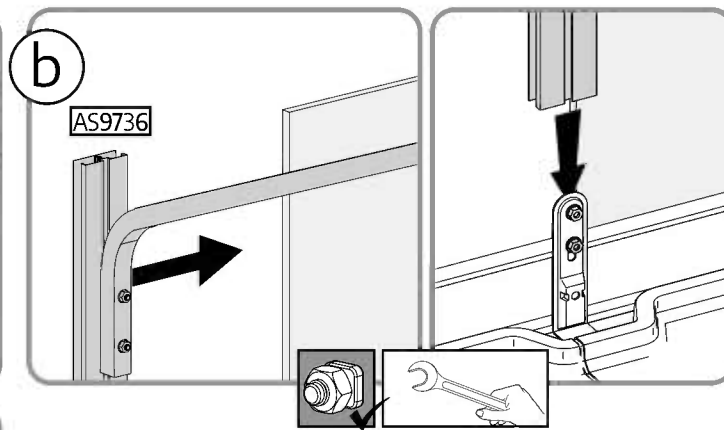
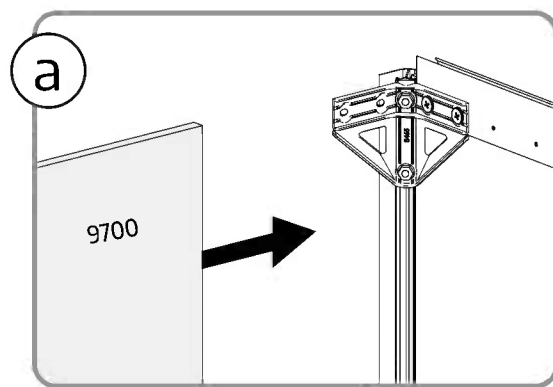
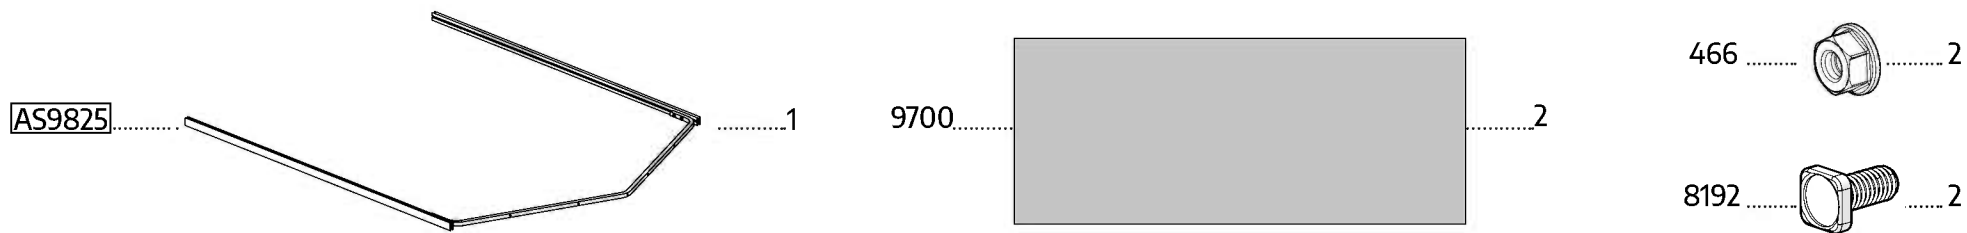


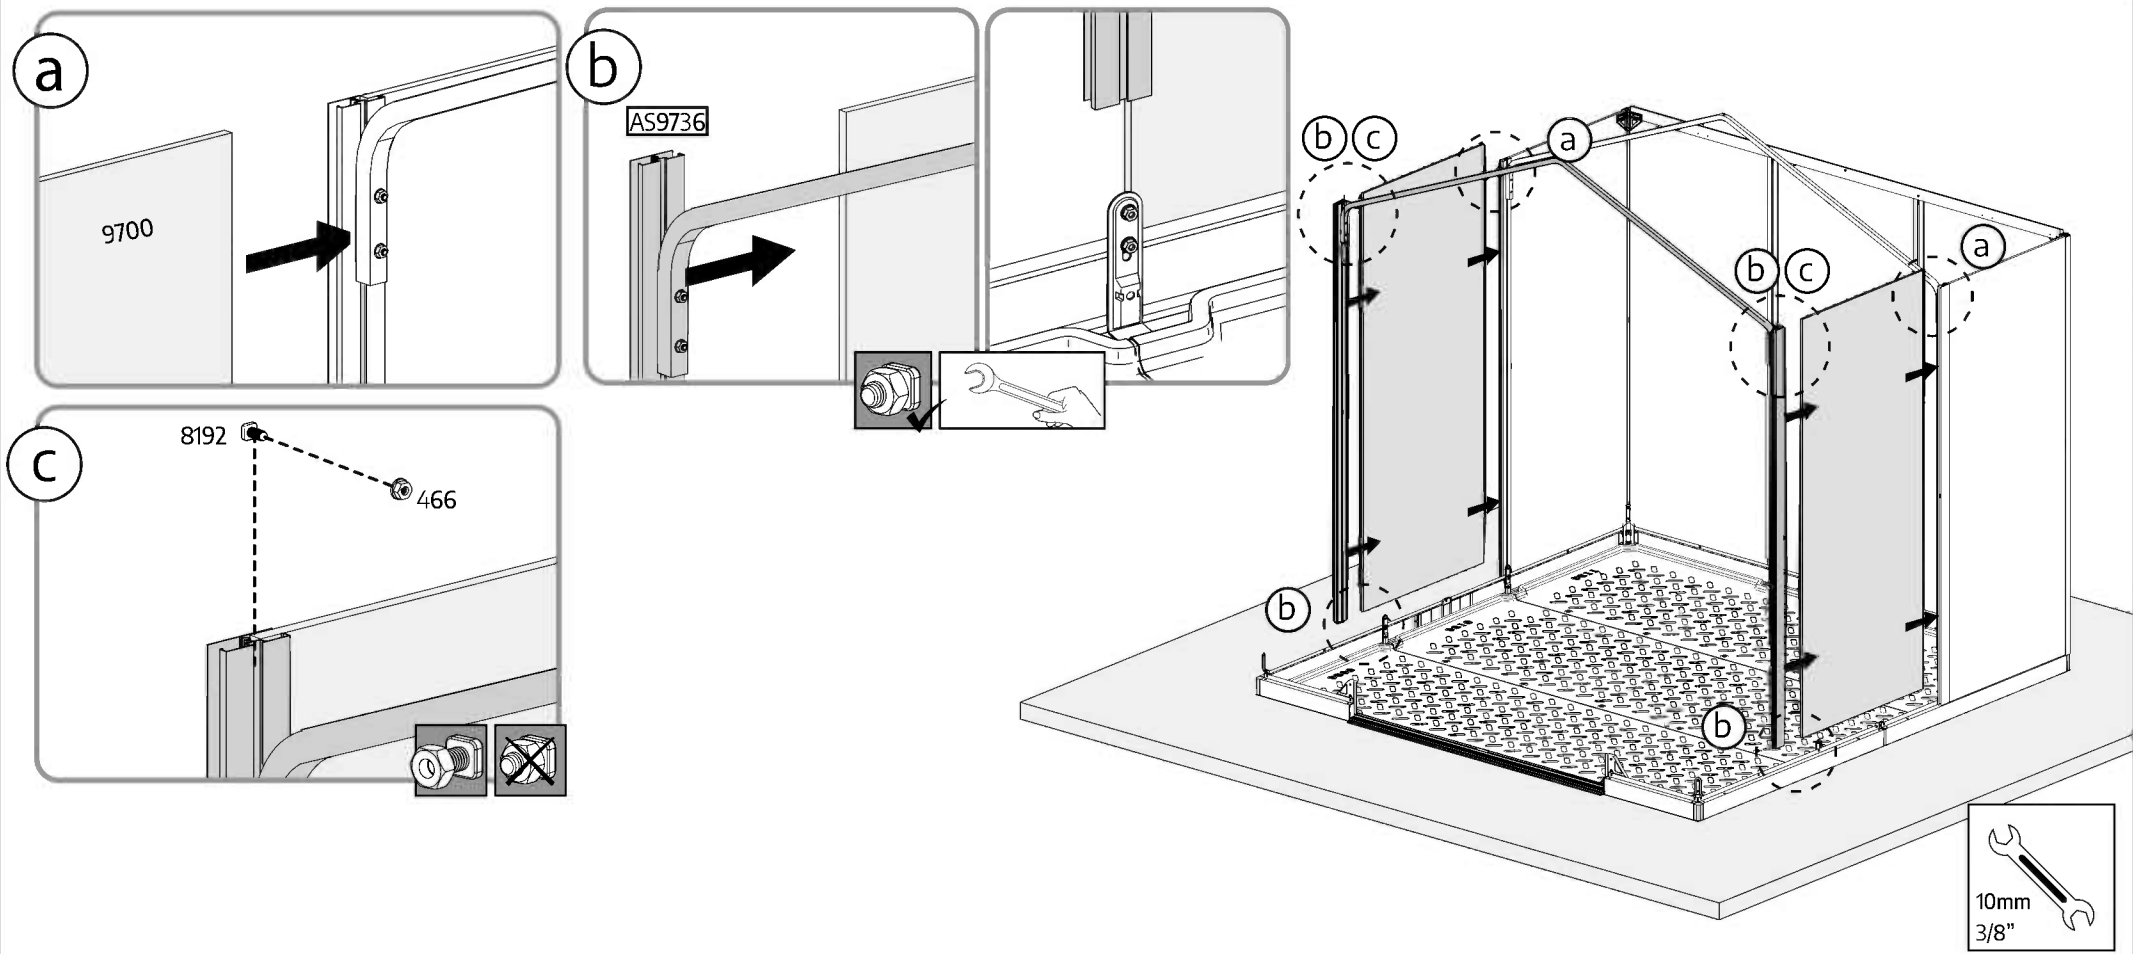
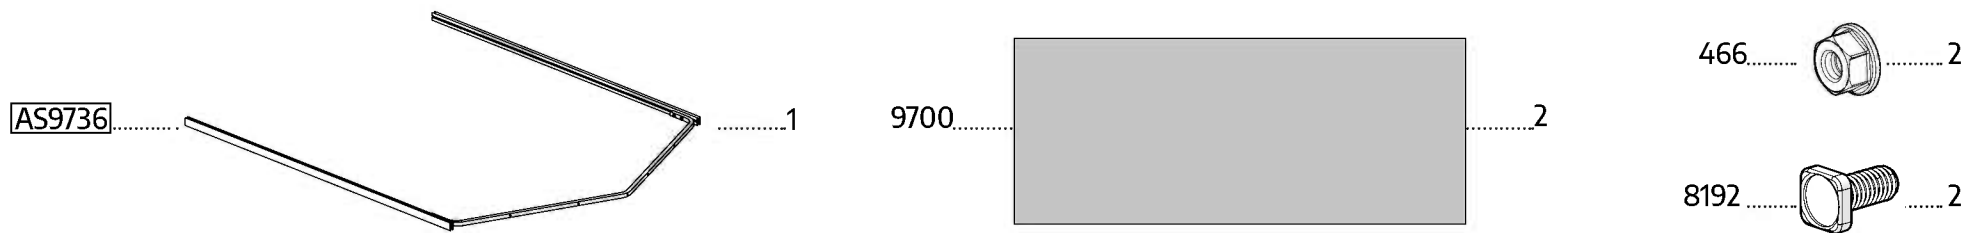
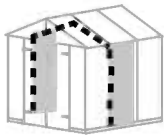


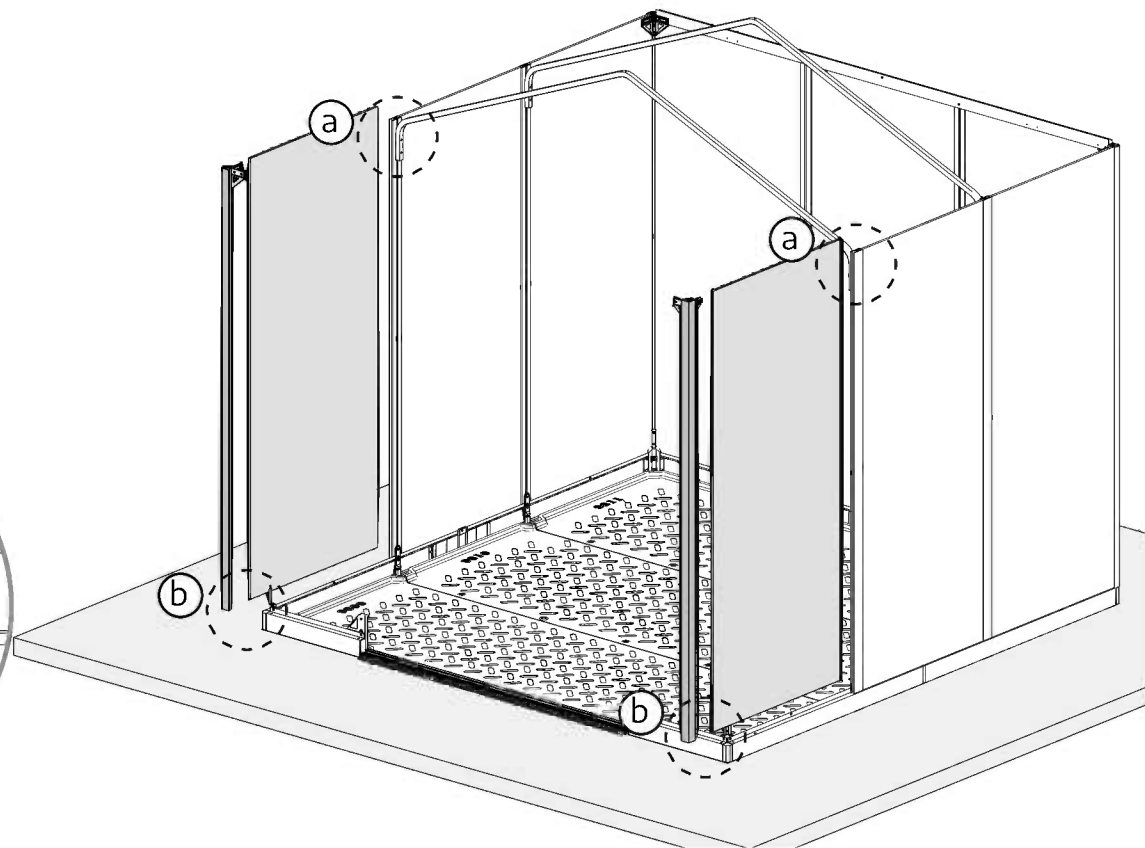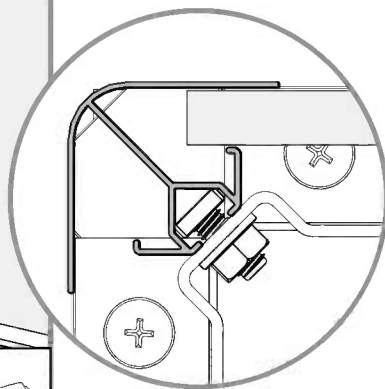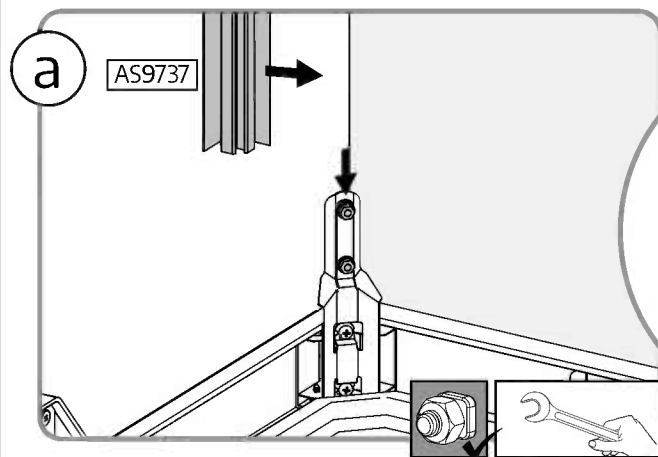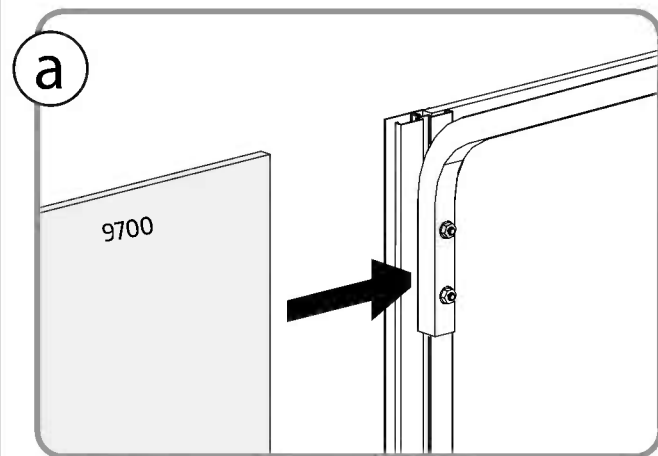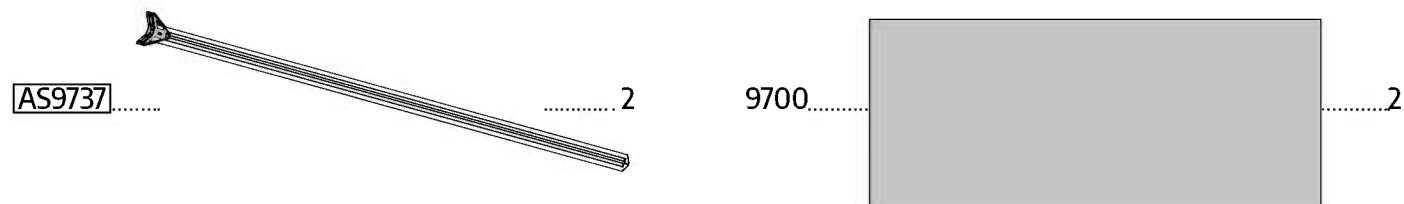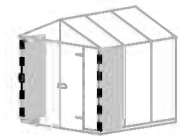

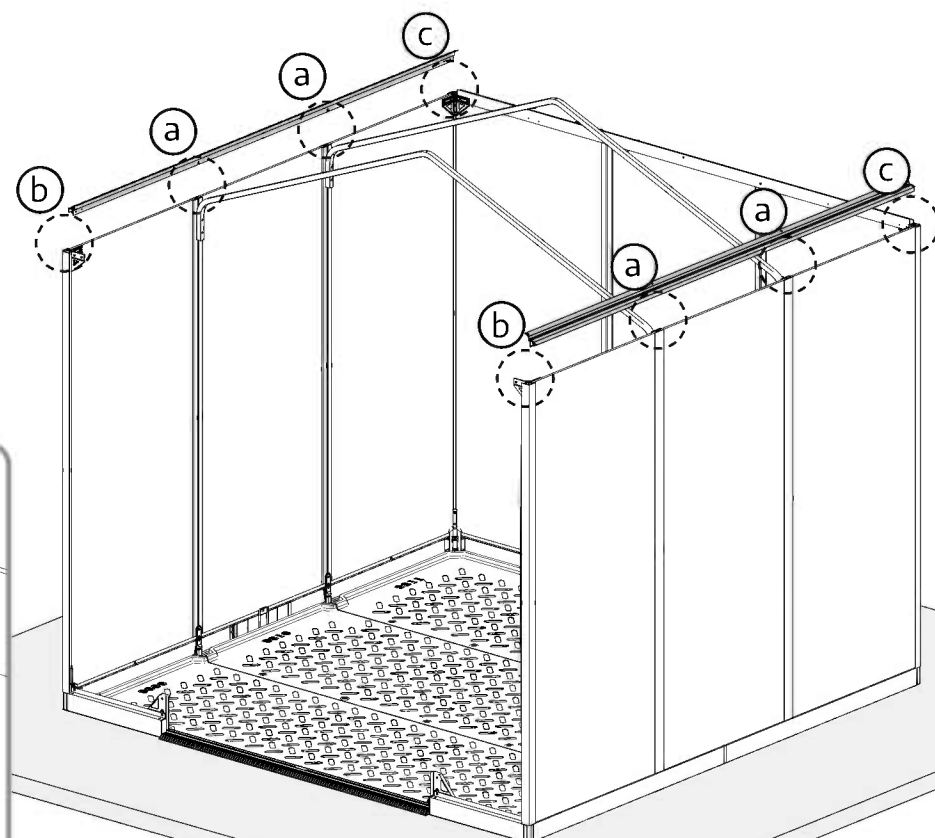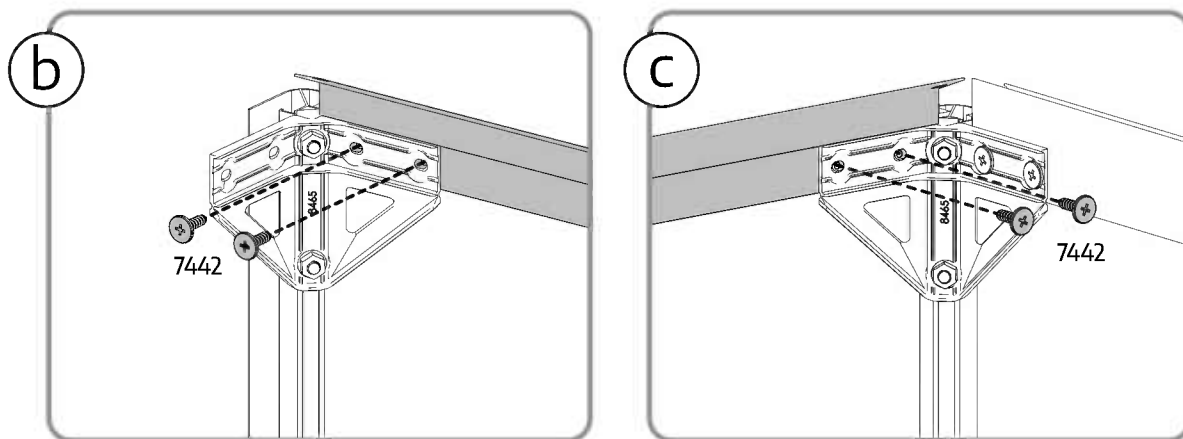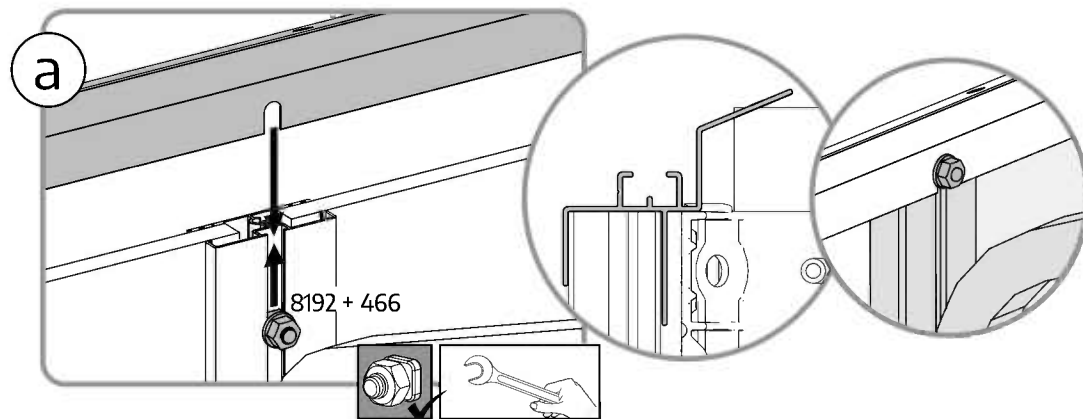
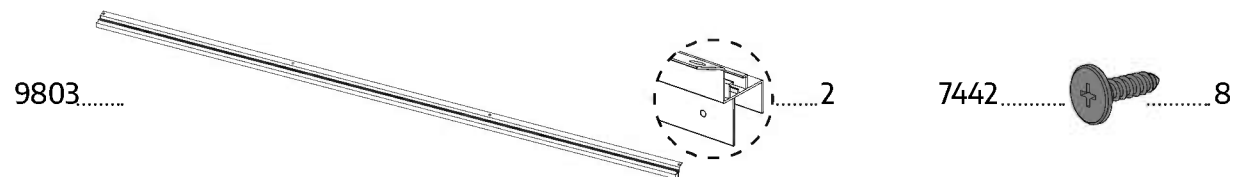


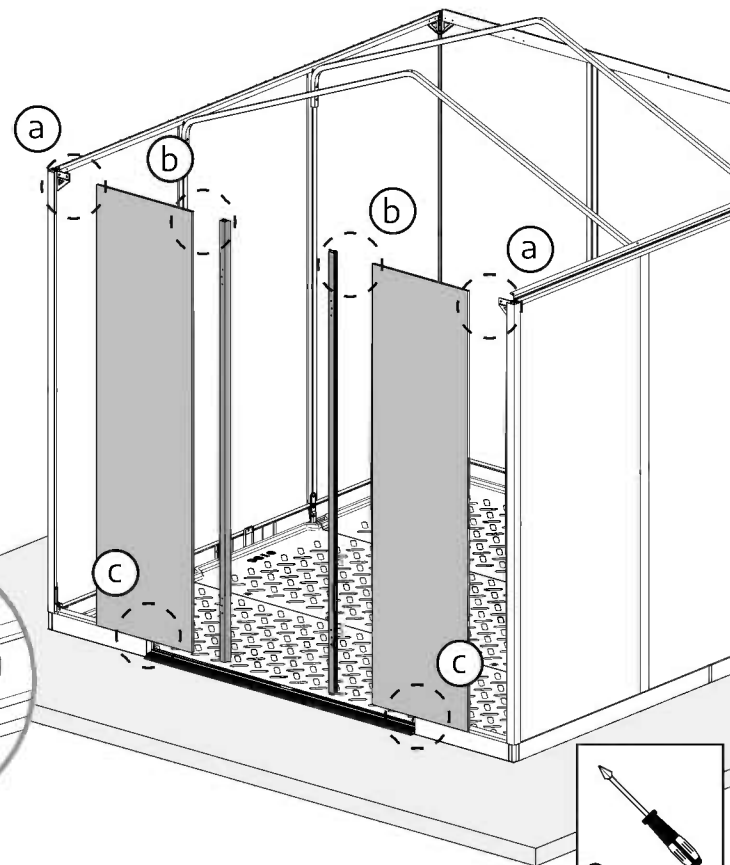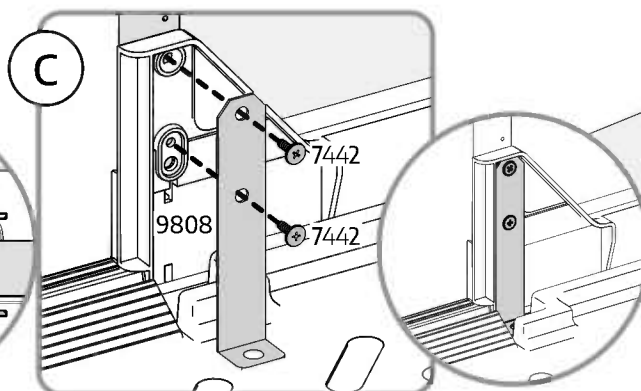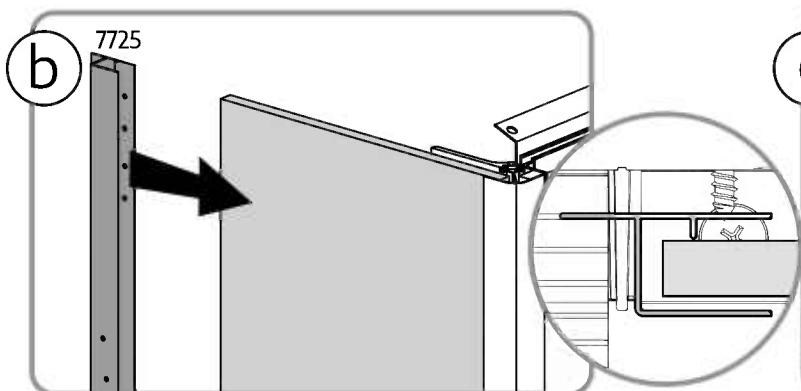
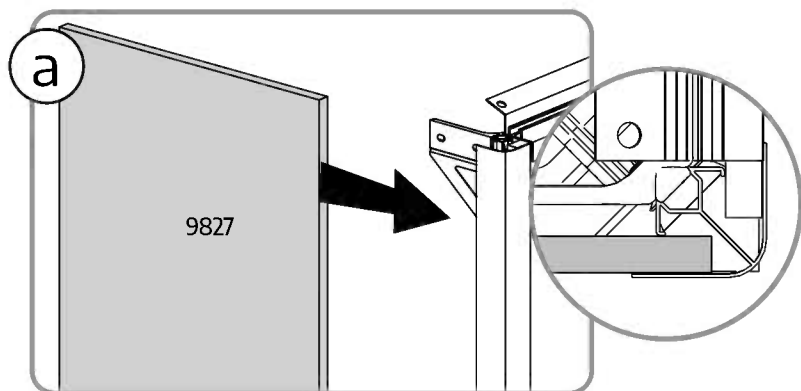
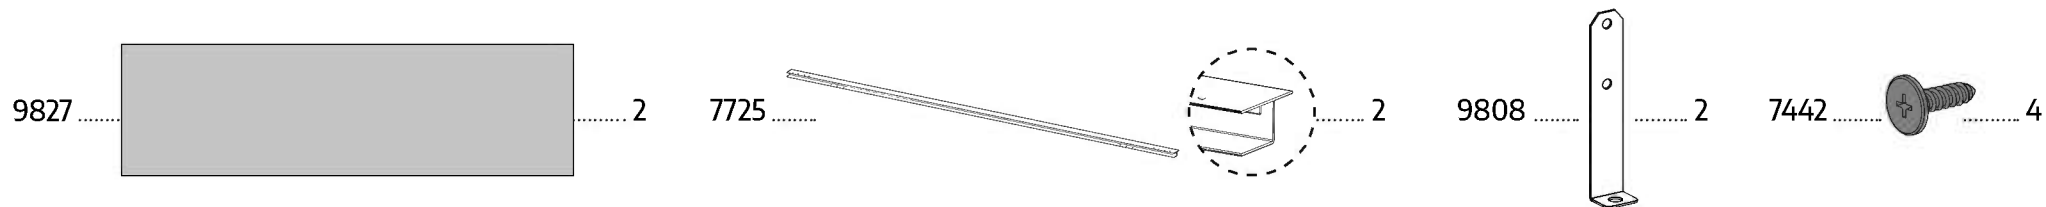
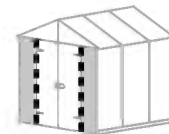


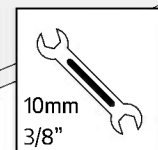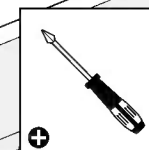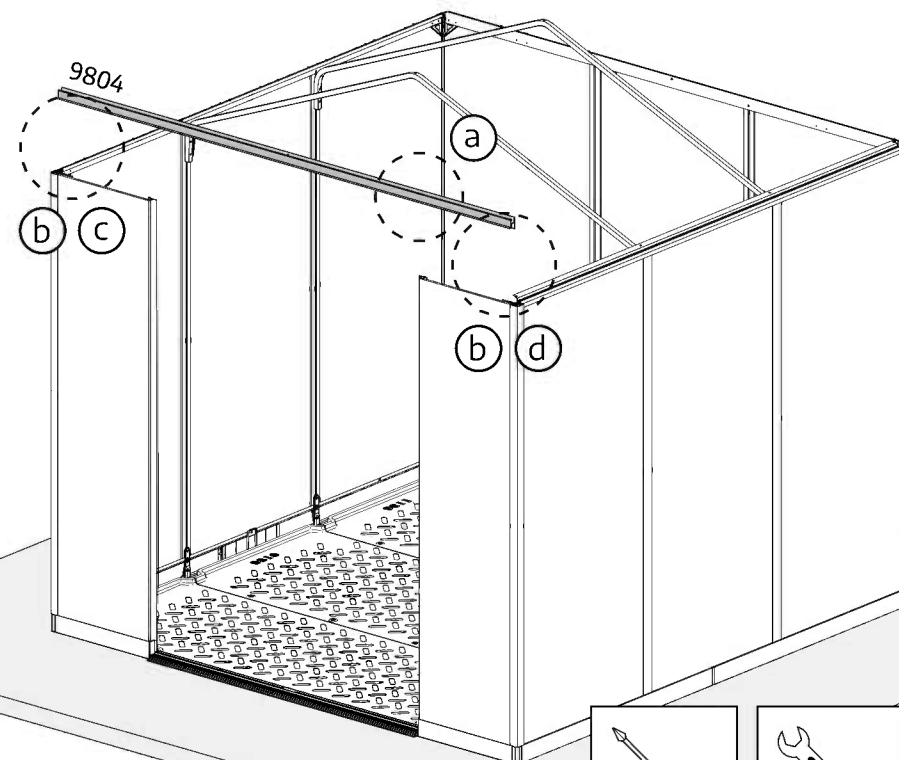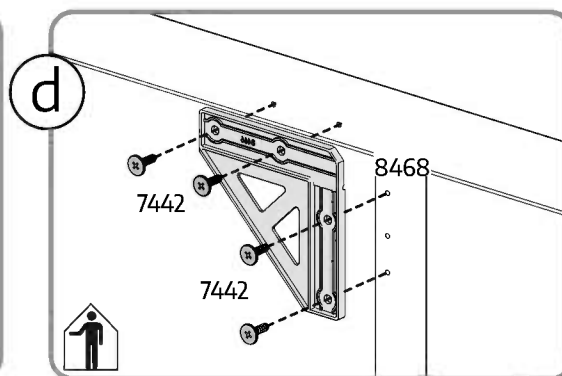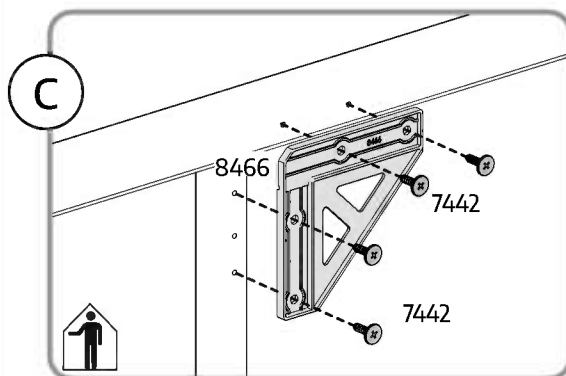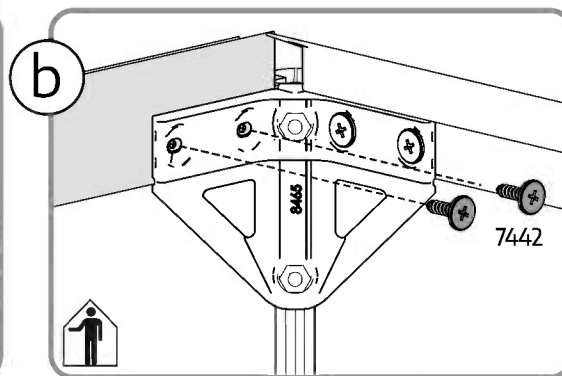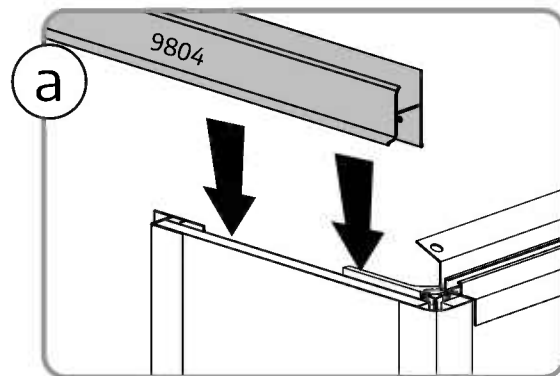

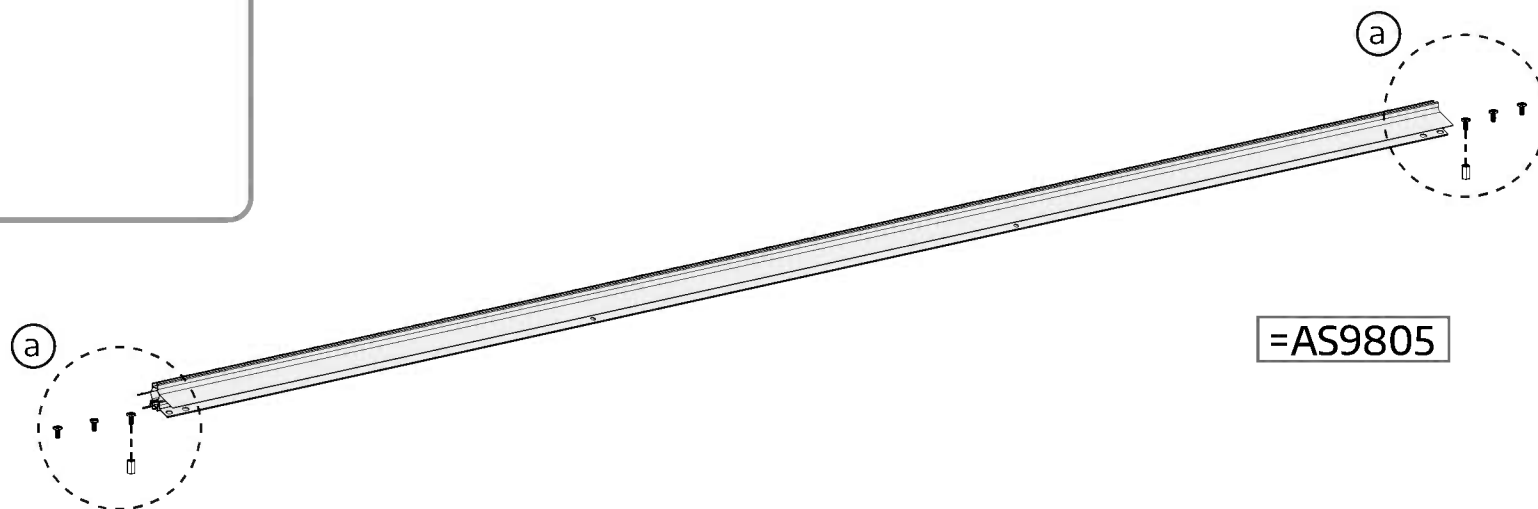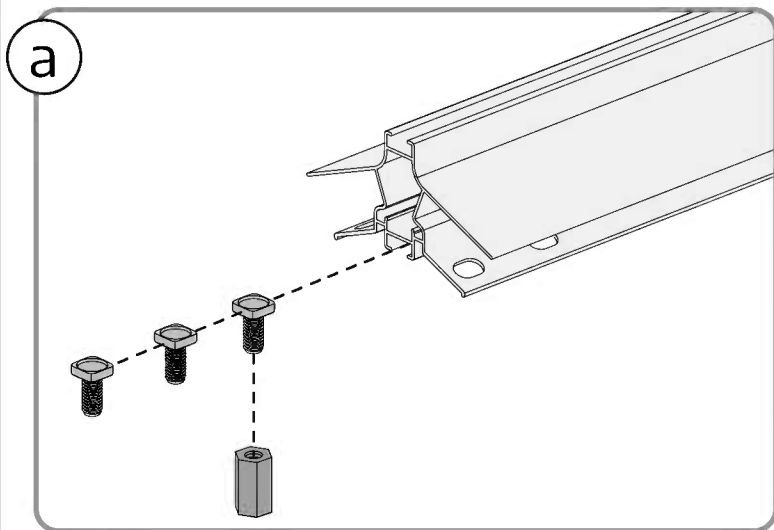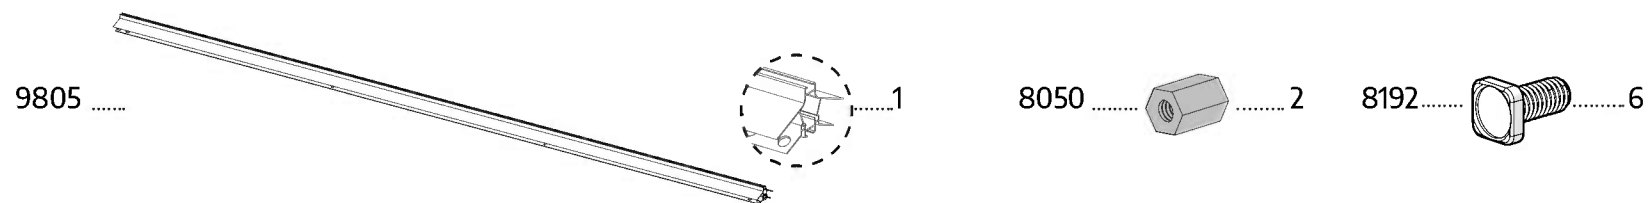








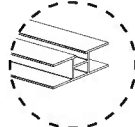



9824   2 466  2 8192  4

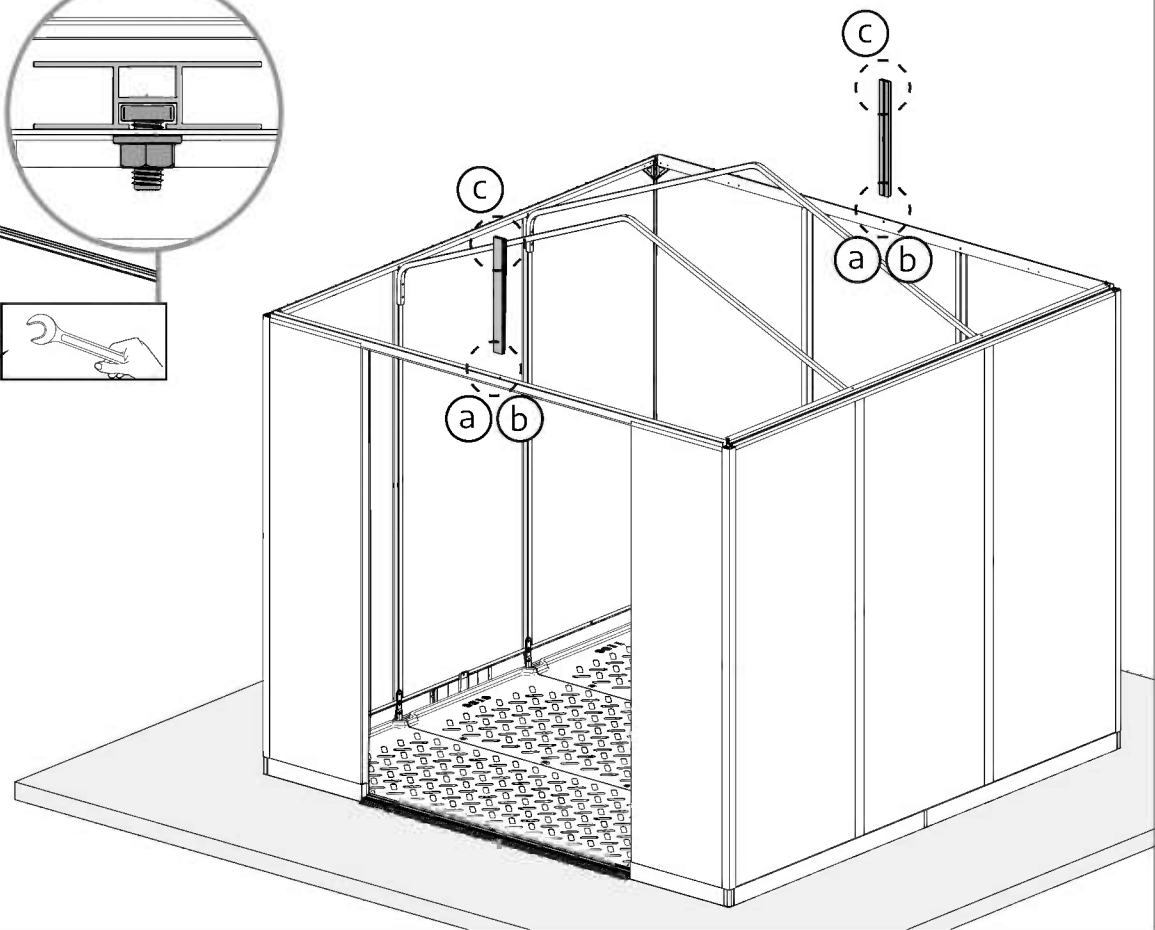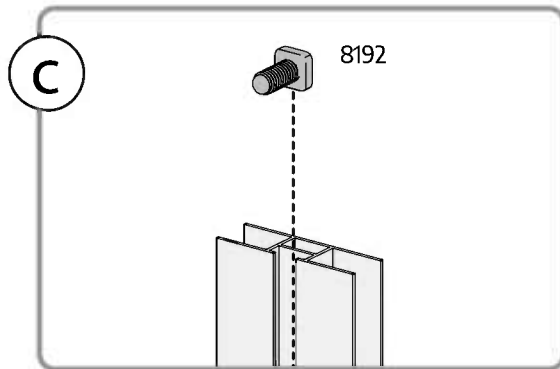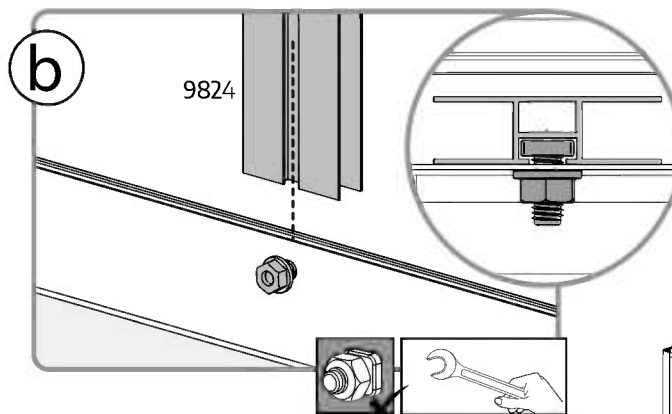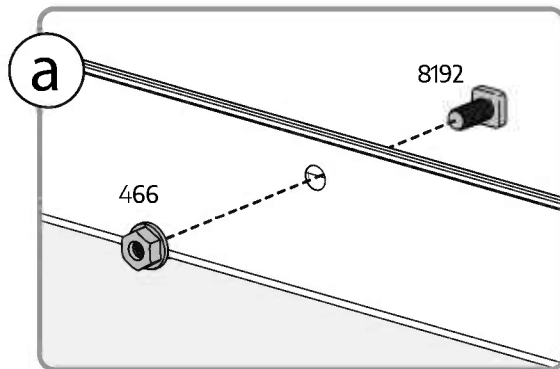






Remove plastic film from the panel **if exist!**

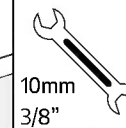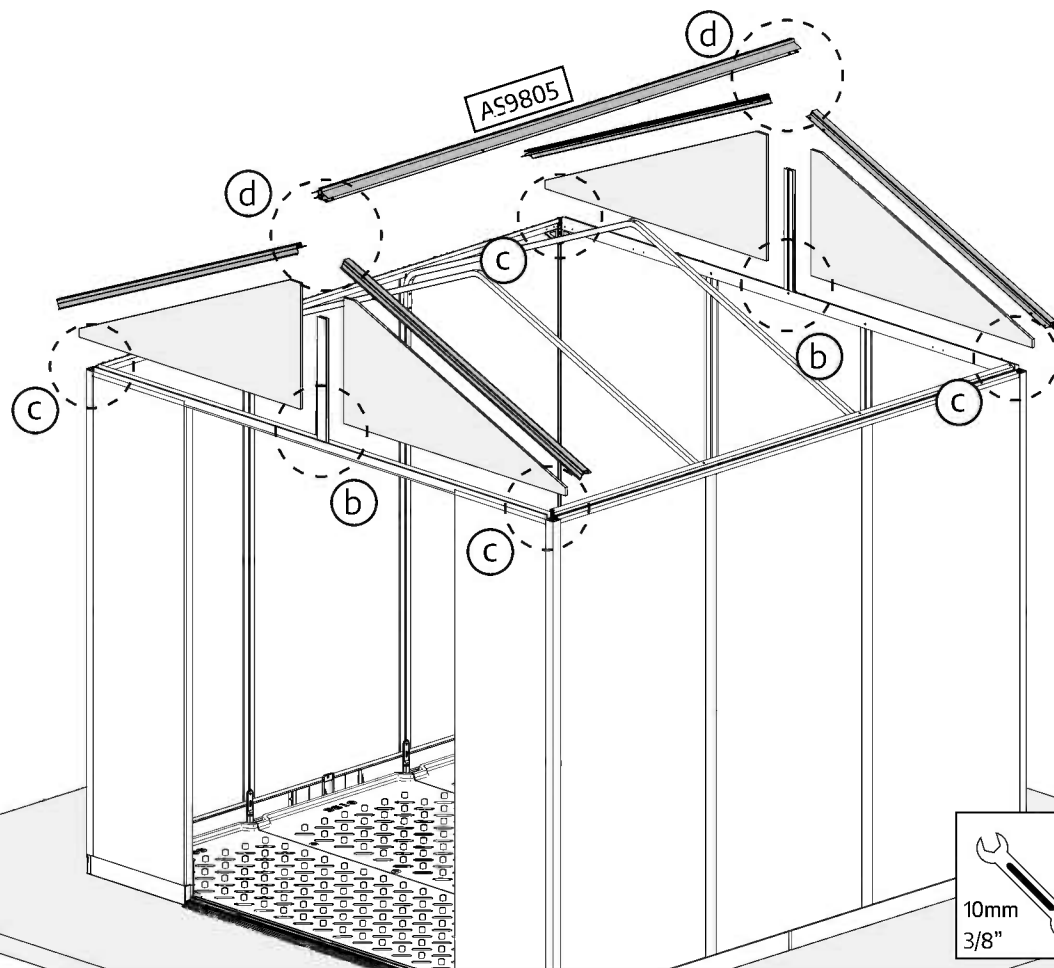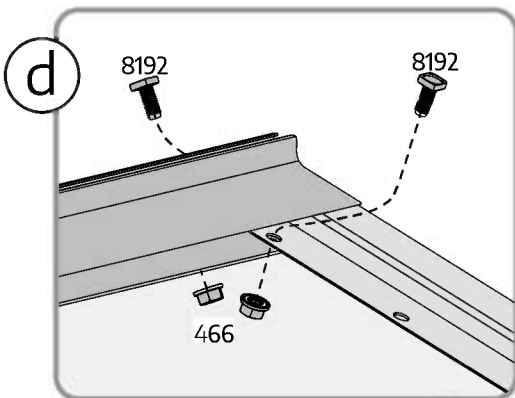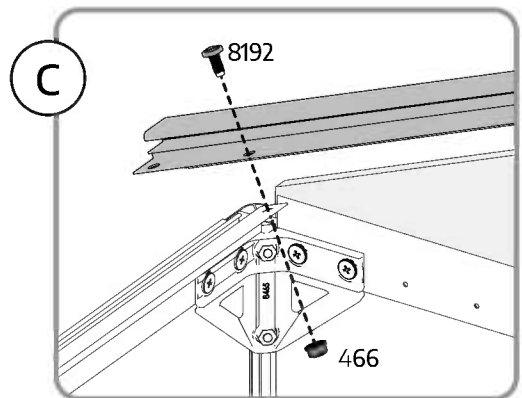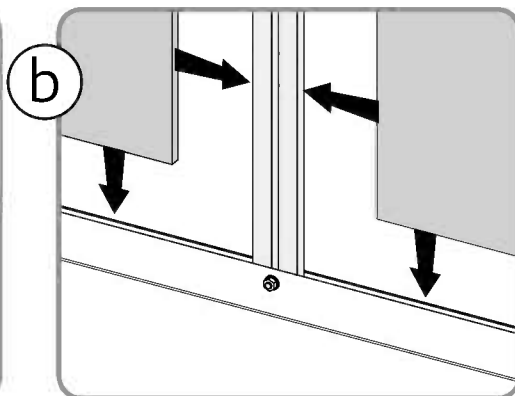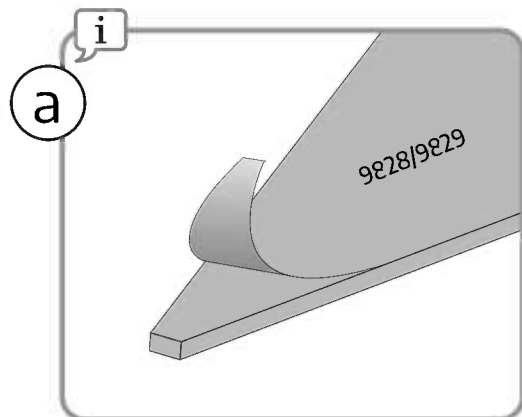
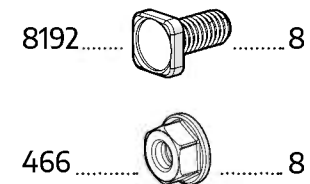
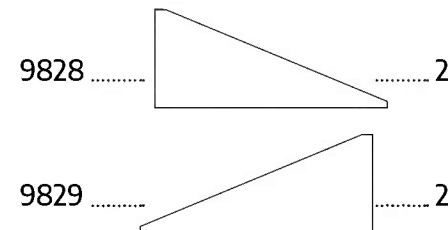
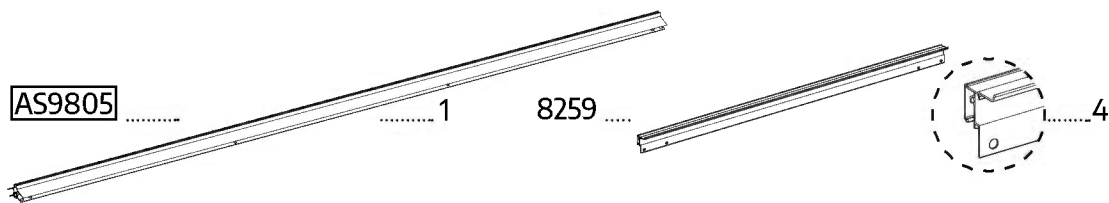


10mm
3/8"




8192.....8 466.....8

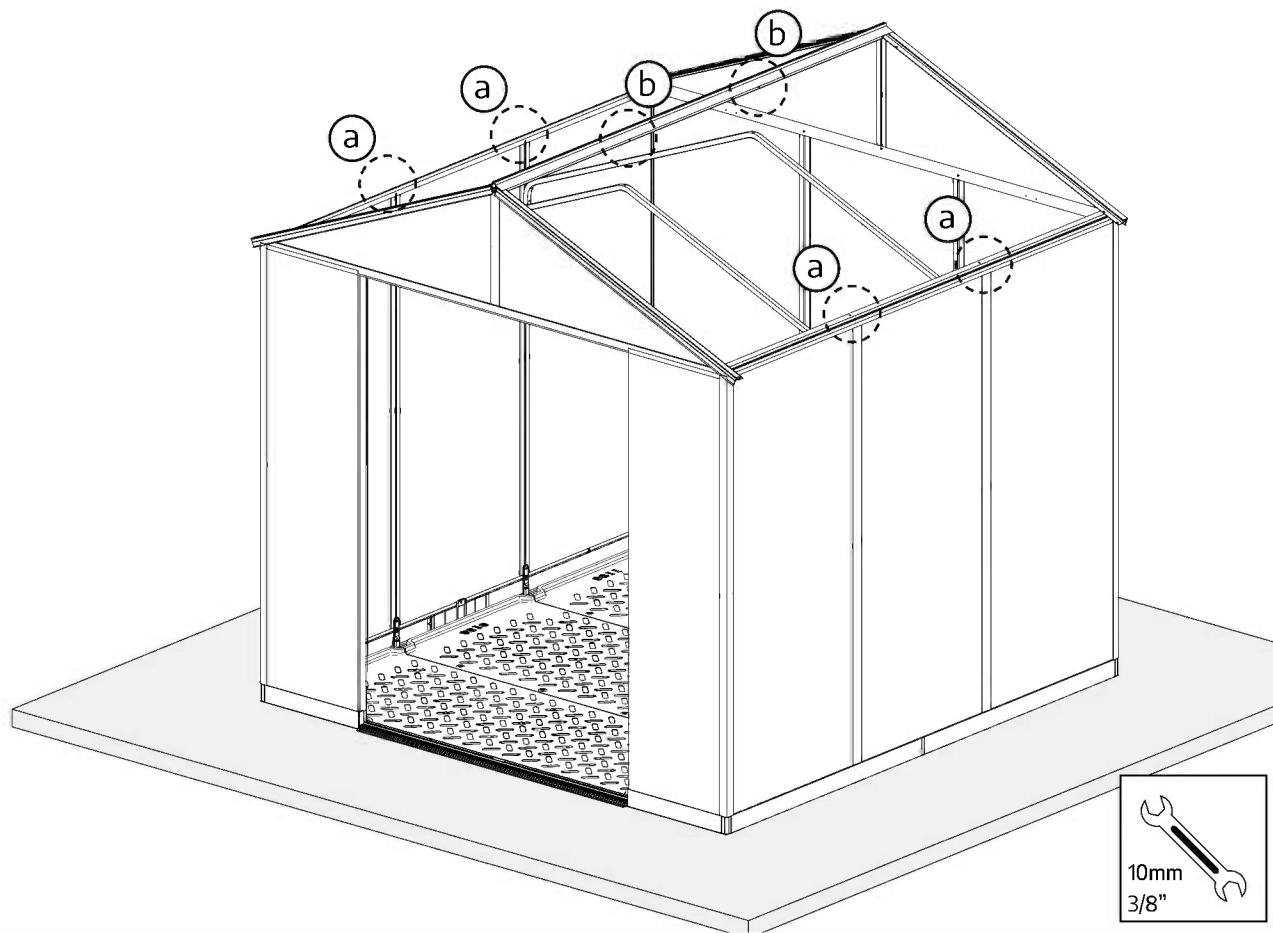
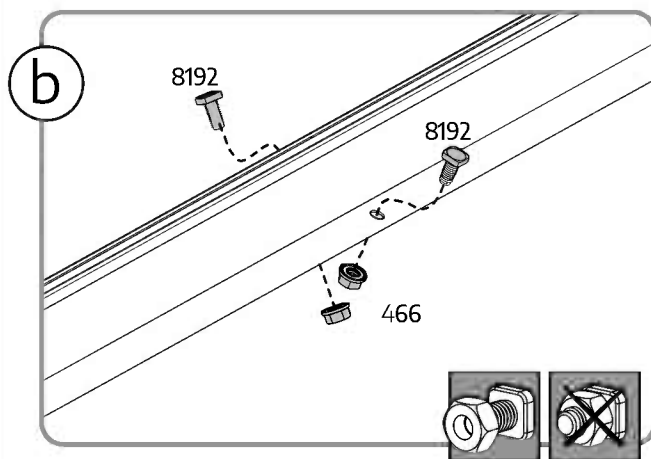
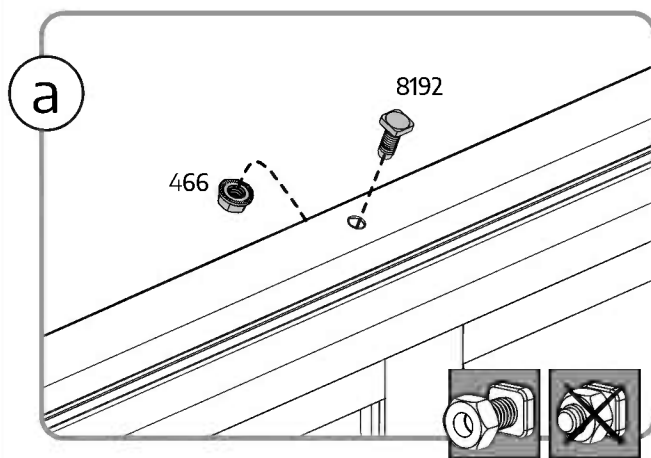





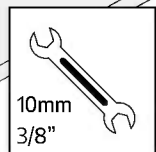
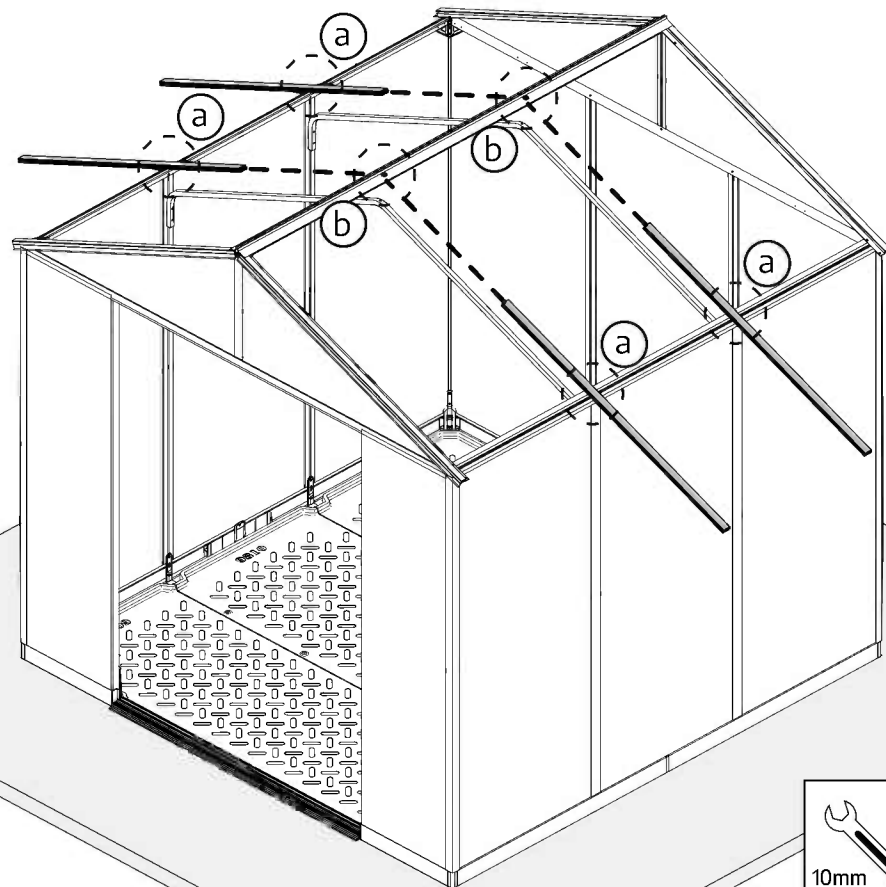
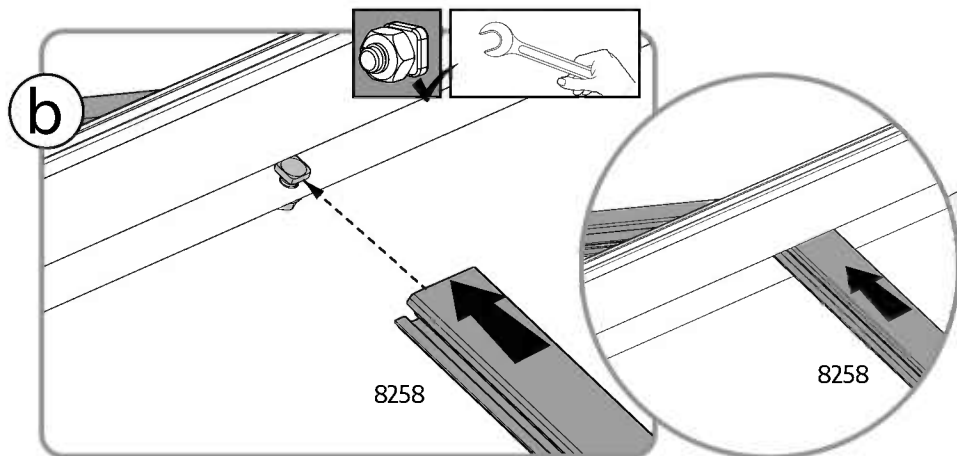
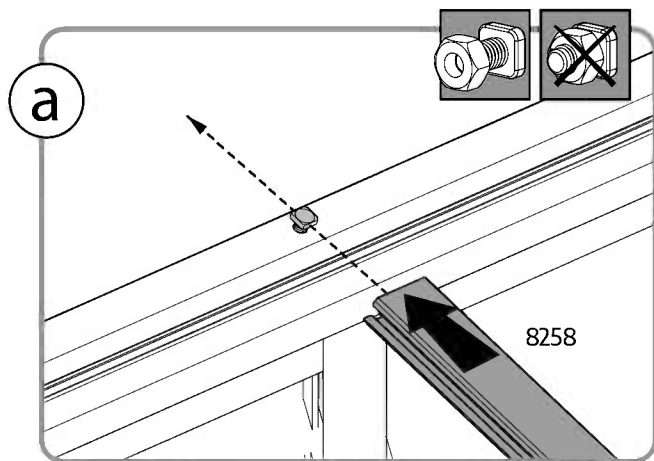






2

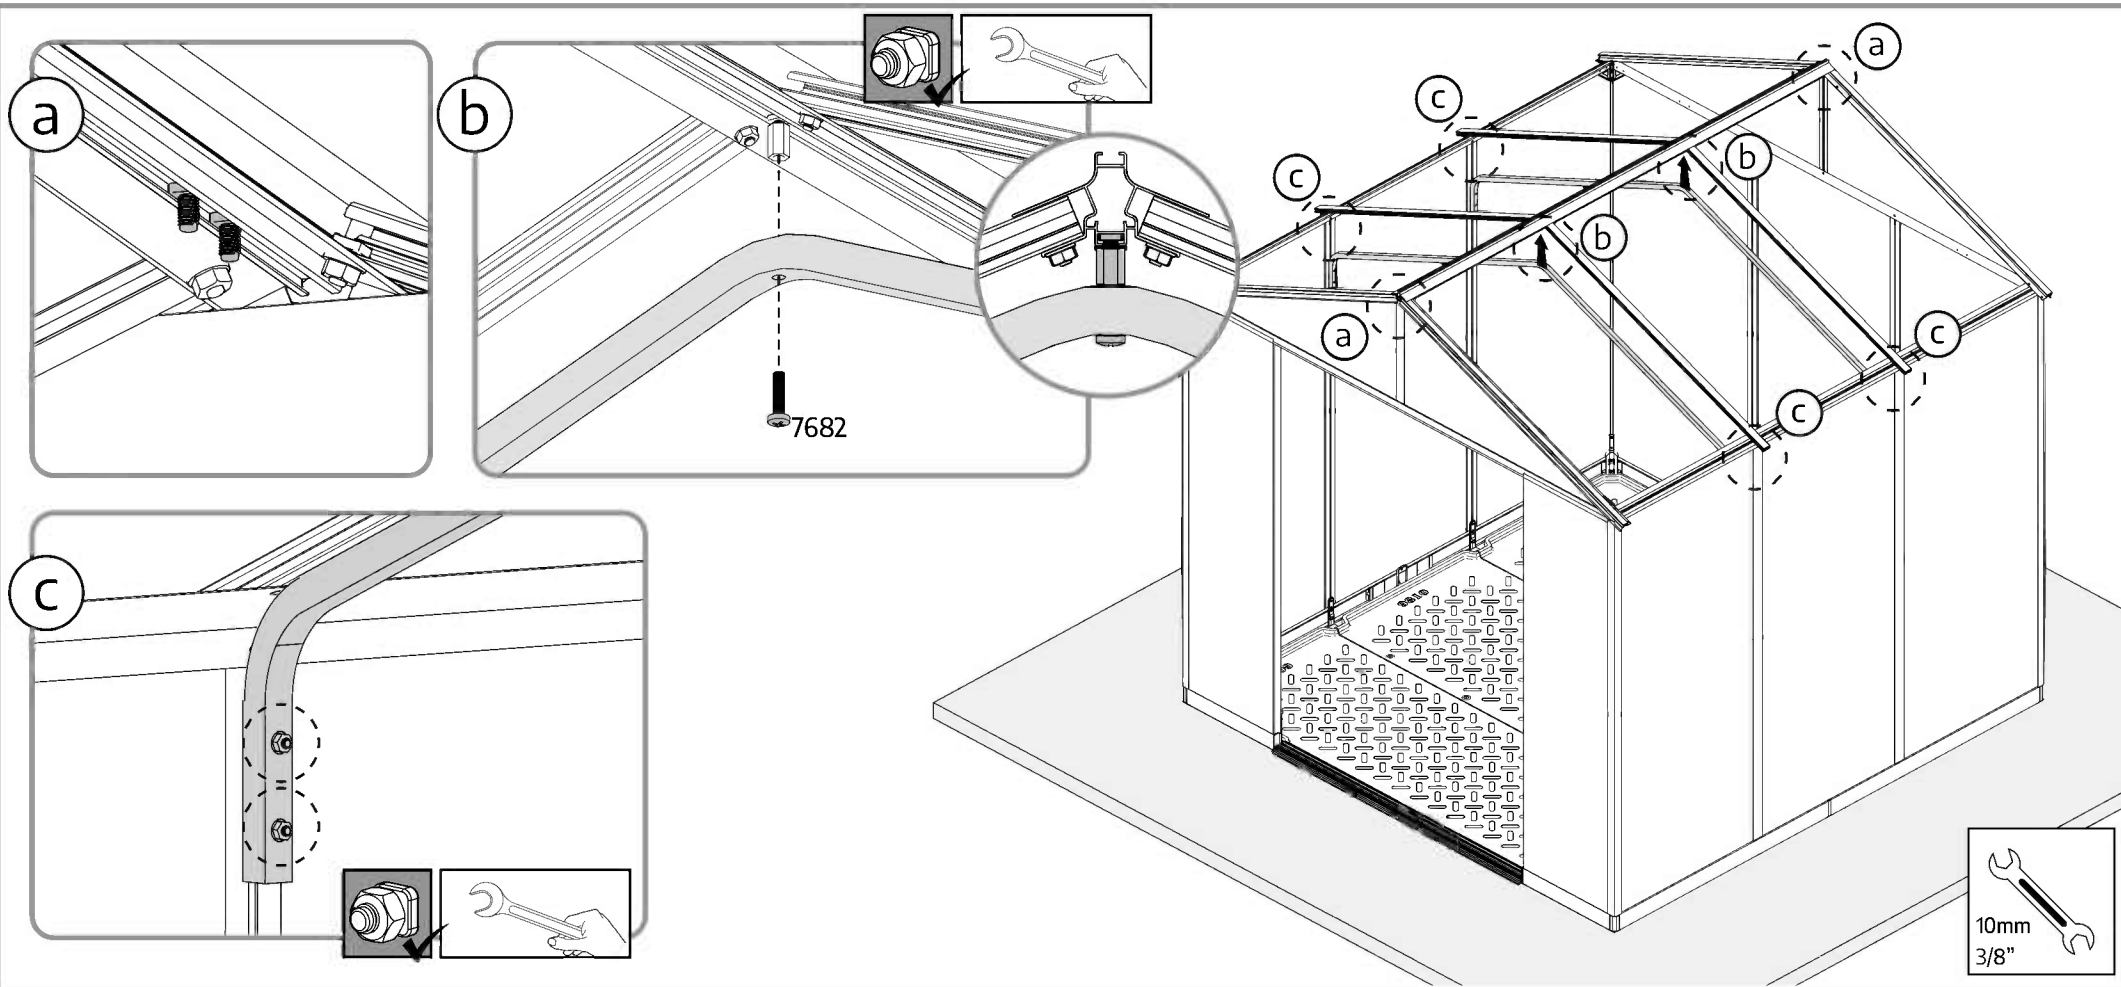





10mm
3/8"

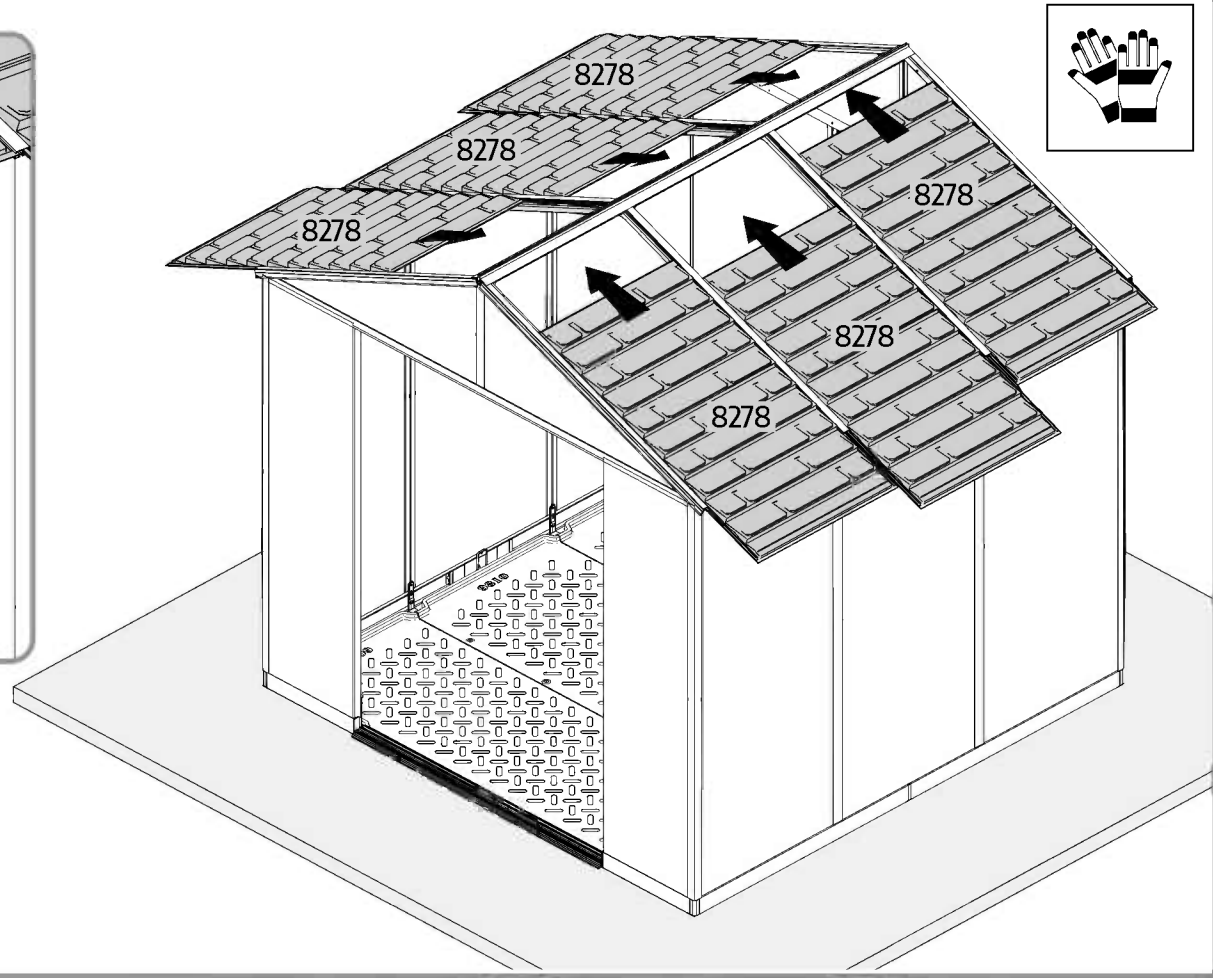
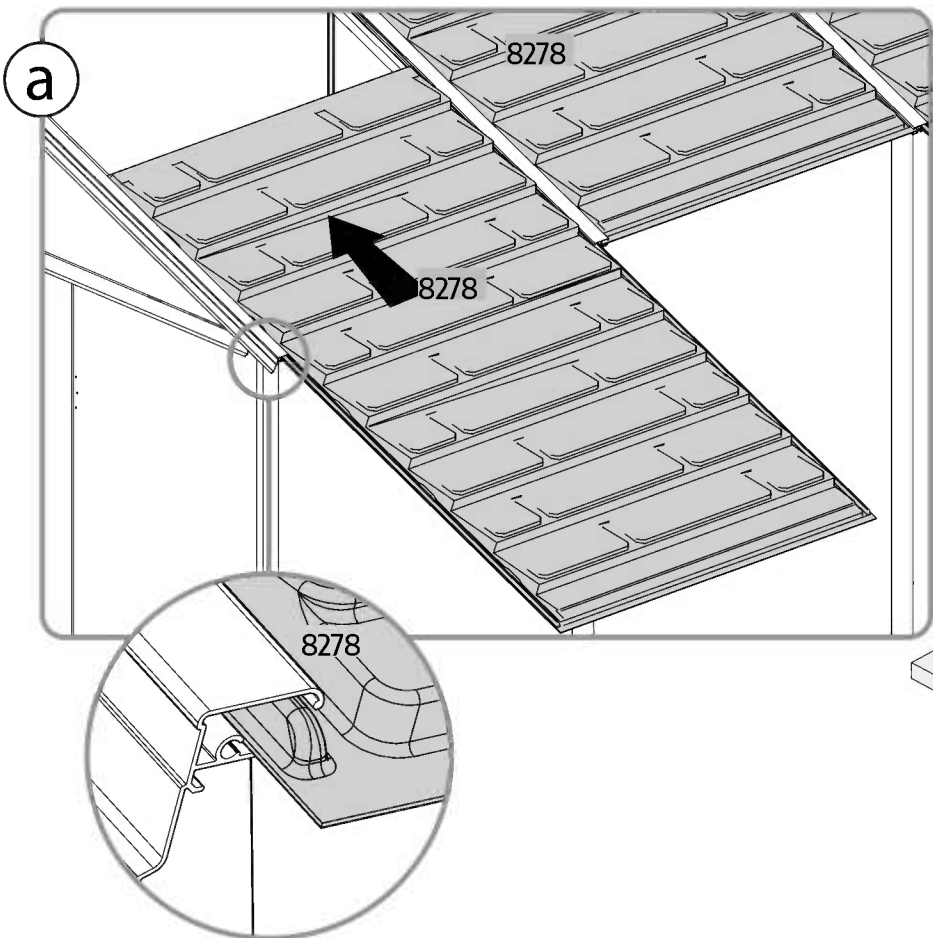
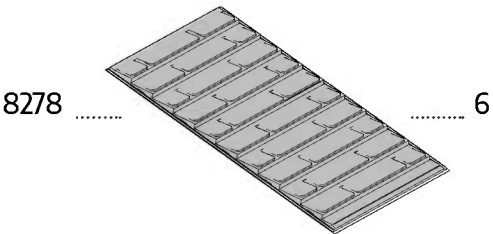


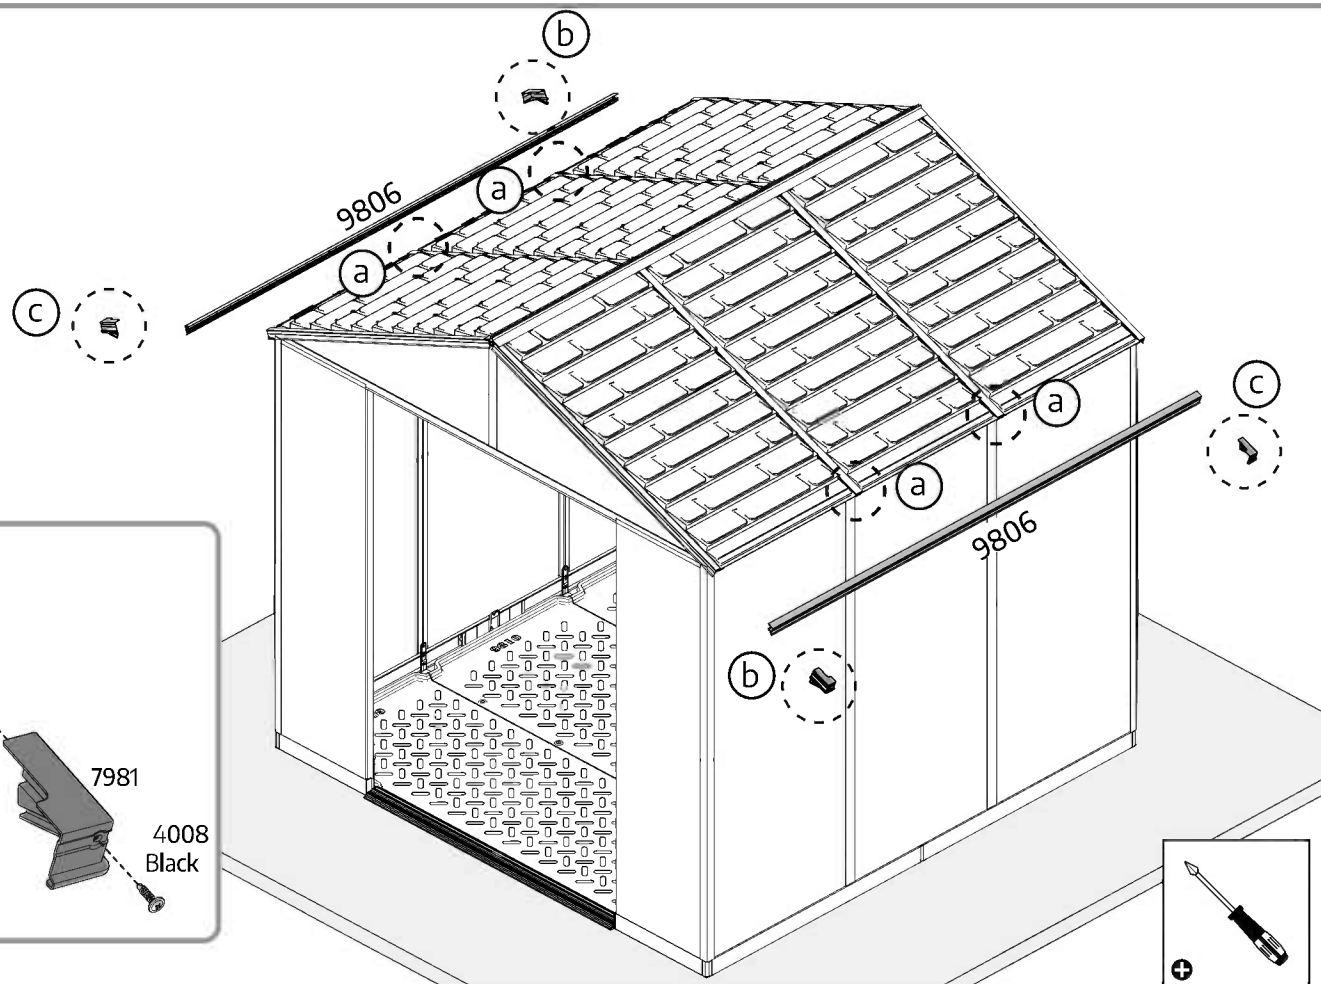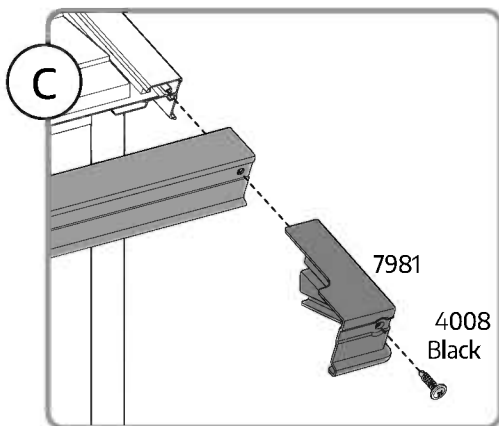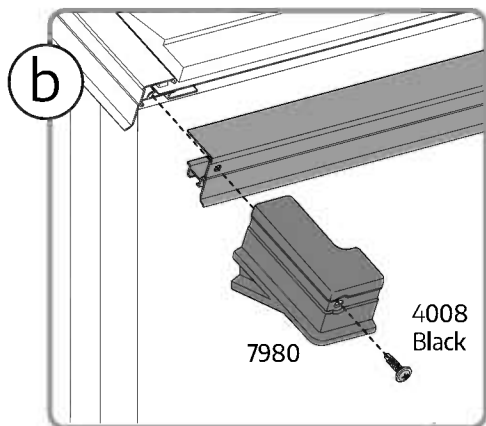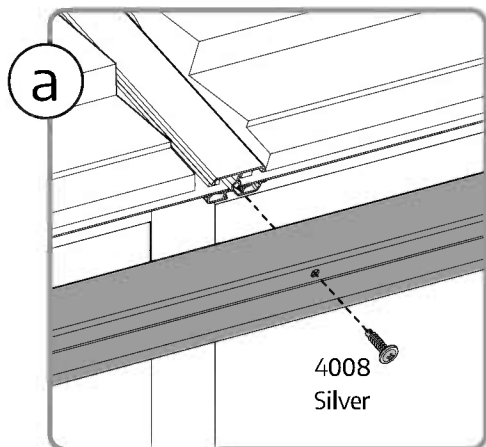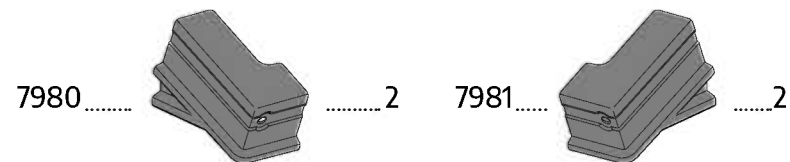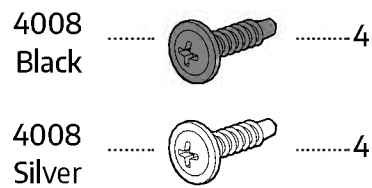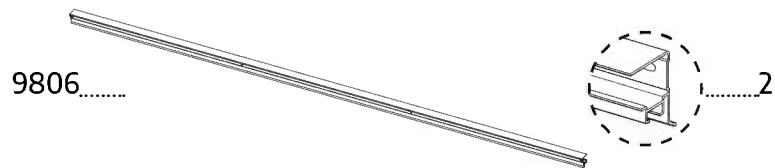


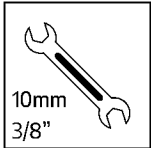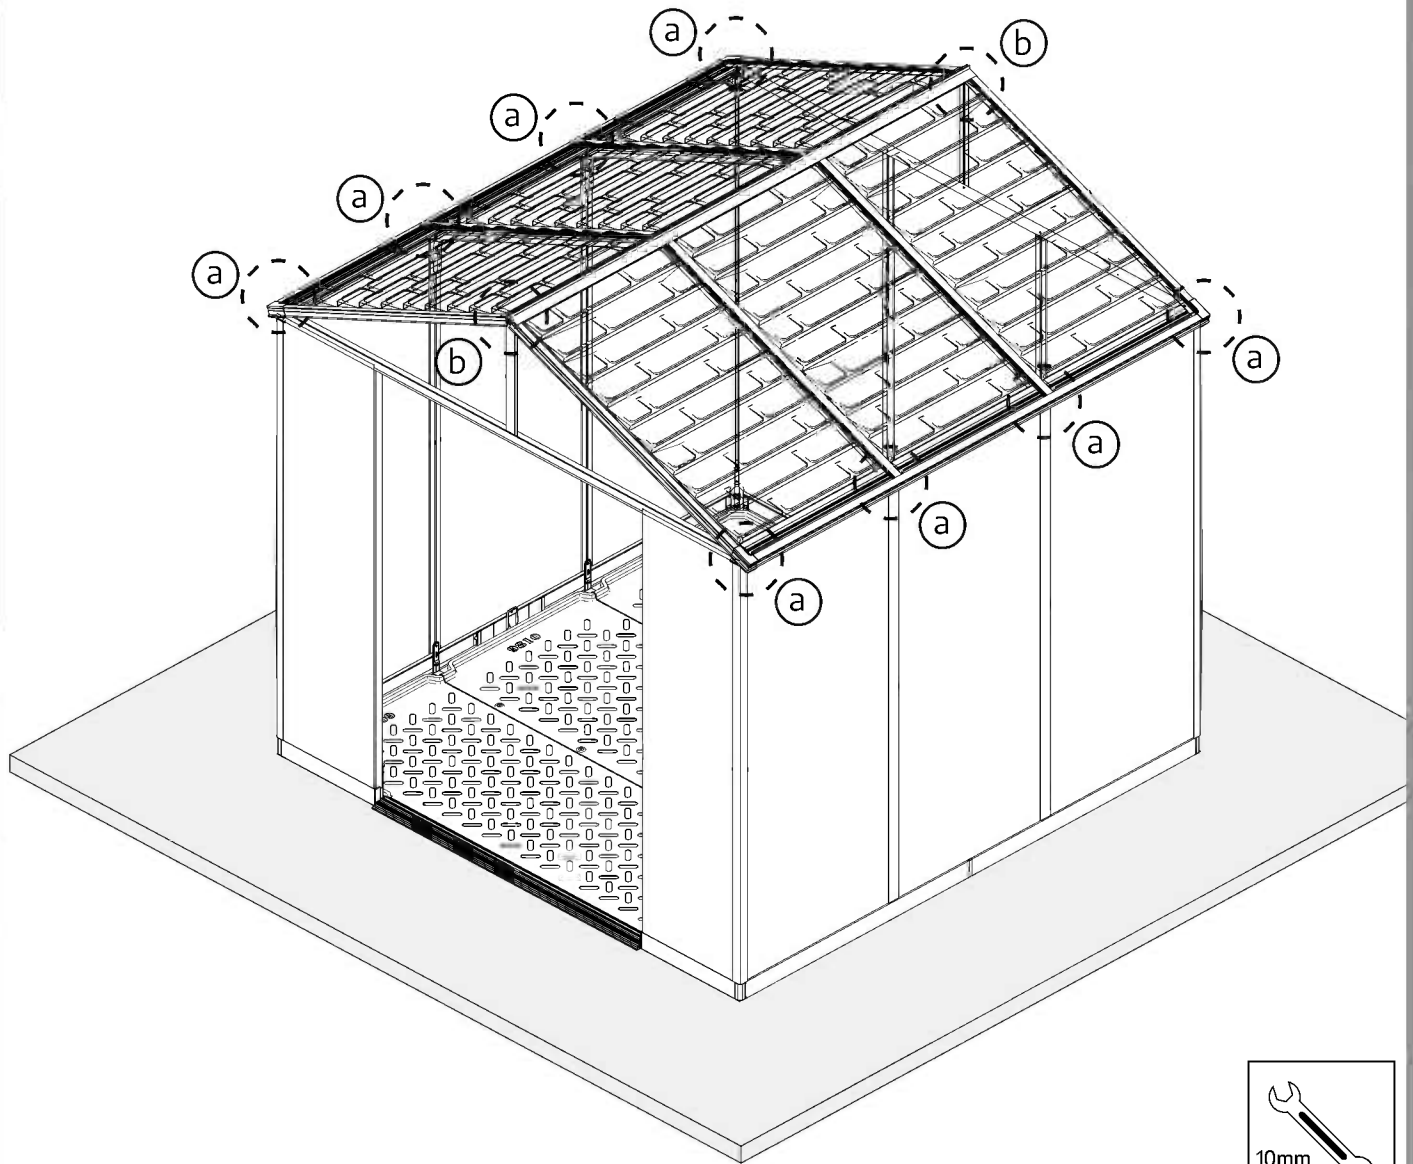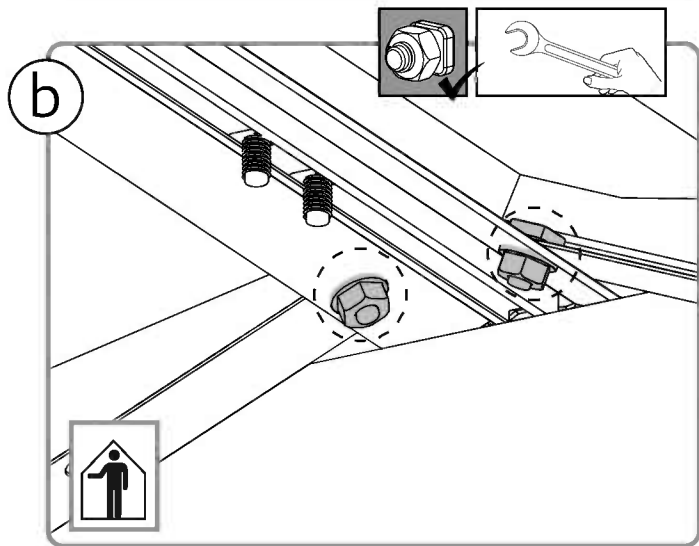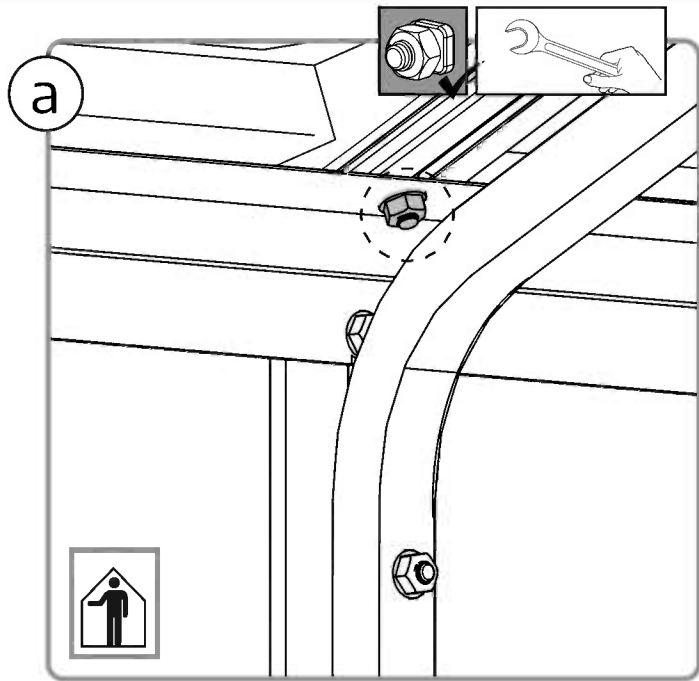




31  When assembling the doors, pay attention to the direction of the panels, profiles and holes.

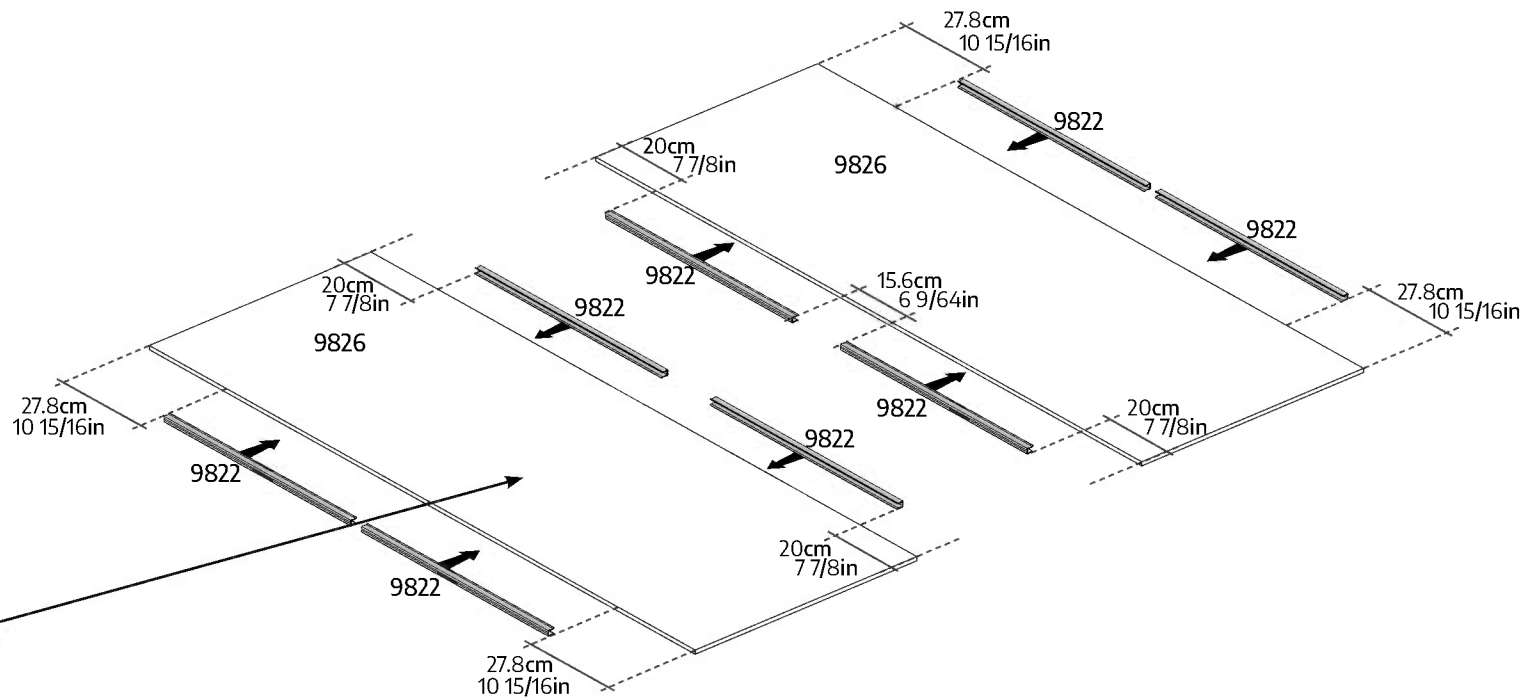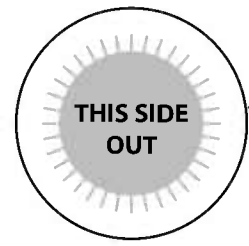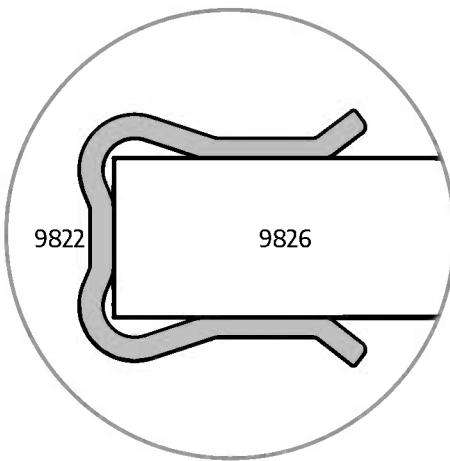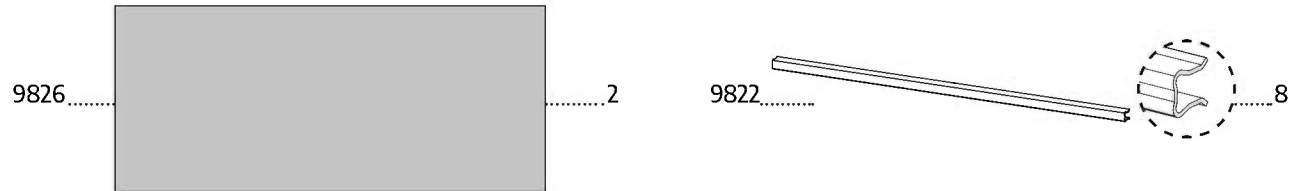

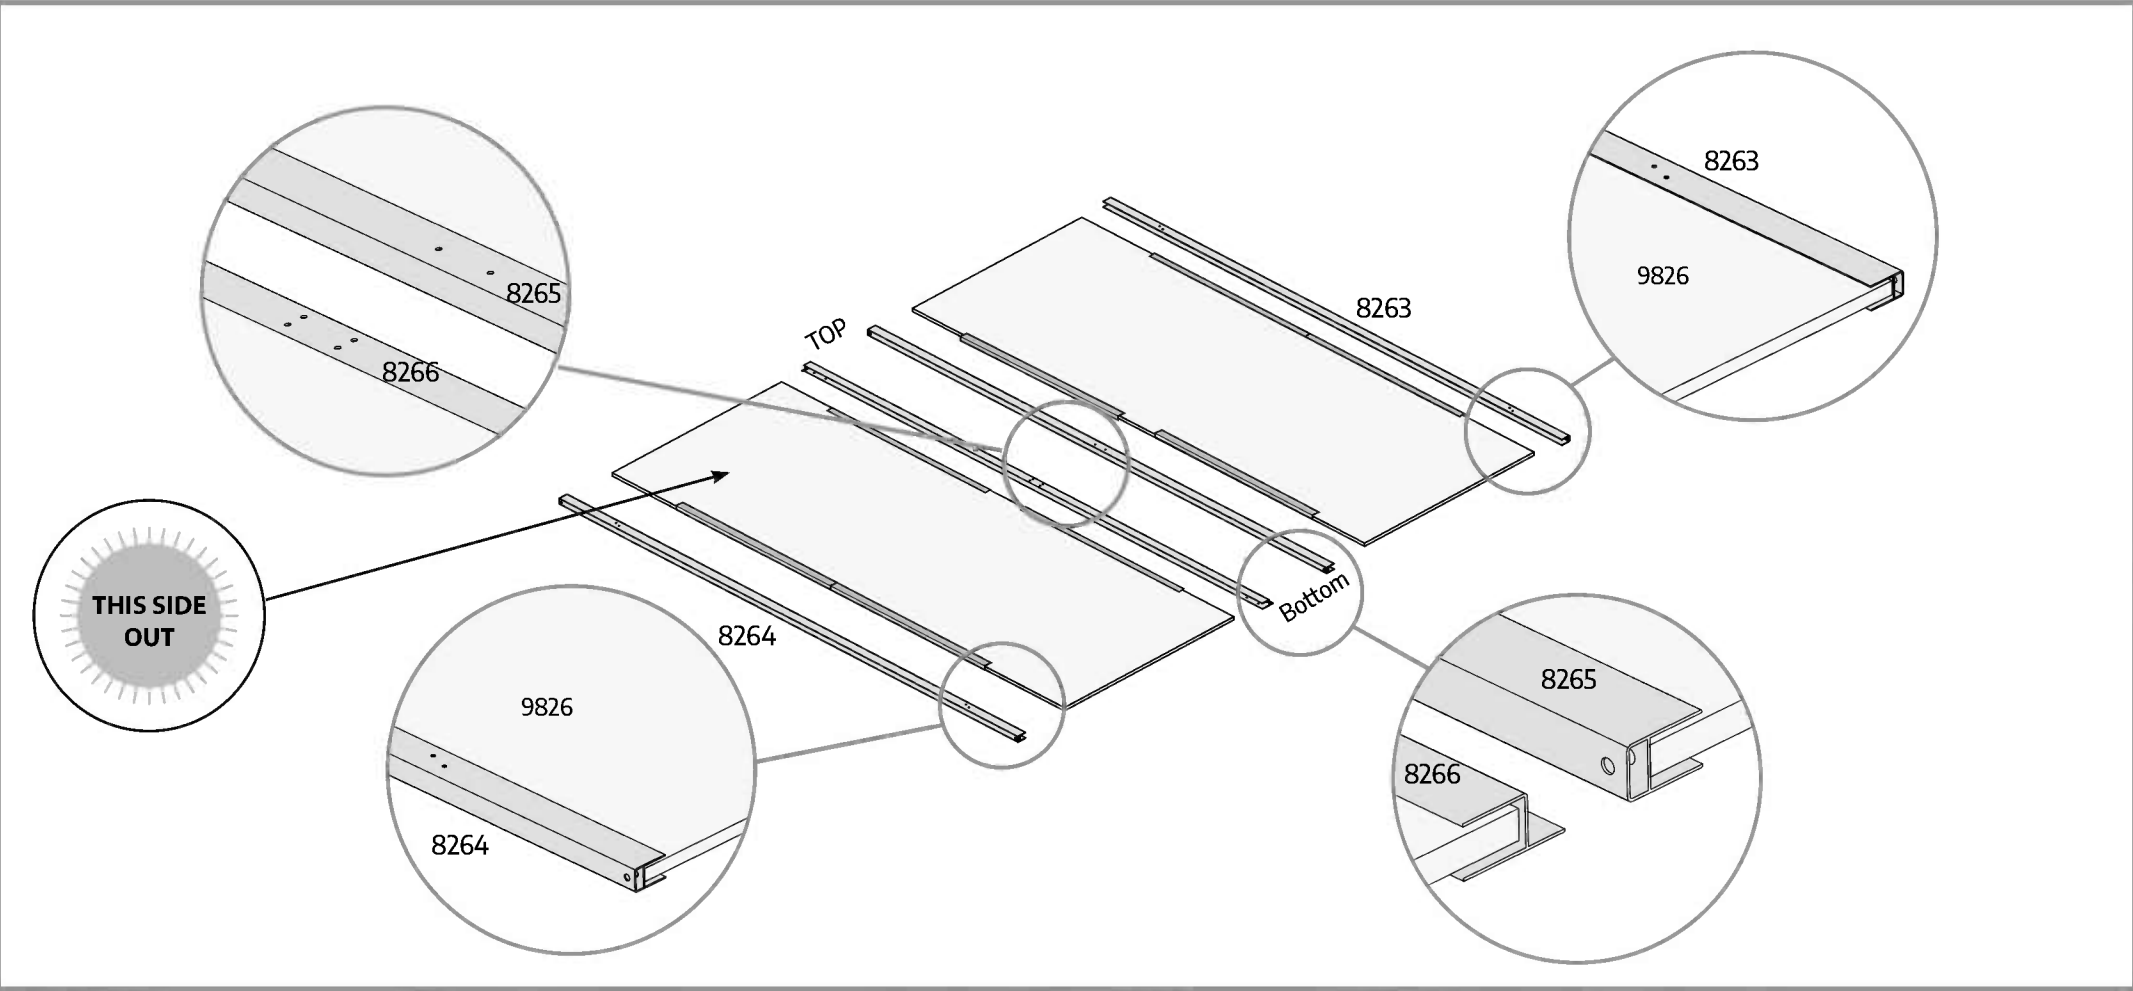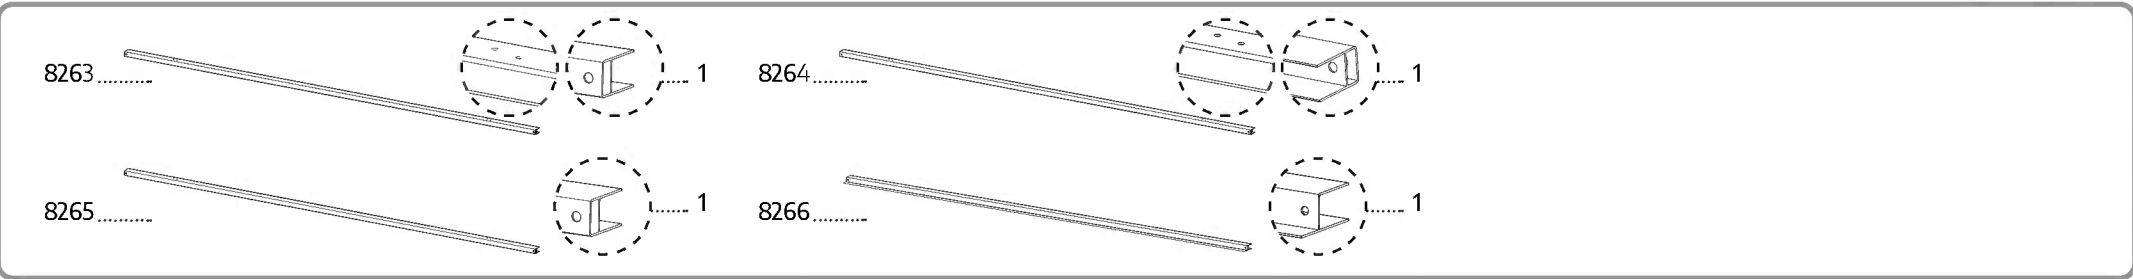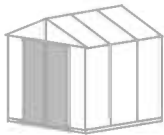







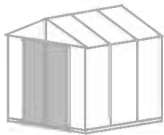



- 7726 2 9932 2 7524 8

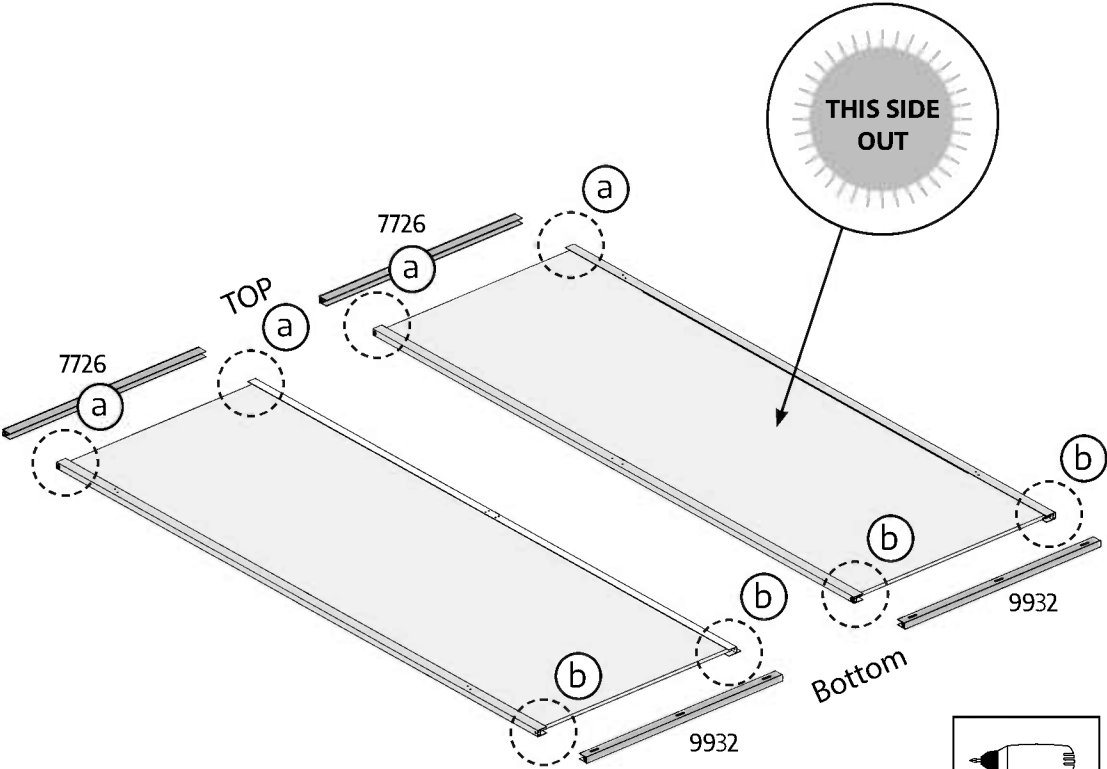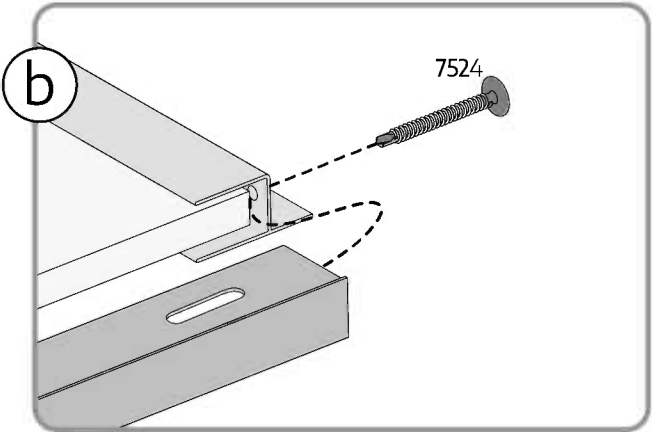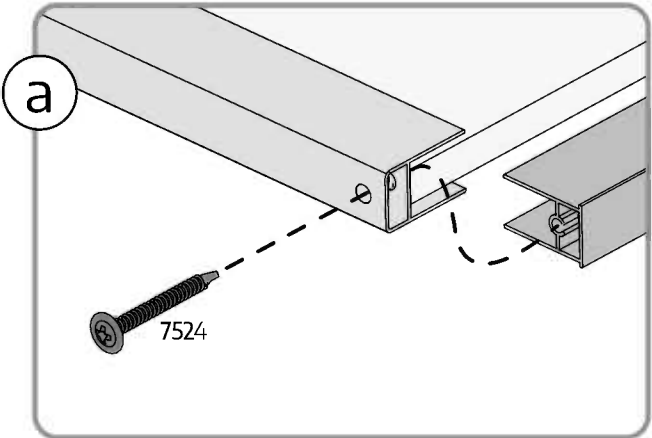




- 7356..... 4 7444..... 8 421..... 8 7175..... 8 422..... 8

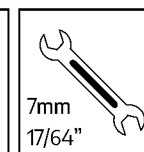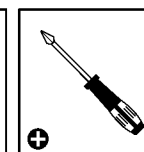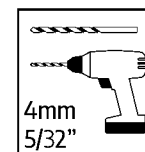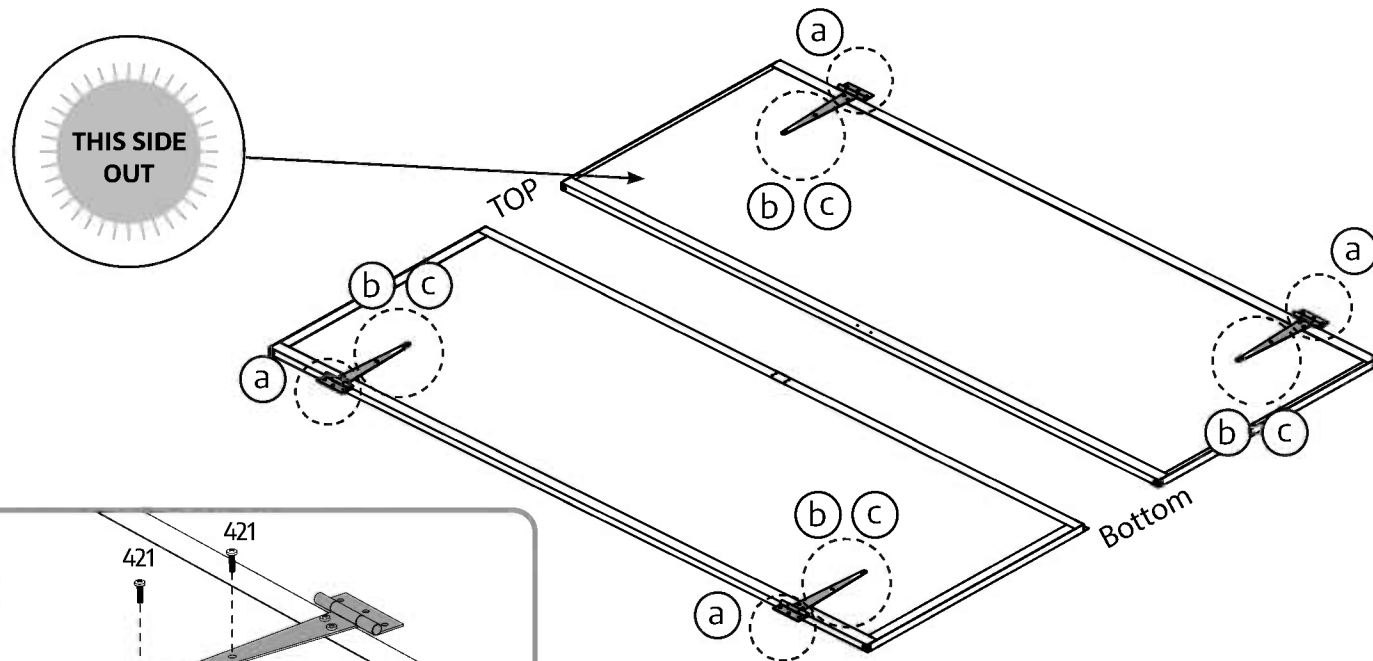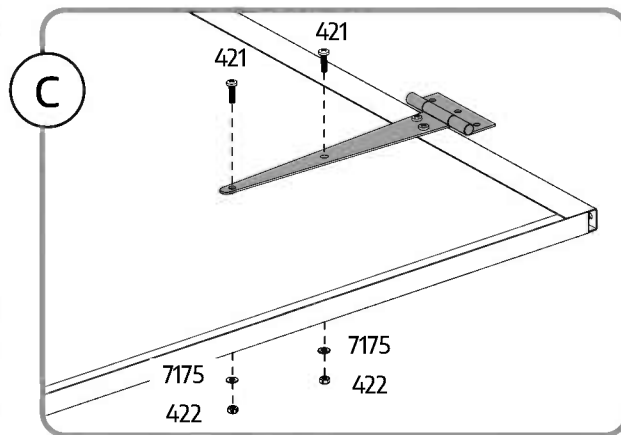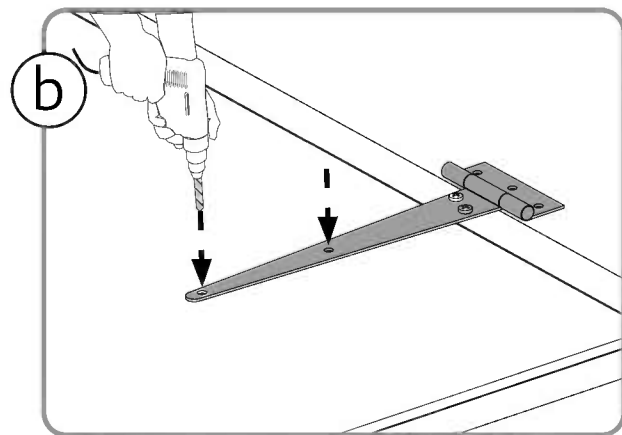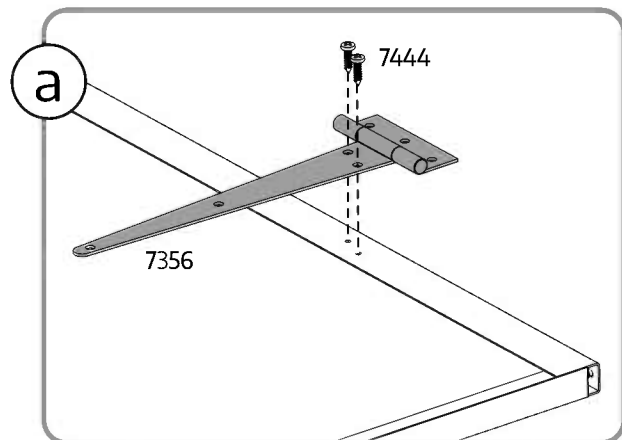



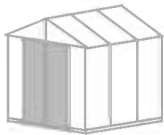


- 8480 1 7444 6 421 2 7175 2
- 422 2

a

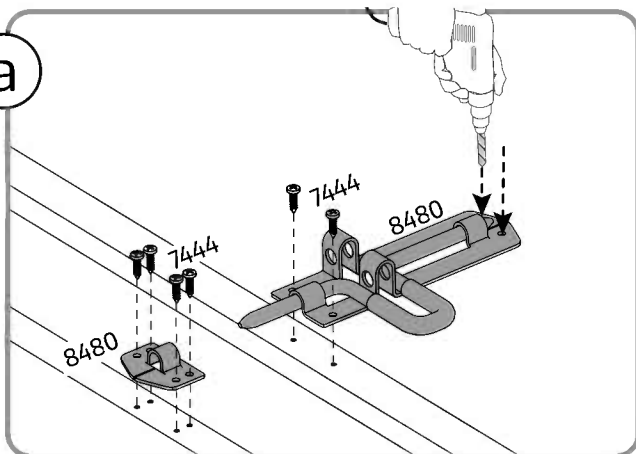

b

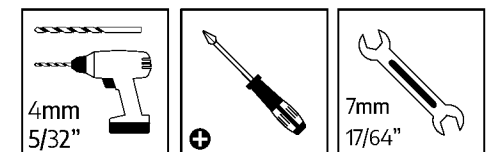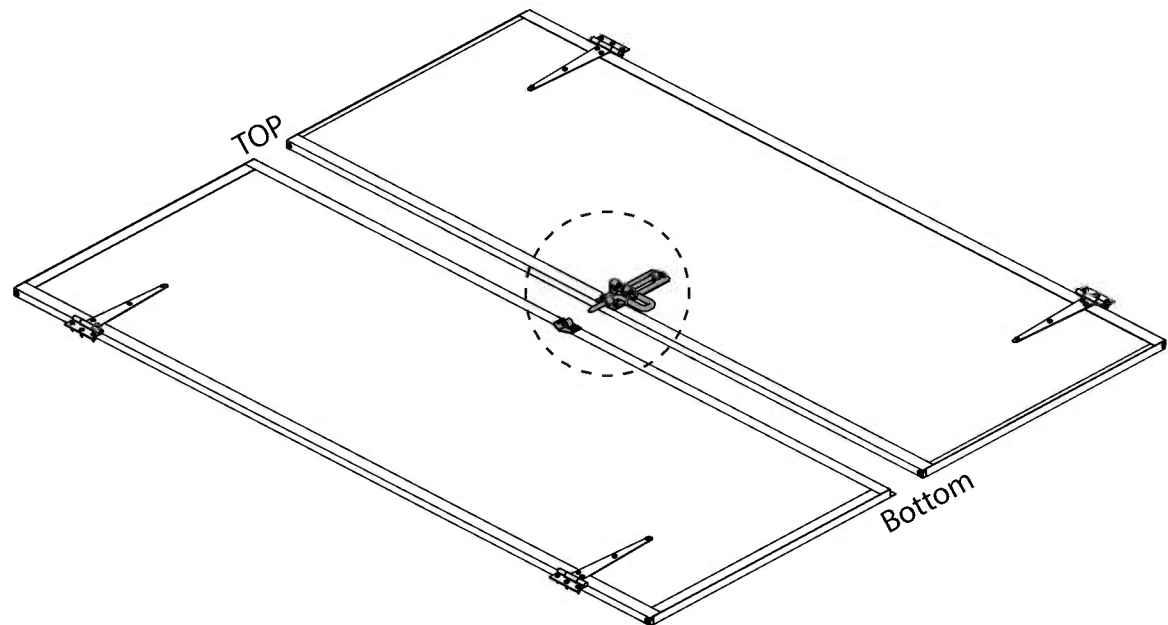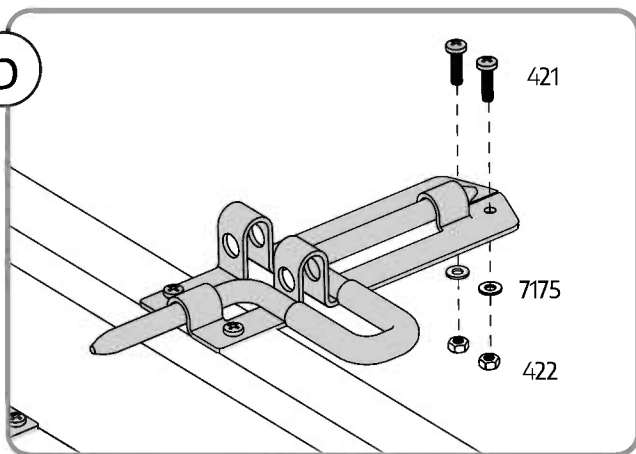






The door can be installed either as a left or right hand door. These instructions show a right hand door assembly.



7444 12




12

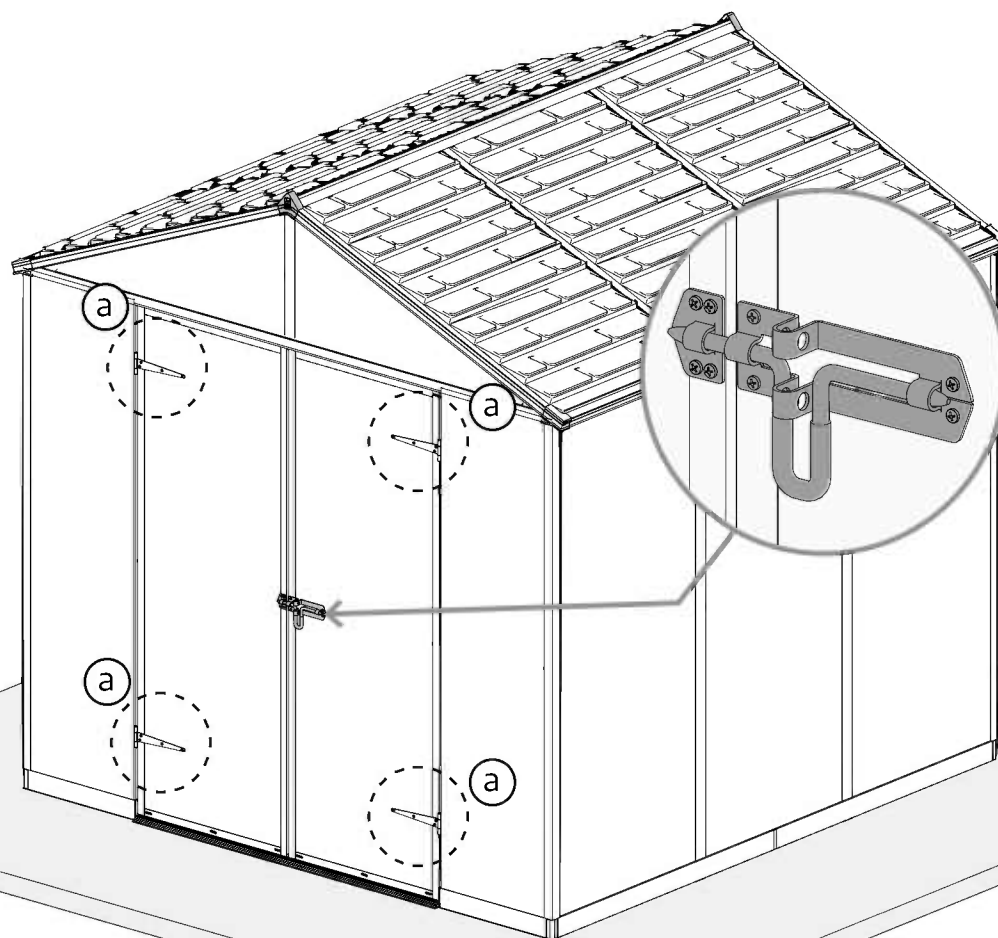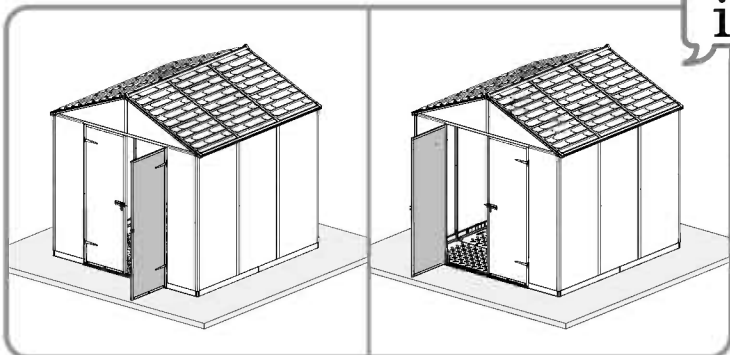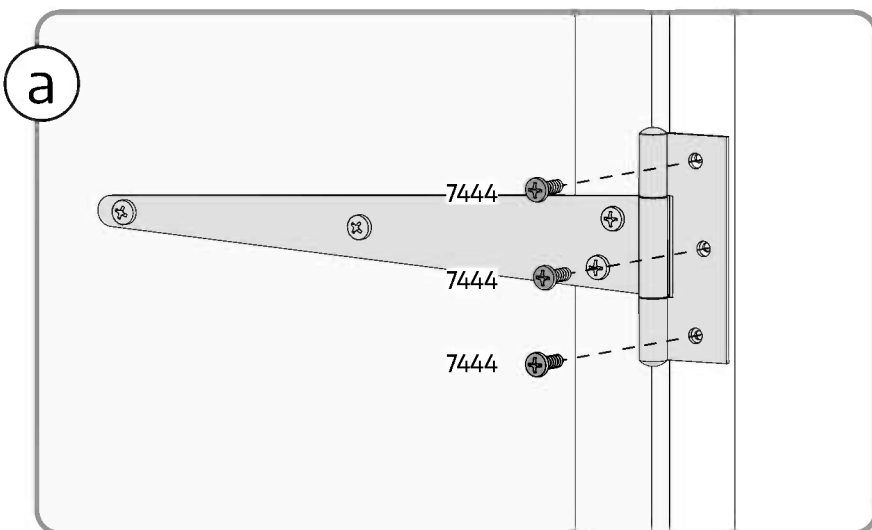



9707





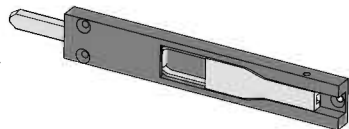


..... 2

9708




..... 6

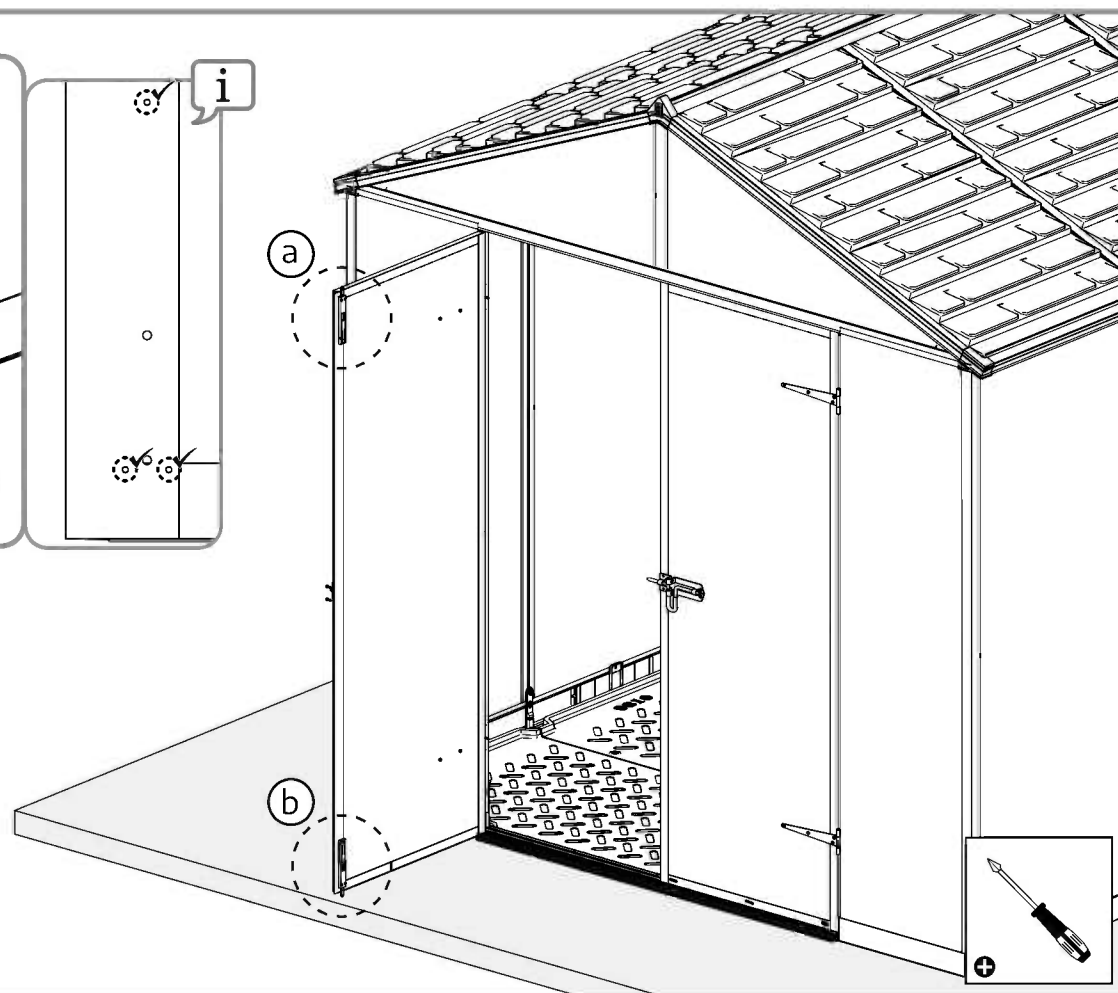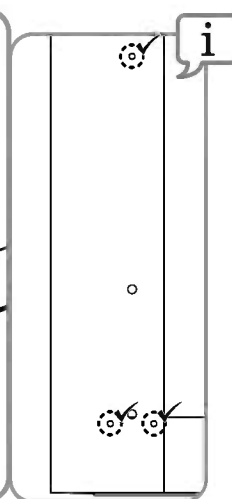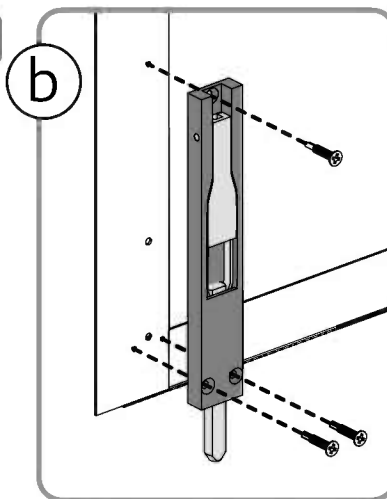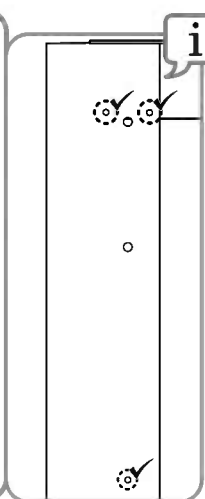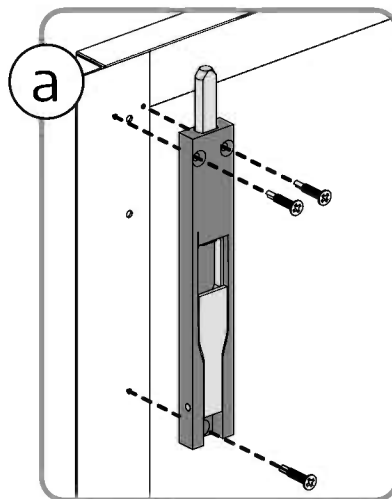




- 9735 2 8104 2 466 6
-

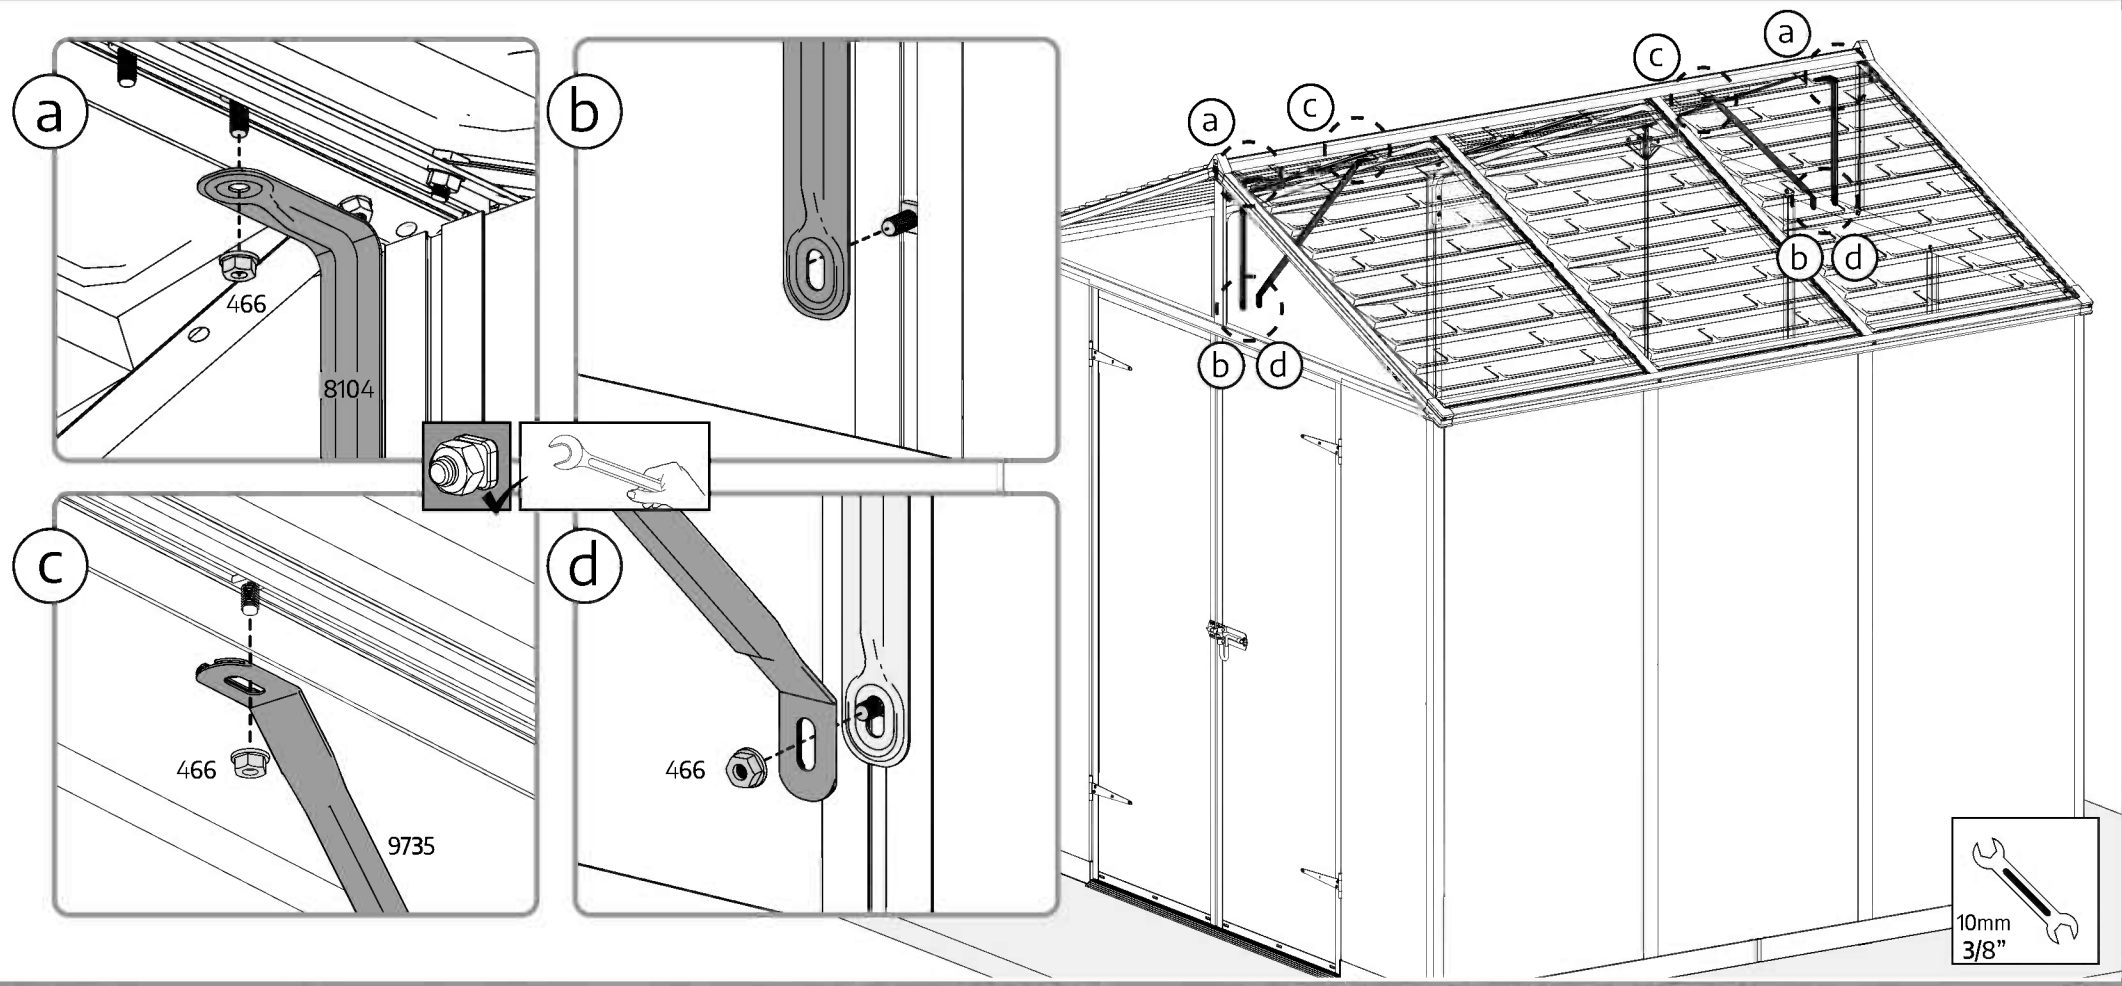


39



Install the sealing strip on the outer side as shown in the diagram a.
Use mild soap for easier assembly, cut sealing leftovers.

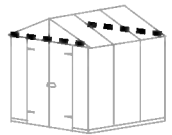

7869



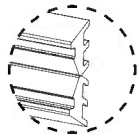


..... 1

a

7869

x4

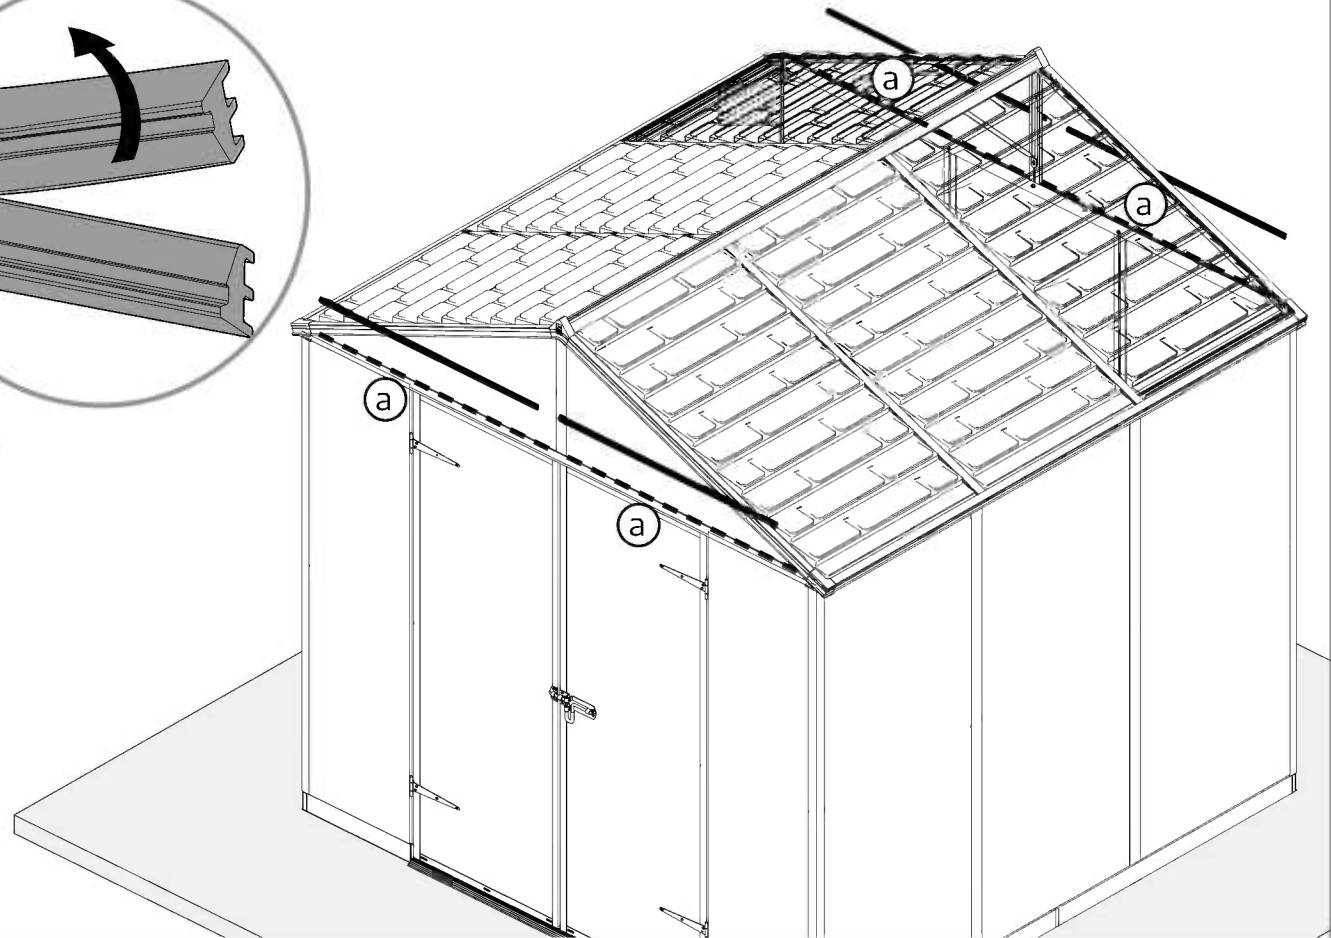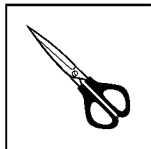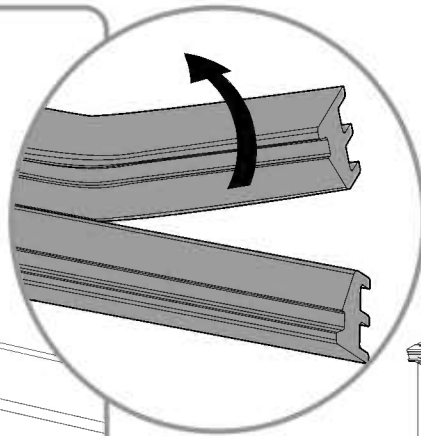

9819.....



.... 12

4010.....



....12

T40.....

