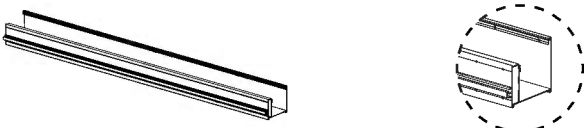
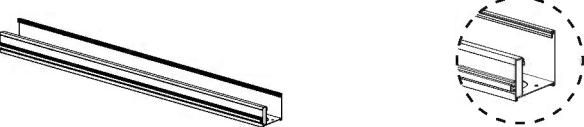
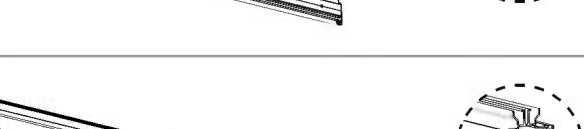
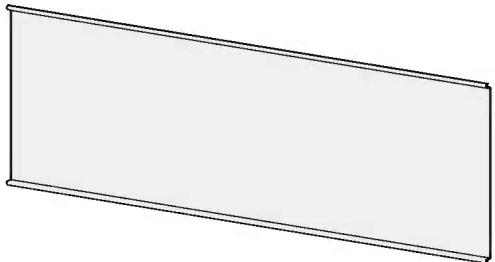
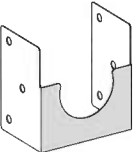
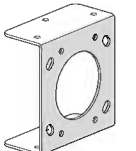
















Contents

Item		Qty.
9608		1
9609		1
9678		4
9387		2
9385		2
9378		4
9379		2







Item		Qty.
9372		2
9381		2
9380		4
9414		2
9420		5









Item		Qty.
9411		2
9402		4
9415		2
9416		2
9413	 Ø 75 mm	2







Contents

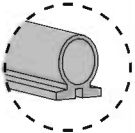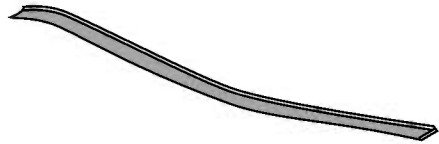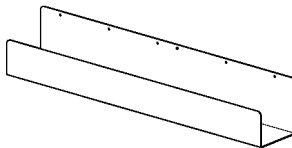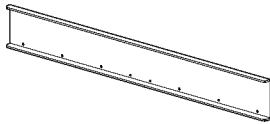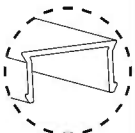Item		Qty.	Item		Qty.	Item		Qty.
8192		12 (+1)	9377		10	9417	 	10
466		12 (+1)	8303		2	9483		10
447		82 (+8)	9406		6	9408	 	2
447 BLACK		14 (+1)	9405		2			
7335		2 (+1)	9409		2			
9447		24 (+2)	7039		2			
9407		8	9618		1			
8082		8	9617		1			
97		6 (+1)	9616		2	9371	 	4
4000		20 (+2)				9374		6
4010		20 (+2)						
433		20 (+2)						








Contents For Extension Kit 2.2 only



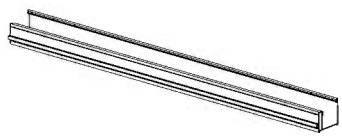
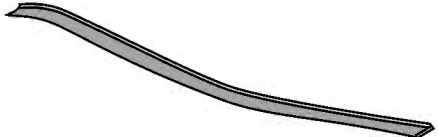
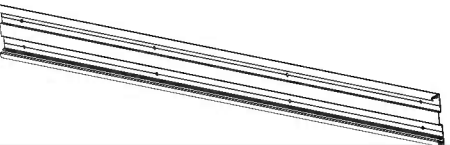
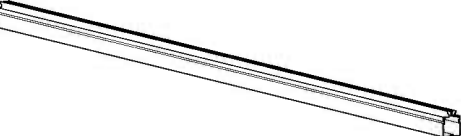
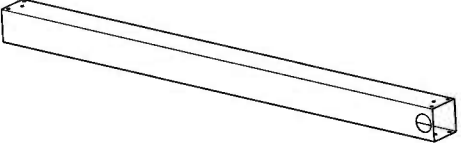
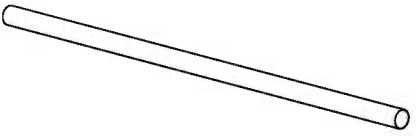
Item		Qty.
9610		1
9680		2
9394		1
9408		1
9393		1
9378		3
9372		1
9414		1

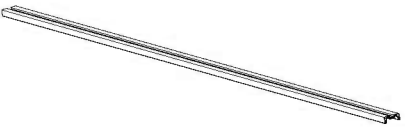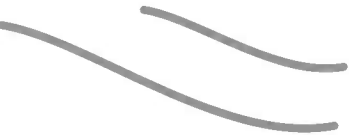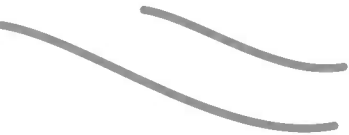
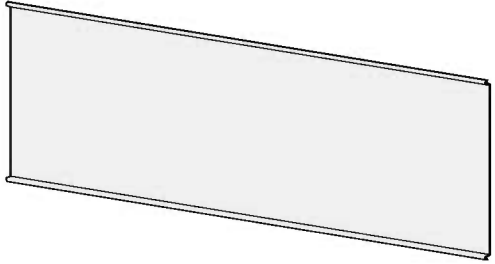




Item		Qty.
9380		3
9417		6
9483		6
9420		3
9389		2
9374		3
8192		6
466		6
4000		12
4010		12
433		12
447		49 (+5)
7335		3
9447		12
9407		4
8082		4
97		6

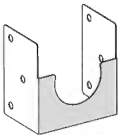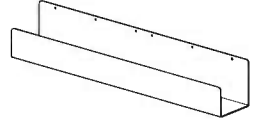Item		Qty.
9411		1
9402		2
9413		1
9415		1
7039		2
9377		6
9618		1
9617		1
8303		2
9406		3
9416		1



Contents For Extension Kit 3 only

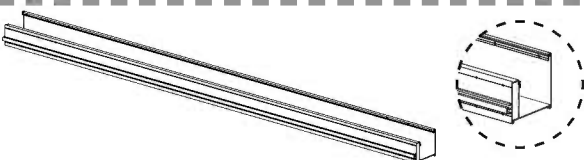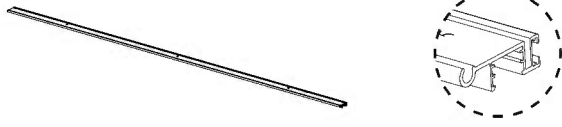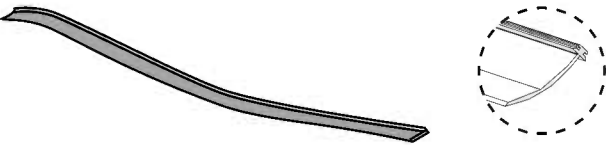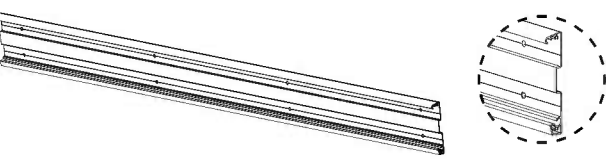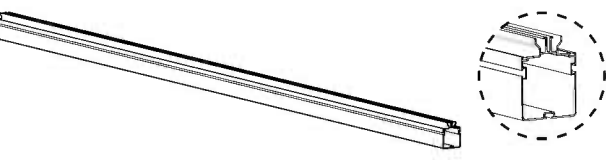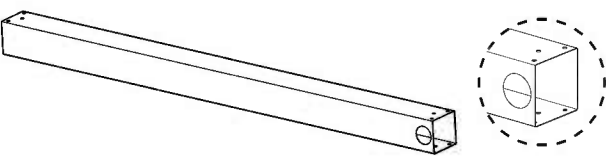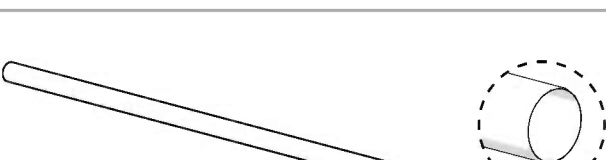Item		Qty.
9611		1
9682		2
9400		1
9408		1
9399		1
9378		4
9372		1
9414		1

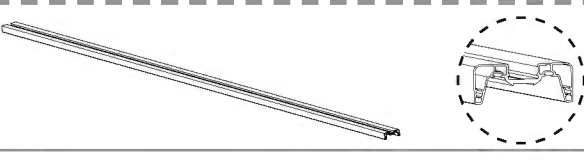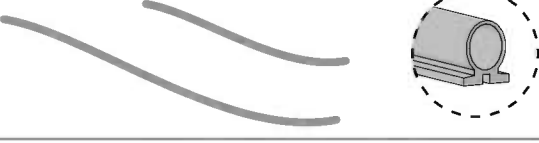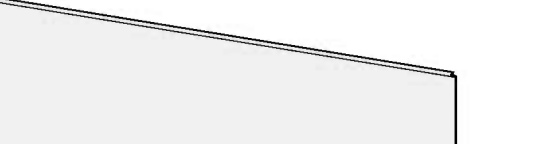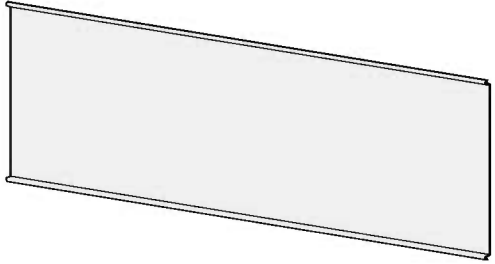Item		Qty.
9380		4
9417		8
9483		8
9420		4
9396		2
9374		4
8192		8
466		8
4000		15
4010		15
433		16
447		60 (+6)
7335		3
9447		12
9407		4
8082		4
97		6

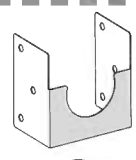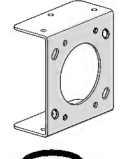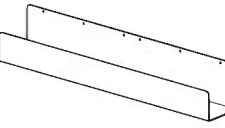Item		Qty.
9411		1
9402		2
9413		1
9415		1
7039		2
9377		8
9618		1
9617		1
8303		2
9406		4
9416		1

1


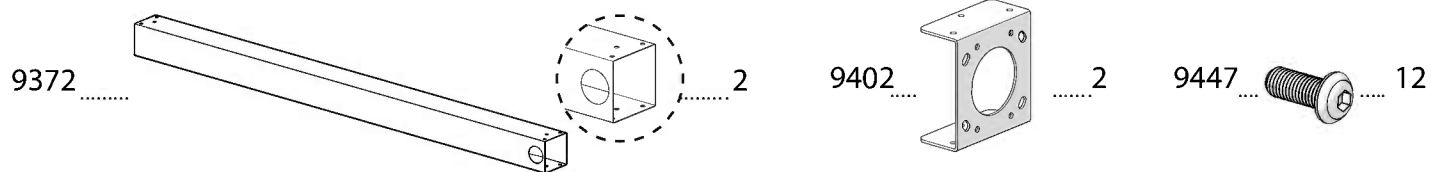
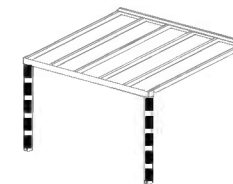


Extension Kit

9372+1



9402+1

9447+6

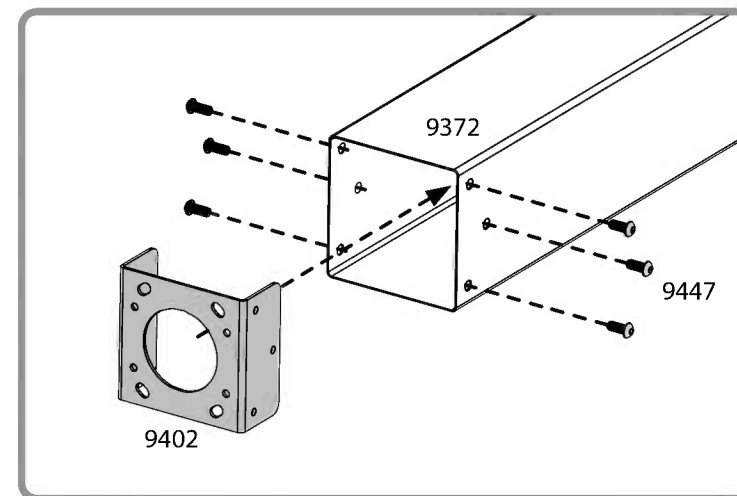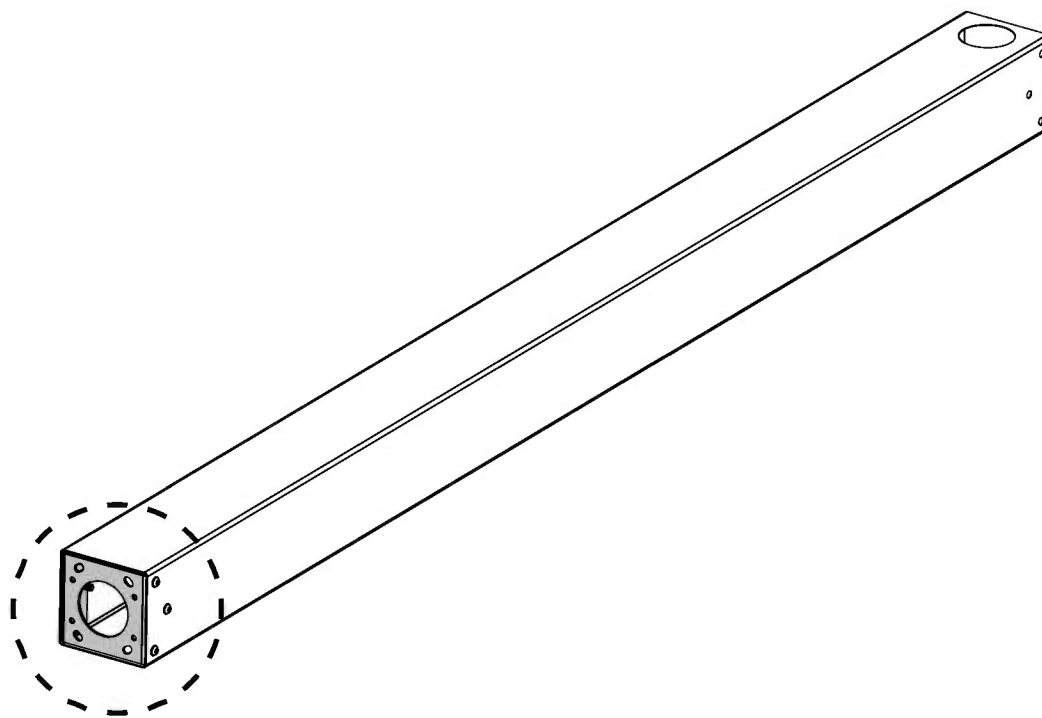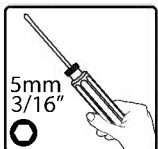




x2


+x1

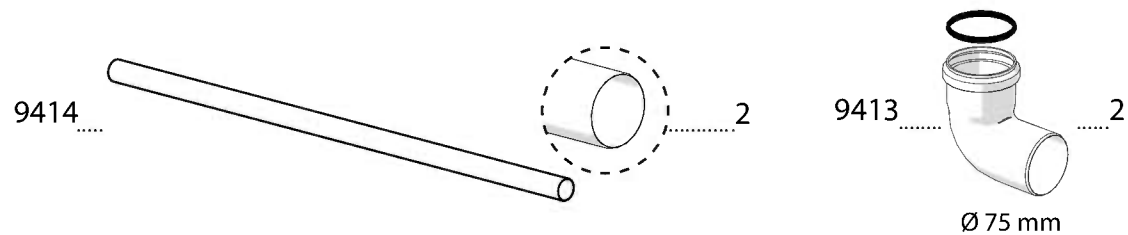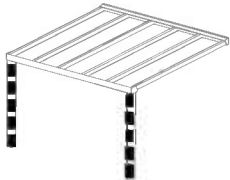



Extension Kit		
9414		+1
9413		+1

x2 +x1

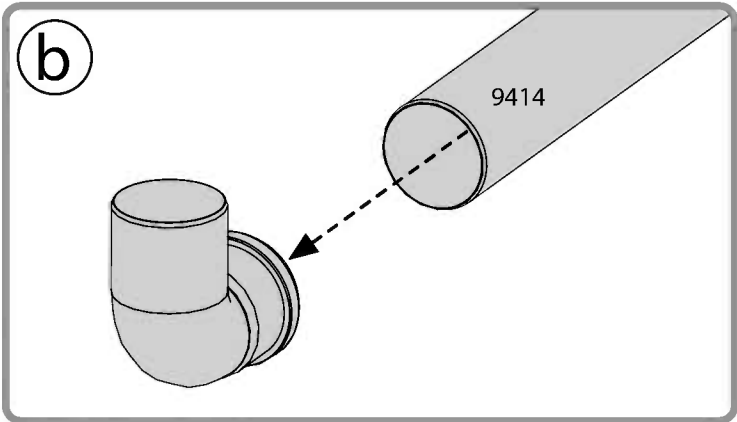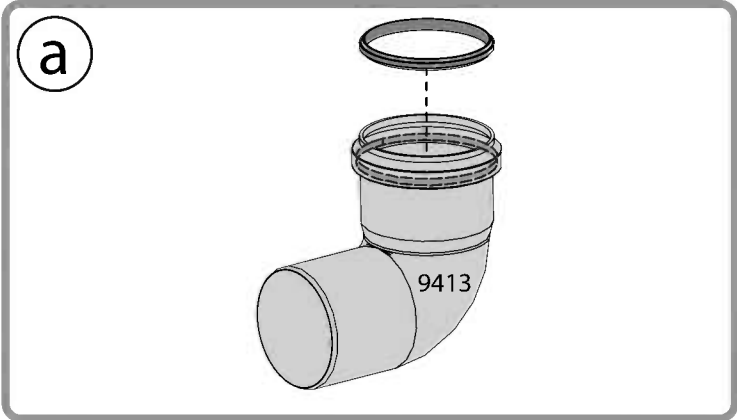
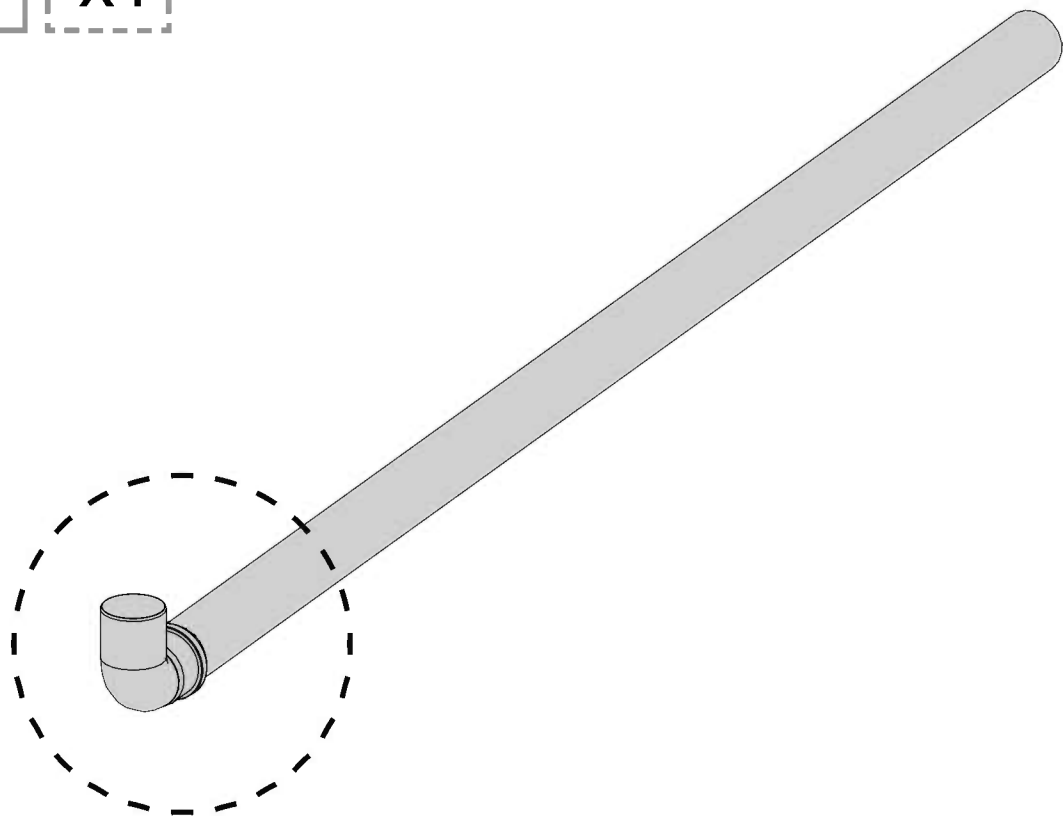


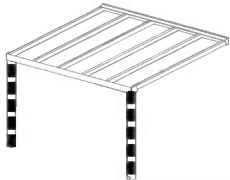

x2 +x1

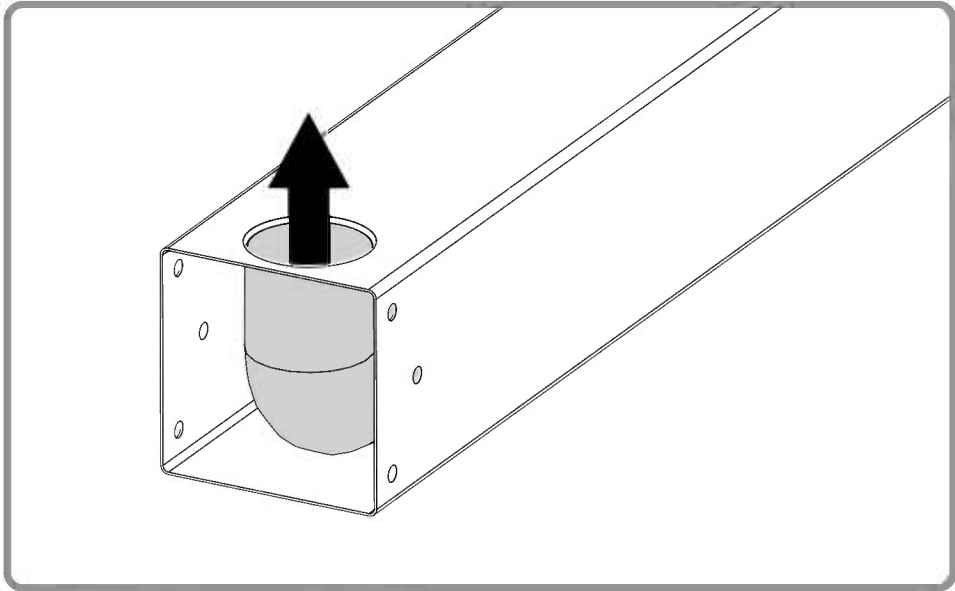
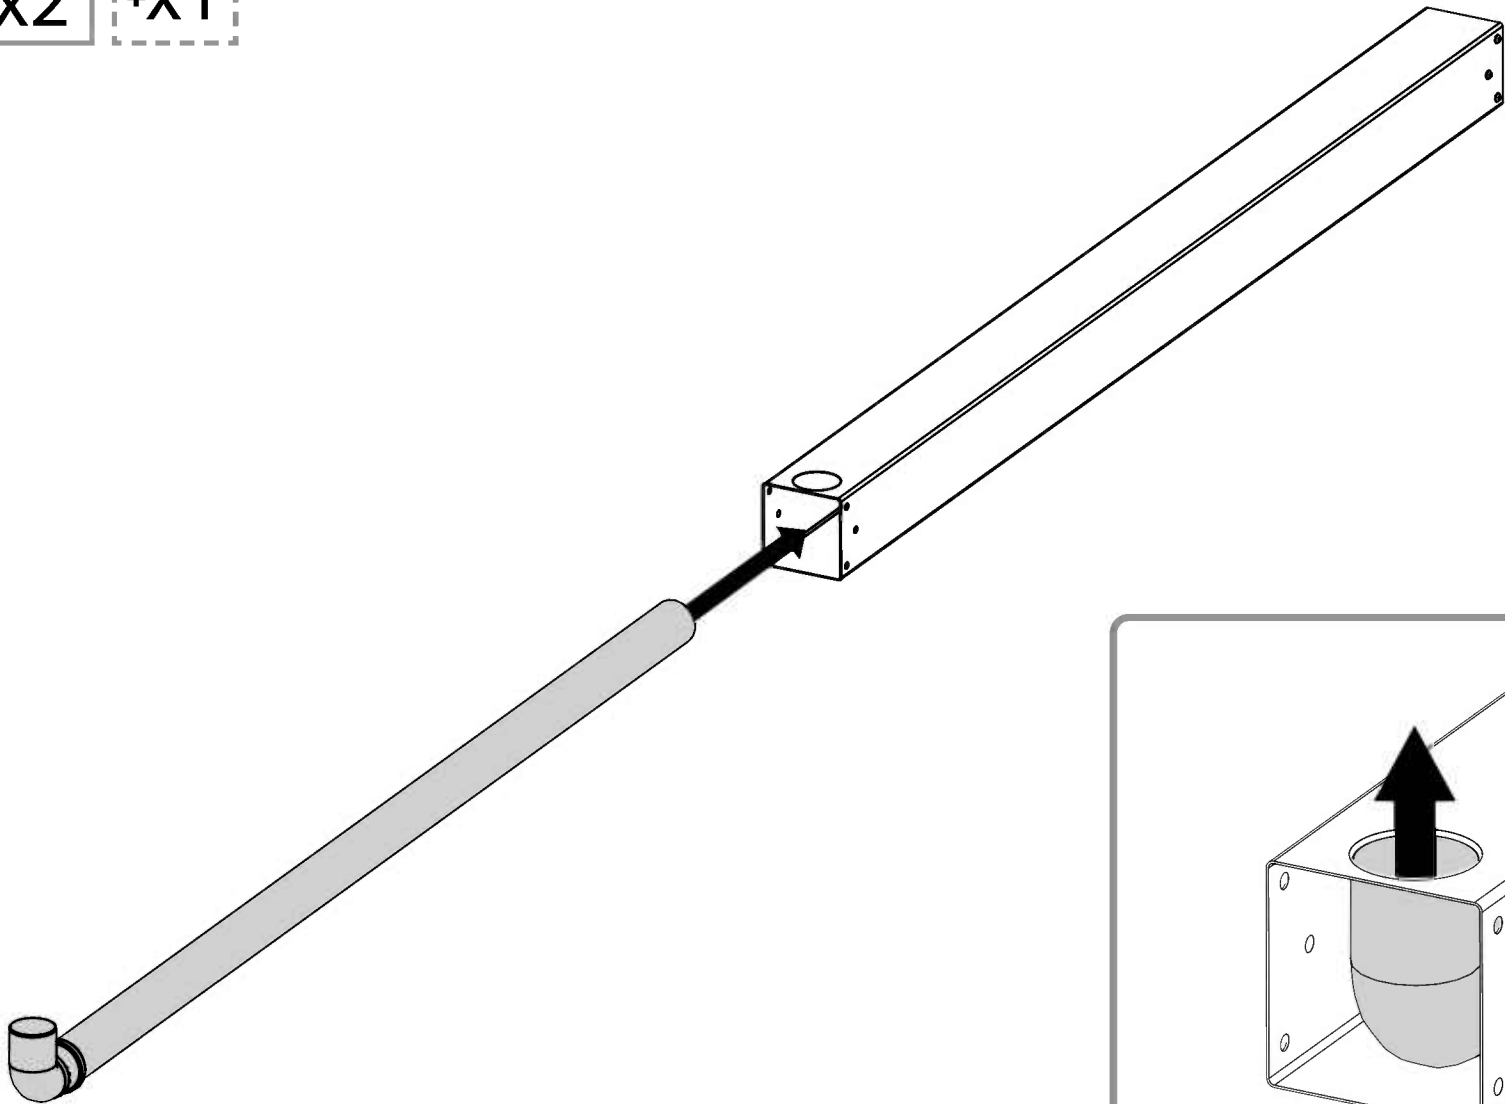


4

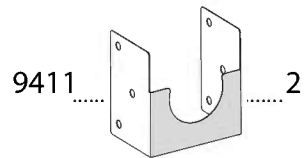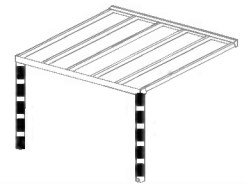

Extension Kit


9411+1






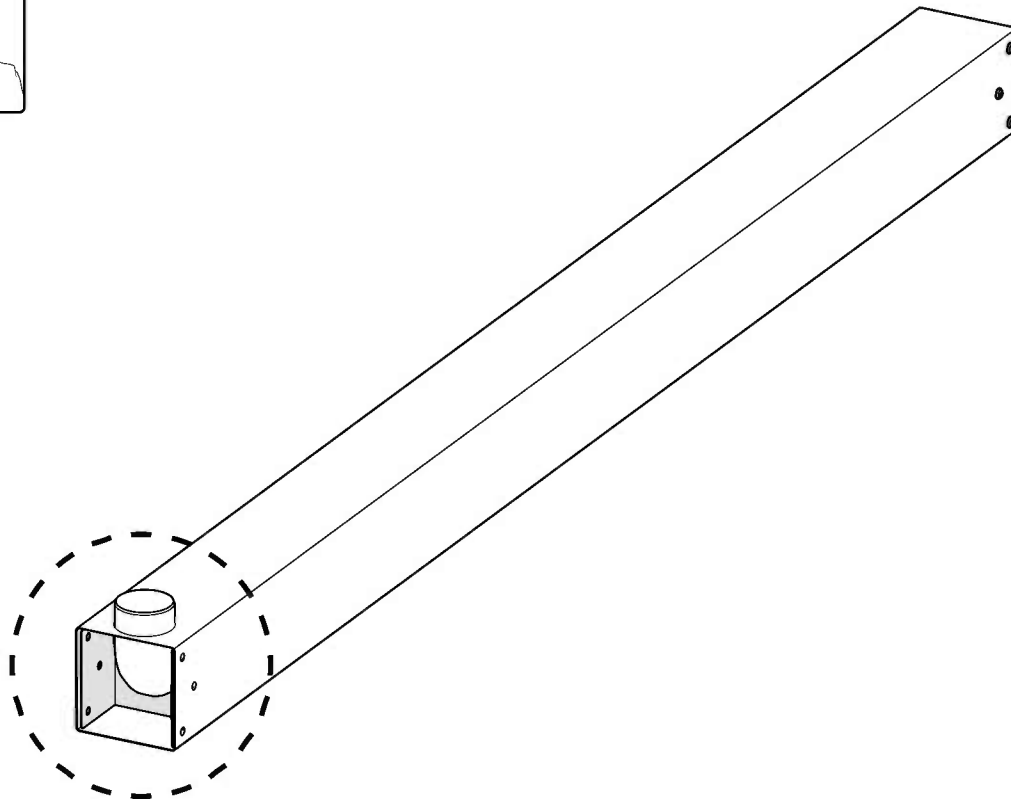
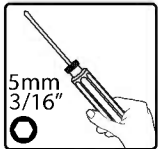


x2



x1

a

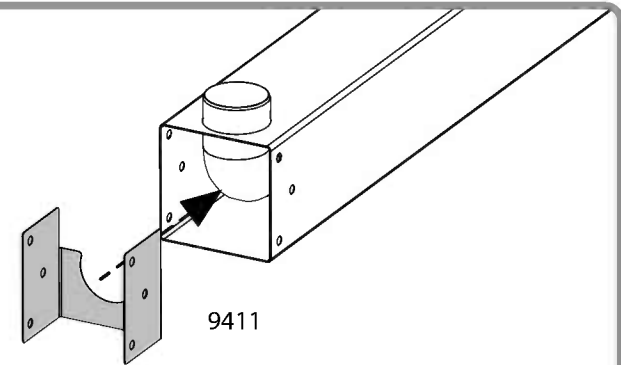

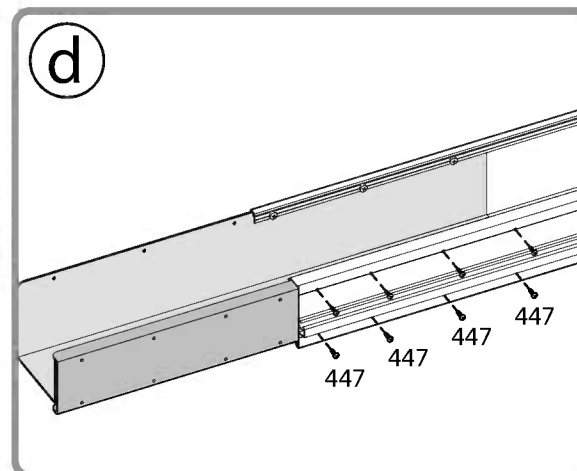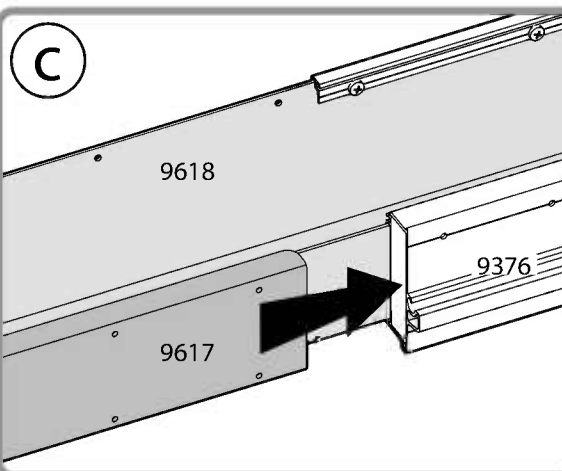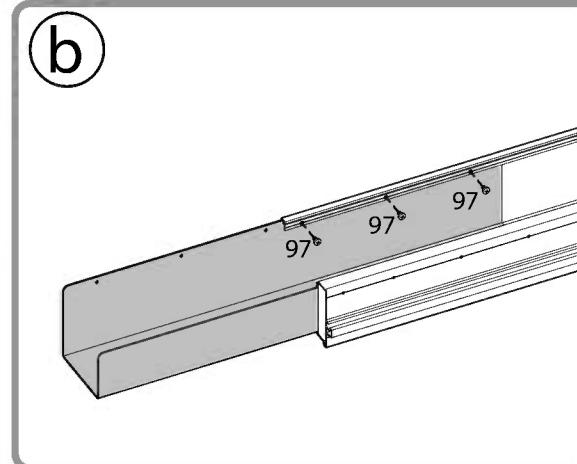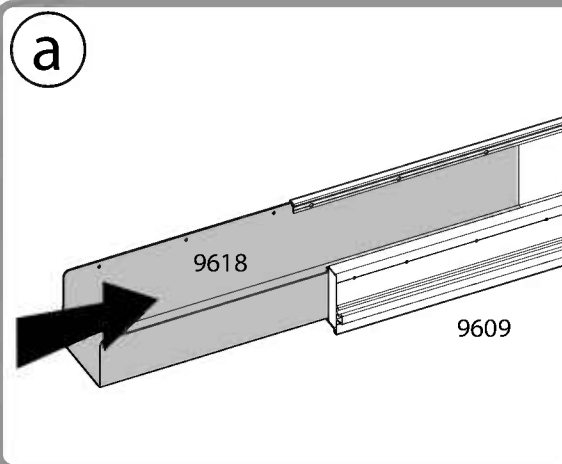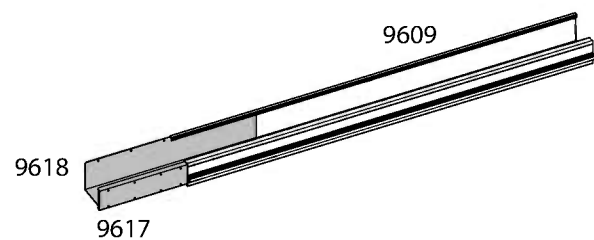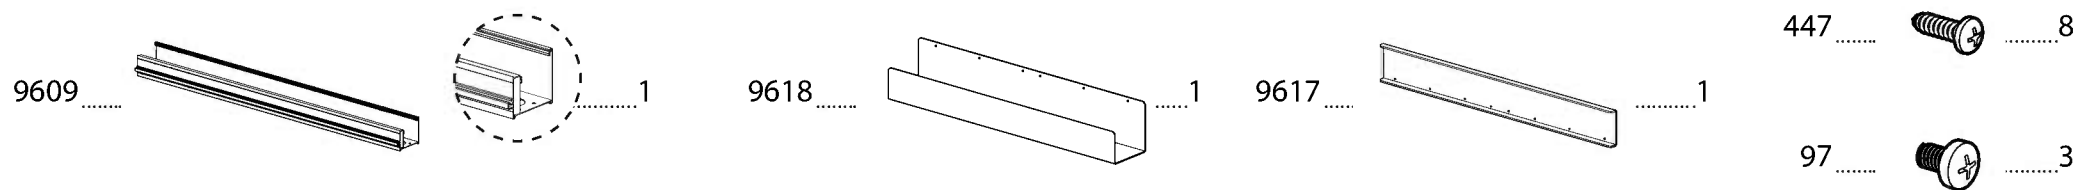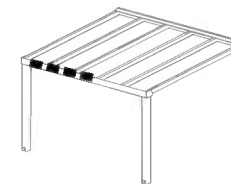

6 **i** Notice, you should continue assembling also if you come across a gutter connection as shown in the round close up.


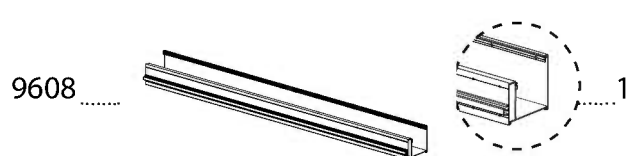
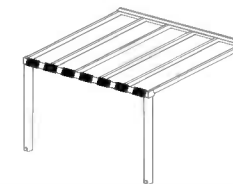


447 8




97 3

Extension Kit

9610/9611	x1
9618	x1
9617	x1
447	x1
97	x1

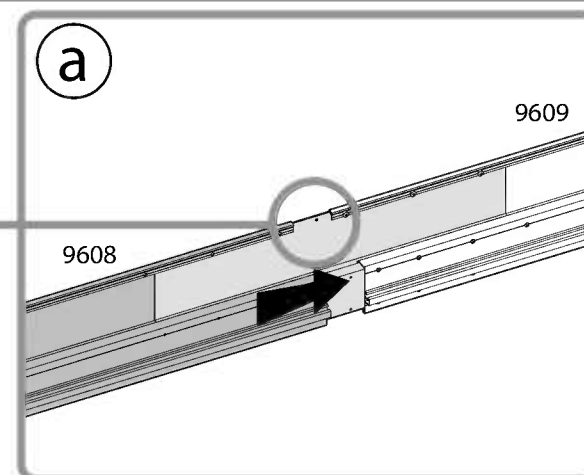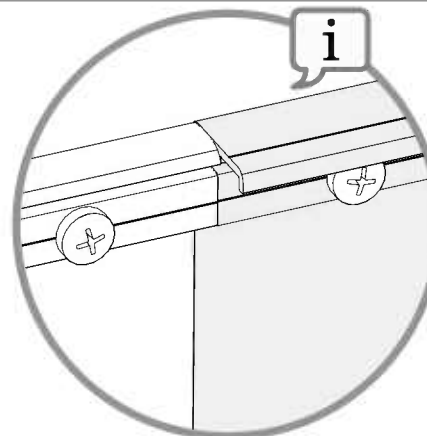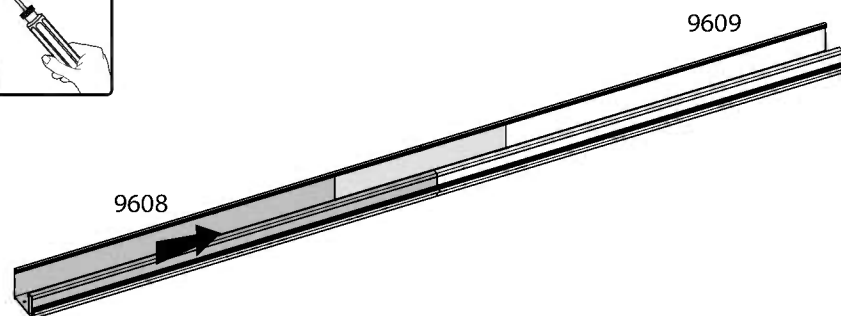


For Extension Kit

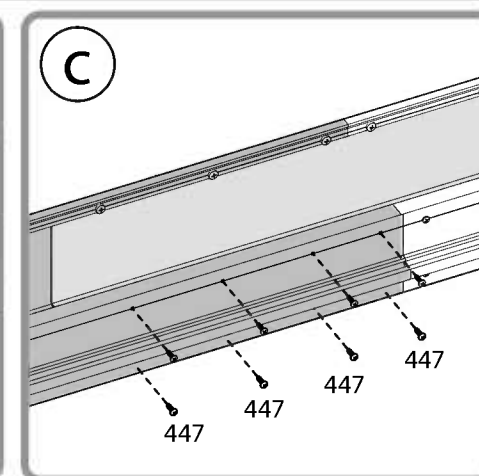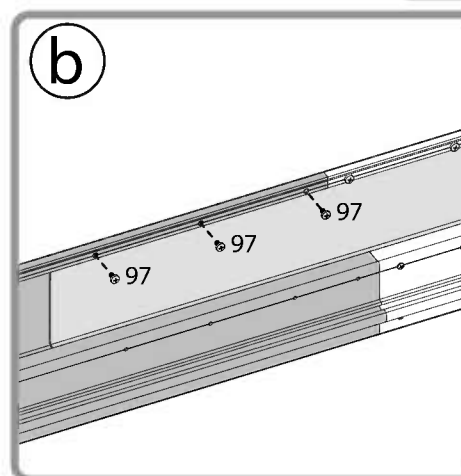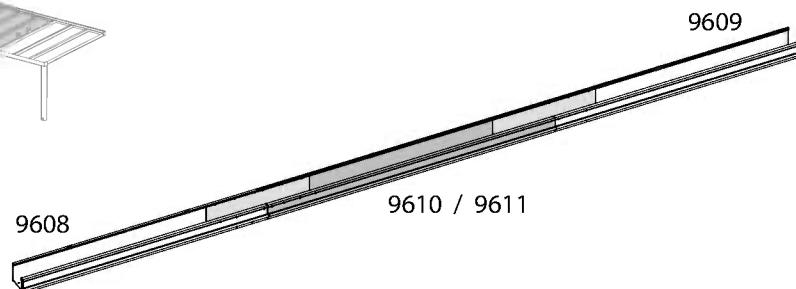




9678.....

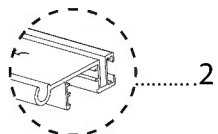

8303.....




.....1

Extension Kit


9680/9682 x1

8303 x1


a

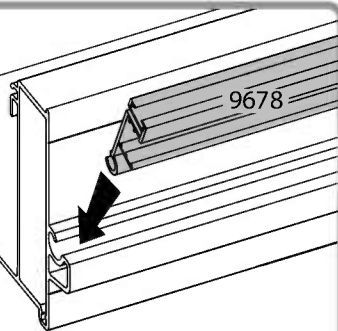



b

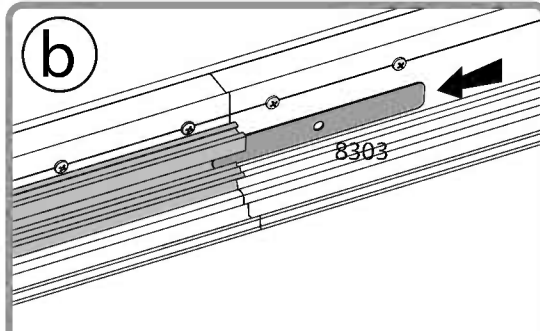


c







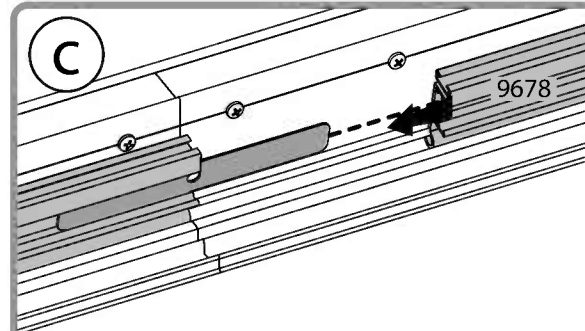


d

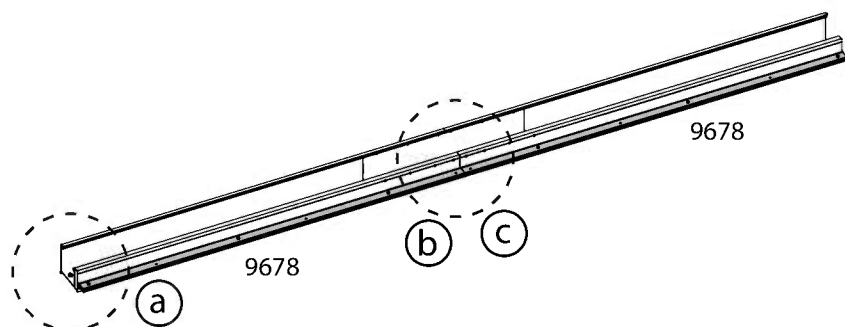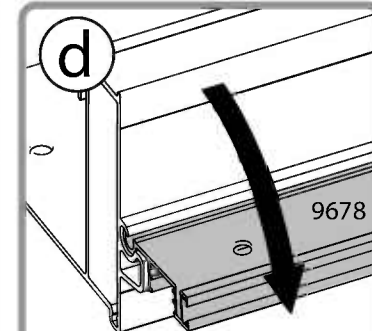


For Extension Kit




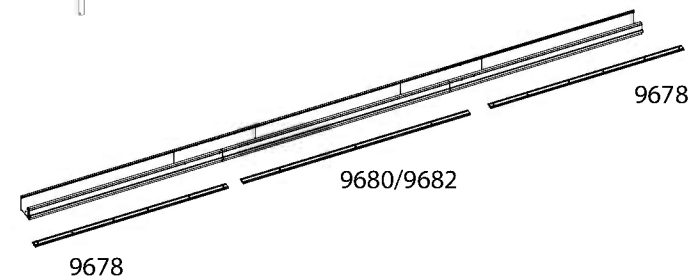


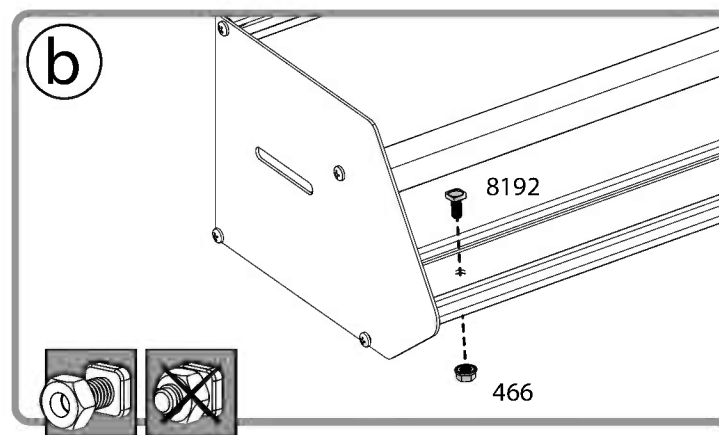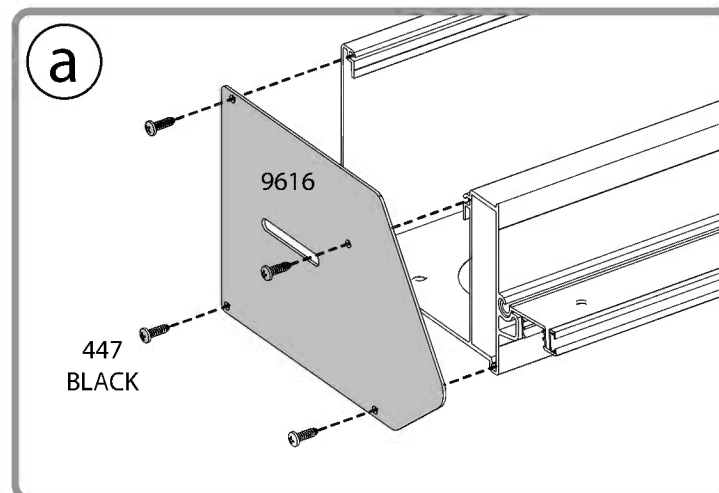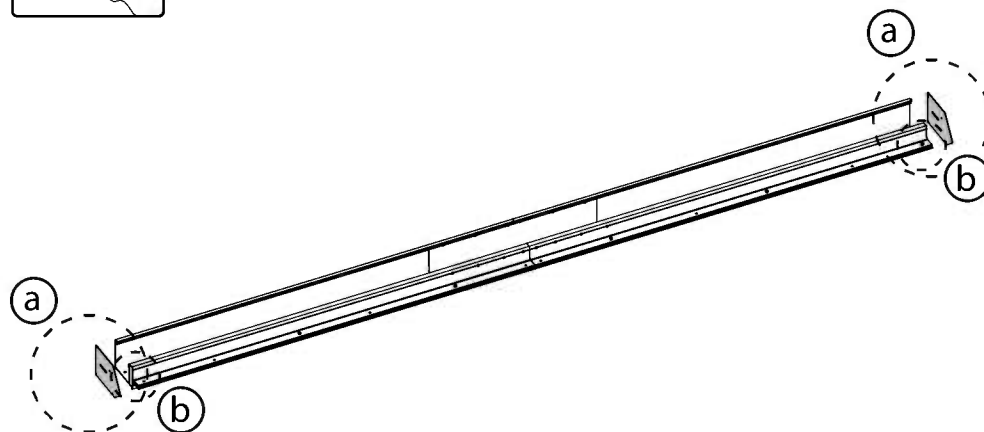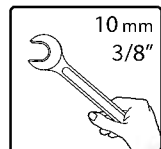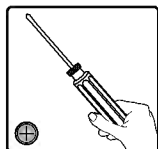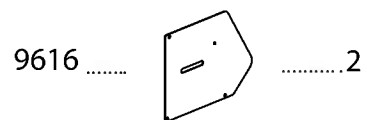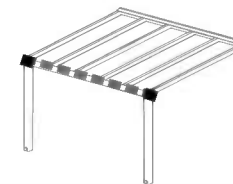


9  Please apply silicone sealants, in order to prevent water from seeping in.





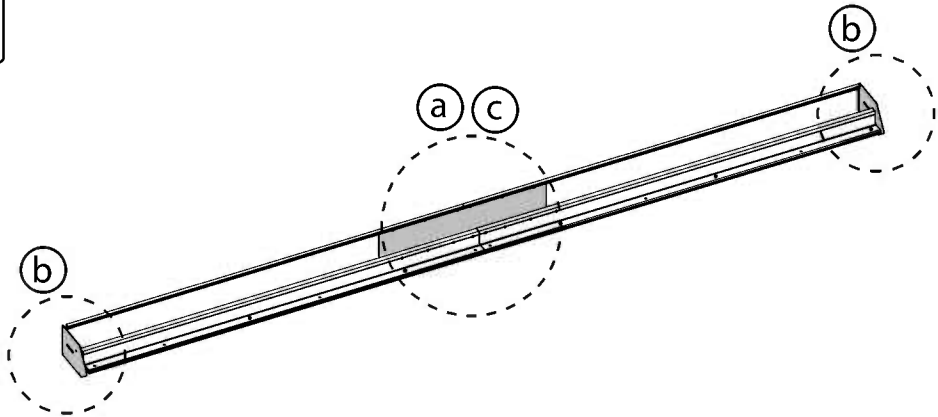


For Extension Kit

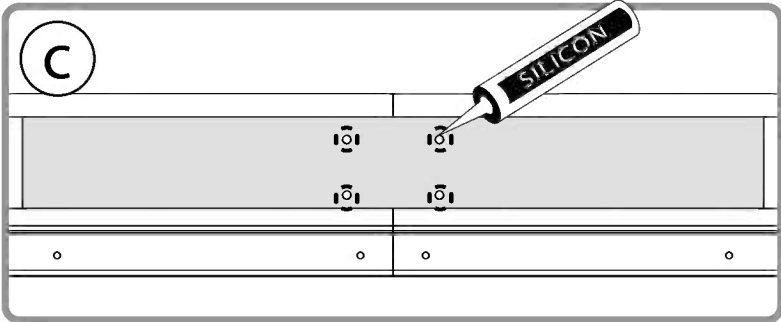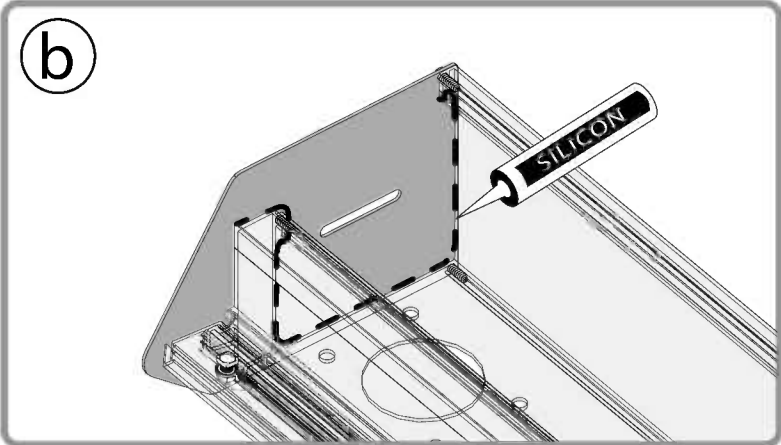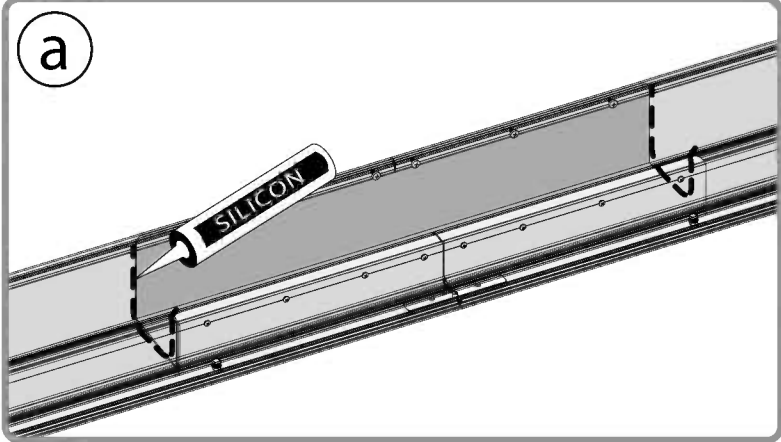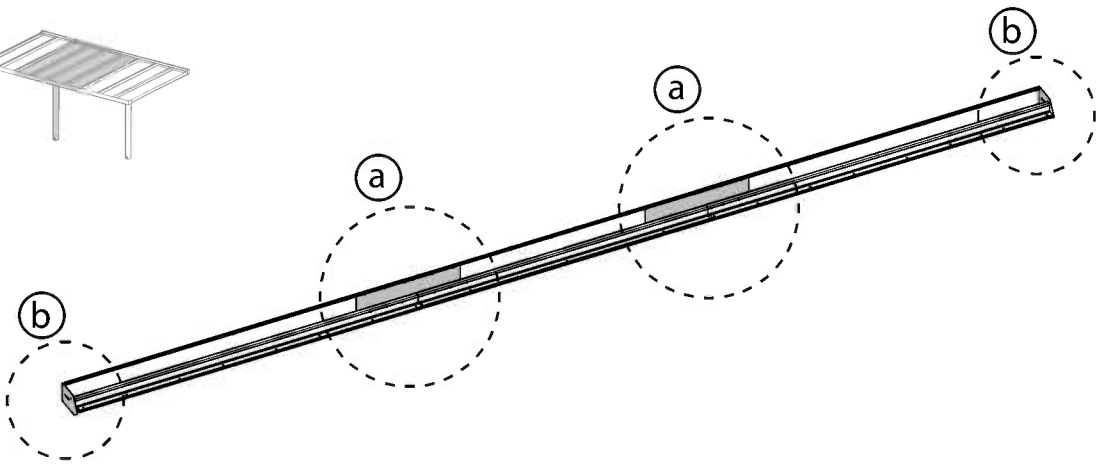

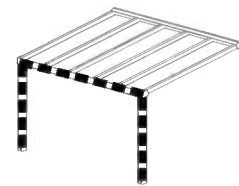





- 9415..... 2 9416..... 2 9407..... 8 8082..... 8

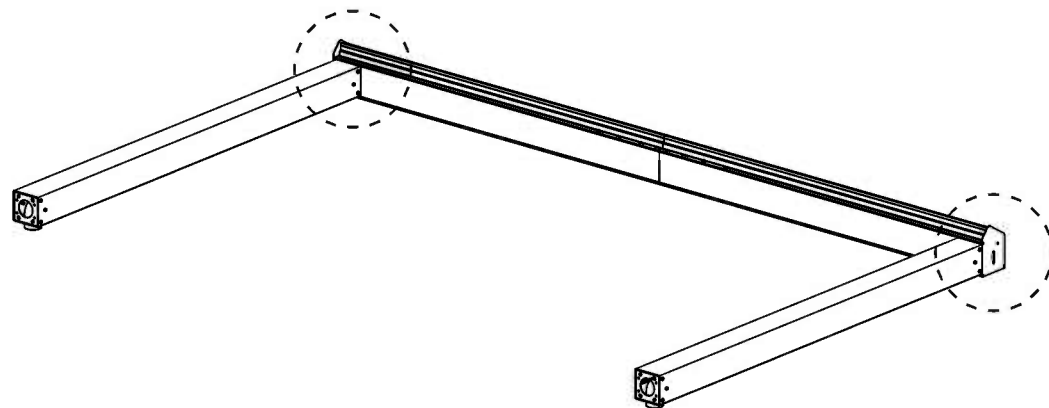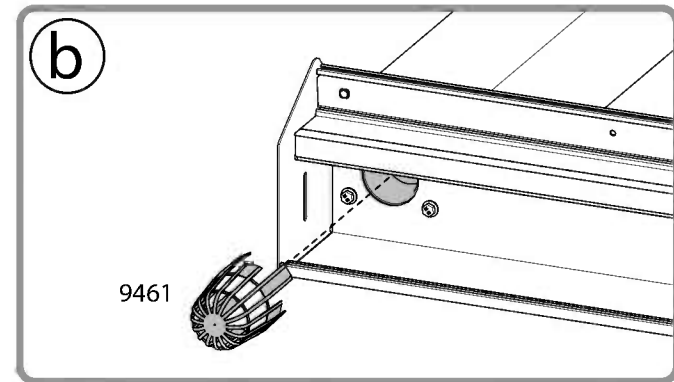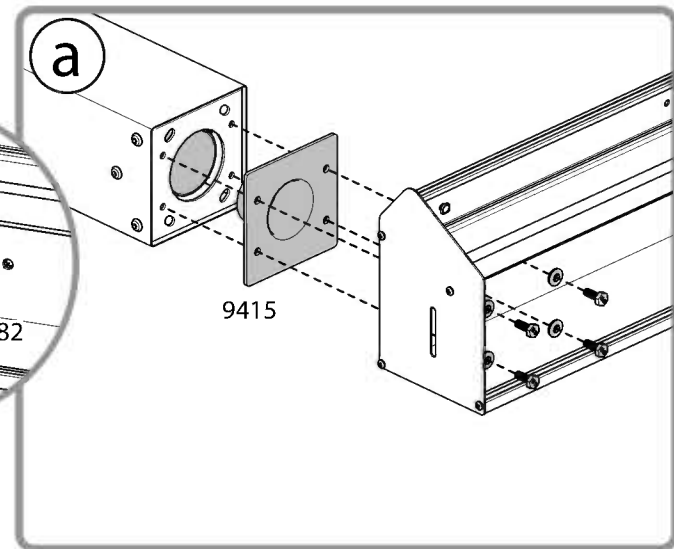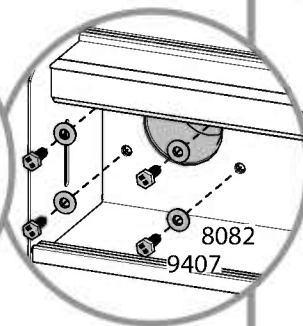
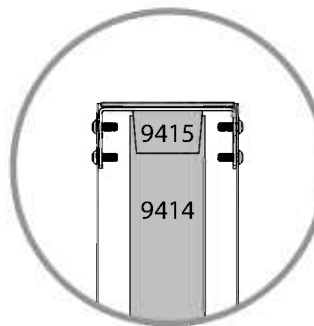


11 For Extension Kit






- 9415..... 3 9416..... 3 9407..... 12 8082..... 12

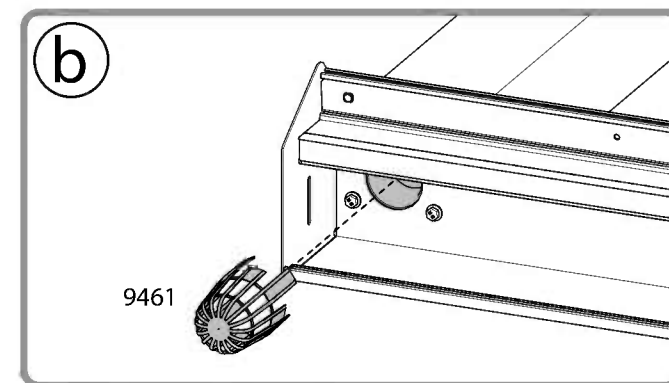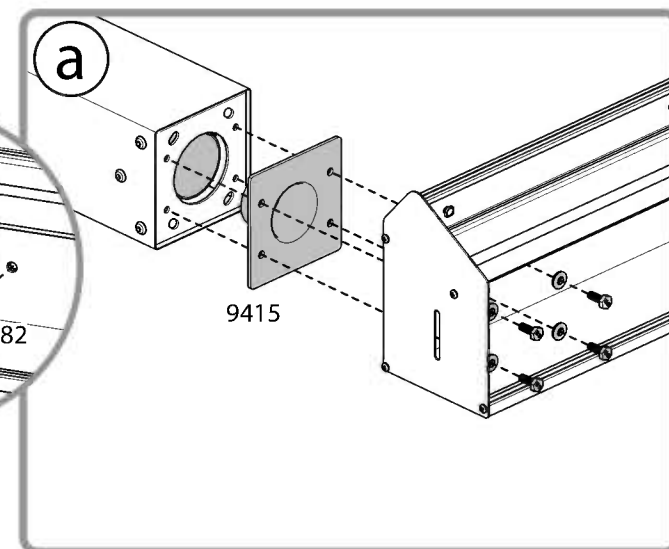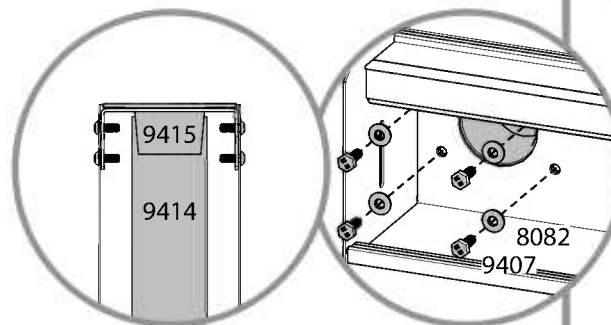
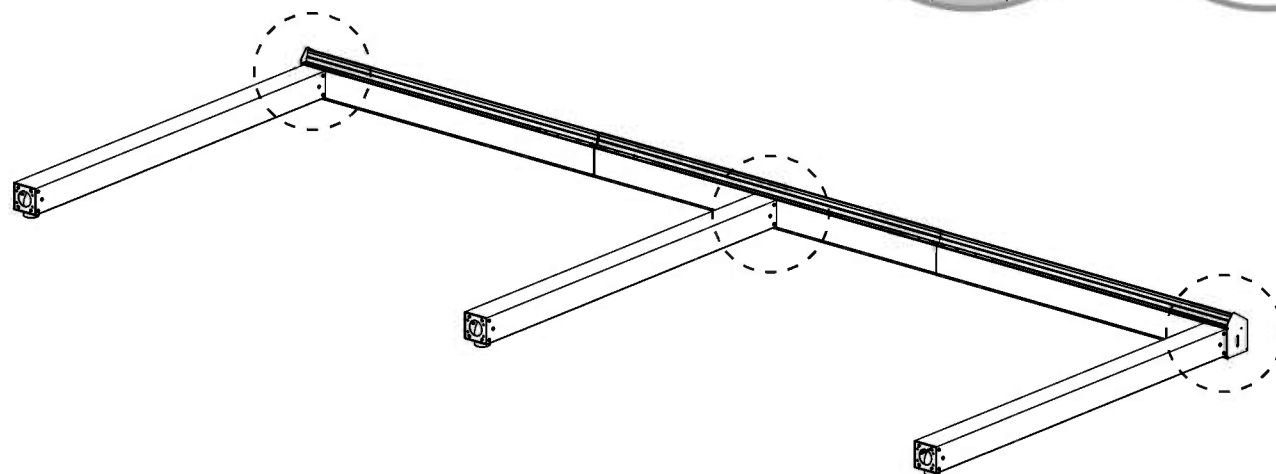


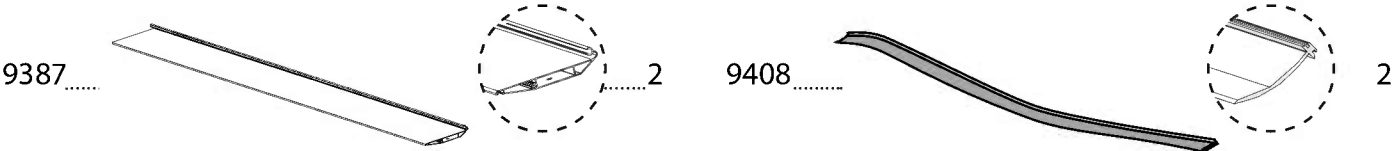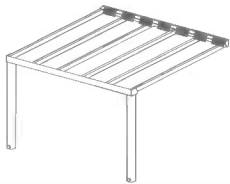

Extension Kit	
9394 / 9400	+1
9408	+1

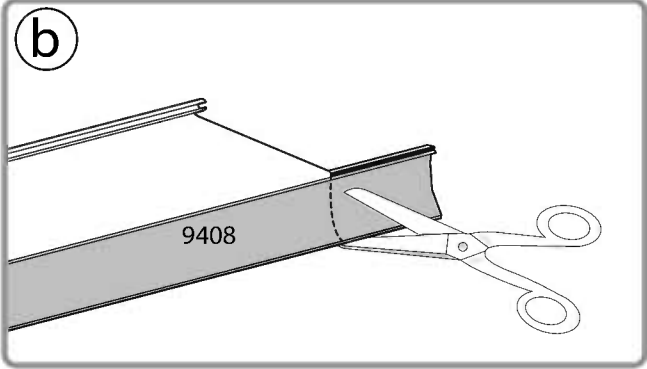
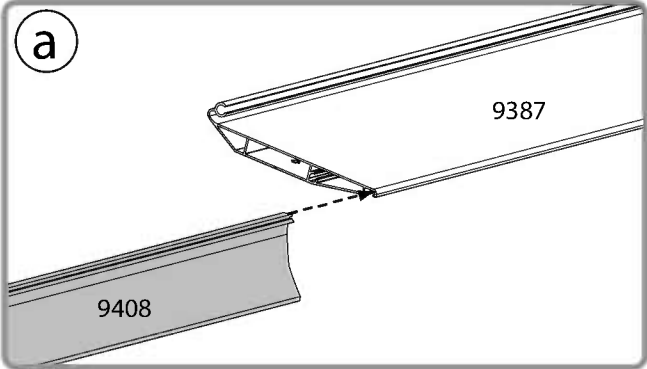
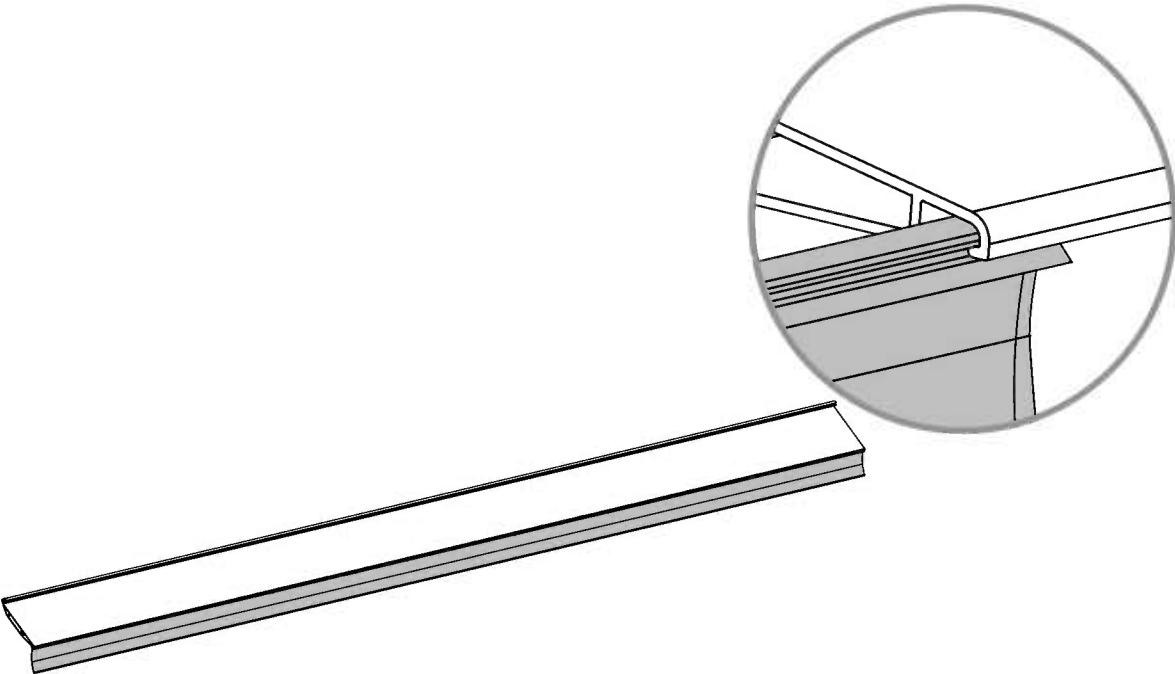


+x1 x2

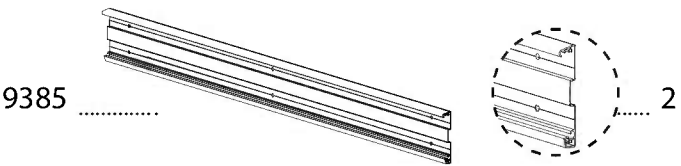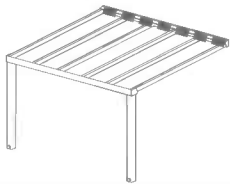


Extension Kit

9393 / 9399 +1

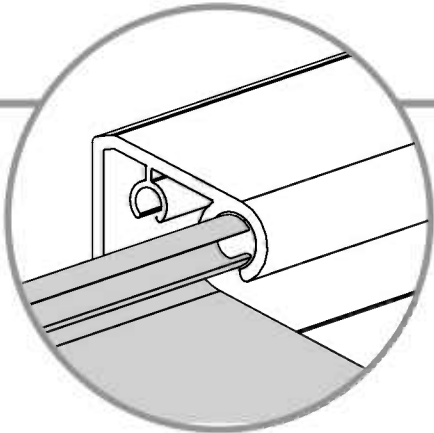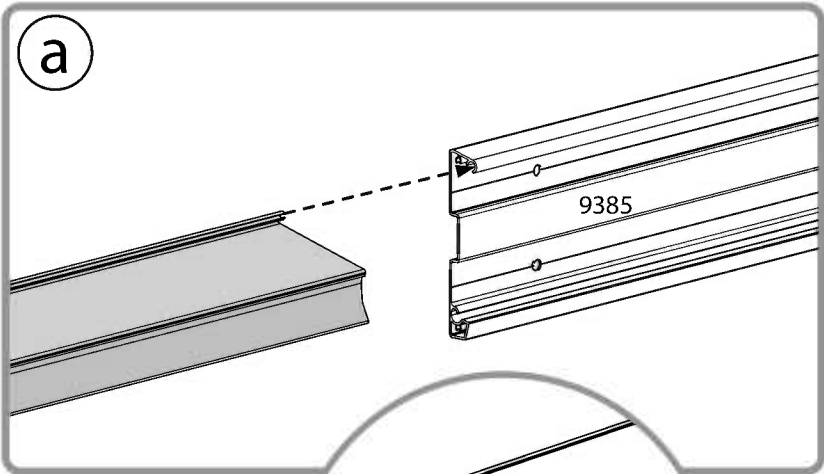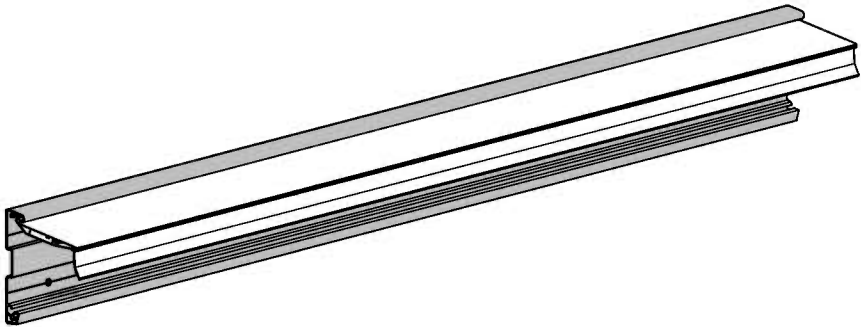

+x1 x2

DISTANCE FROM WALL	OVERALL HEIGHT	INSTALLATION HEIGHT	ANGLE IN PERCENTAG	ANGLE ON DEGREES
342.1 cm / 134.7"	256.4 cm / 100.9"	239.4 cm / 94.2"	5.25%	3°
341.7 cm / 134.5"	262 cm / 103.1"	245 cm / 96.4"	7%	4°
341.3 cm / 134.3"	267.7 cm / 105.4"	250.7 cm / 98.7"	8.75%	5°
340.7 cm / 134.1"	273.3 cm / 107.6"	256.3 cm / 100.9"	10.5%	6°
340.1 cm / 133.9"	279 cm / 109.8"	262 cm / 103.1"	12.3%	7°
339.3 cm / 133.6"	284.6 cm / 112"	267.6 cm / 105.3"	14%	8°
338.5 cm / 133.2"	290.2 cm / 114.2"	273.2 cm / 107.5"	15.85%	9°
337.6 cm / 132.9"	295.8 cm / 116.4"	278.8 cm / 109.7"	17.6%	10°
336.6 cm / 132.5"	301.4 cm / 118.6"	284.4 cm / 111.9"	19.5%	11°
335.6 cm / 132.1"	307 cm / 120.8"	290 cm / 114.2"	21.25%	12°
334.5 cm / 131.7"	312.6 cm / 123.1"	295.6 cm / 116.4"	23%	13°
333.3 cm / 131.2"	318.1 cm / 125.2"	301.1 cm / 118.5"	25%	14°
332 cm / 130.7"	323.6 cm / 127.4"	306.6 cm / 120.7"	26.8%	15°

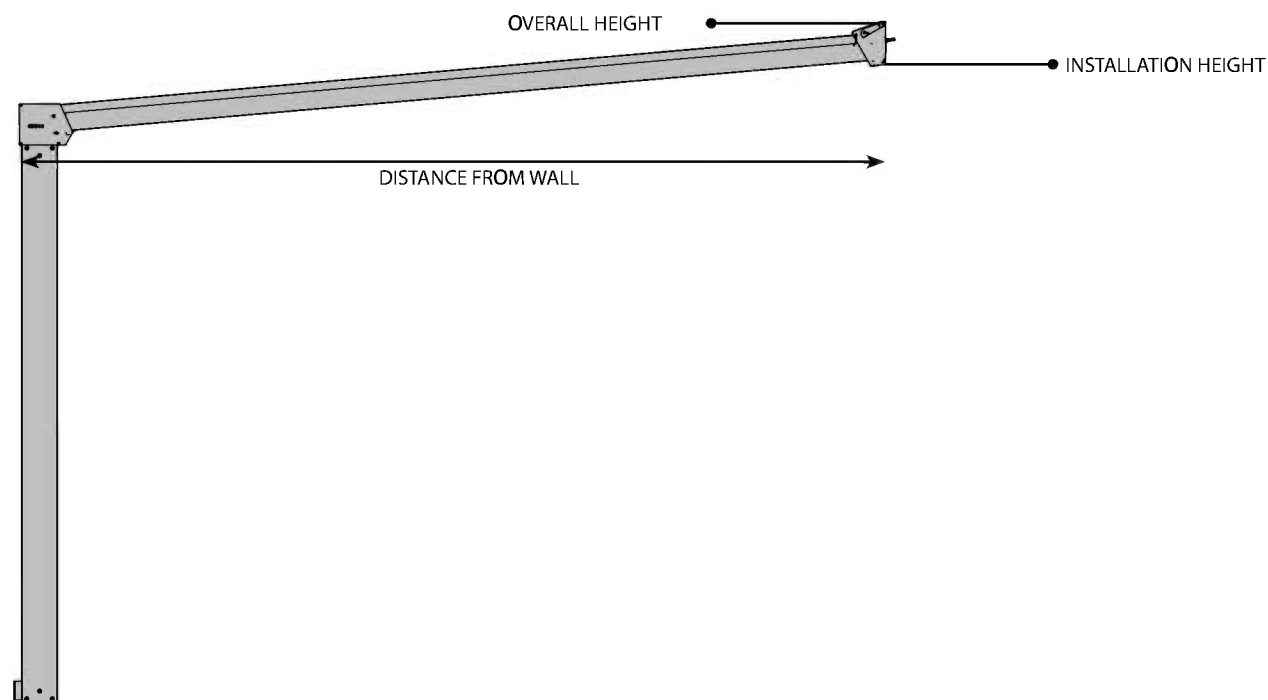


pay attention:

When installing the profile on the wall, all other dimensions will be given and will not be changeable.


15



Refer to the dimension table in **Step 14**, which provides information on adjusting the distance of the patio cover rods from the wall, Installation height range, roof angle and gutter distance from the wall.

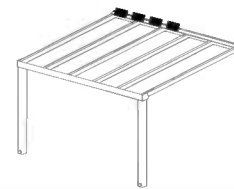



4000 6 4010 6 433 6

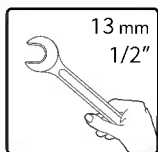

13 mm
1/2"



x2

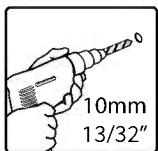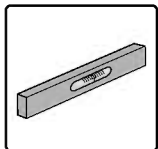


10mm
13/32"




x2

239.5 cm - 306.6 cm
94.2" - 120.7"

INSTALLATION HEIGHT

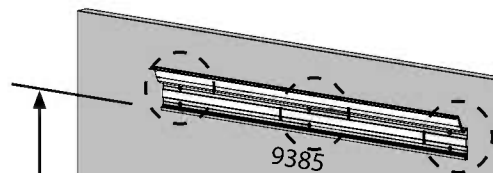


9385

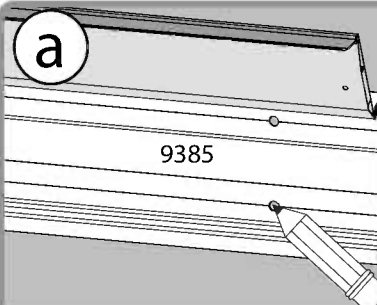


a

9385

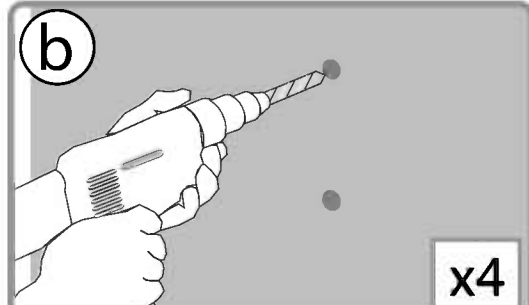

b


x4

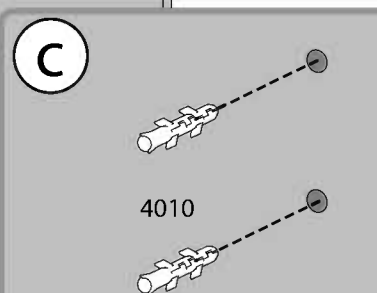

c

4010

x4

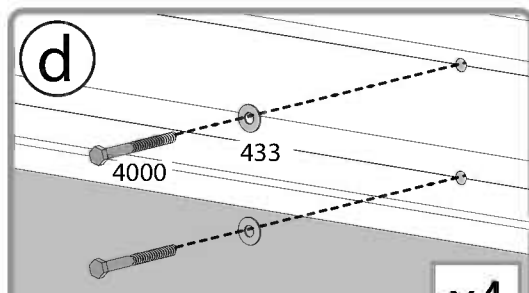


d

4000





433


x4

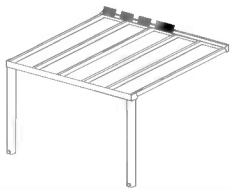


7039 2




7335 1

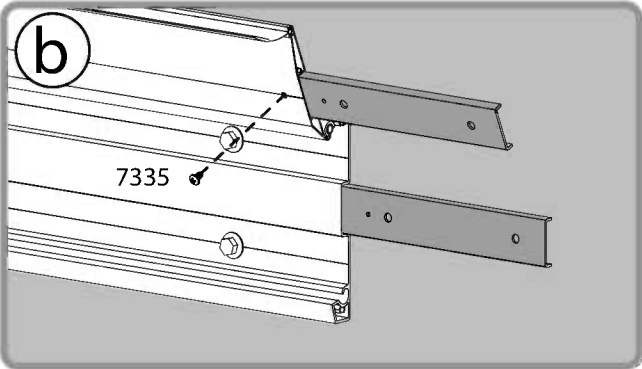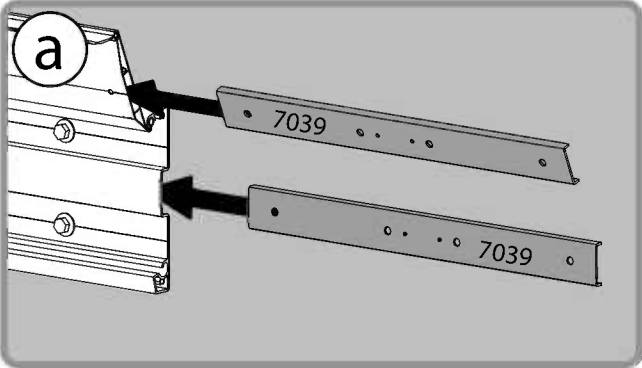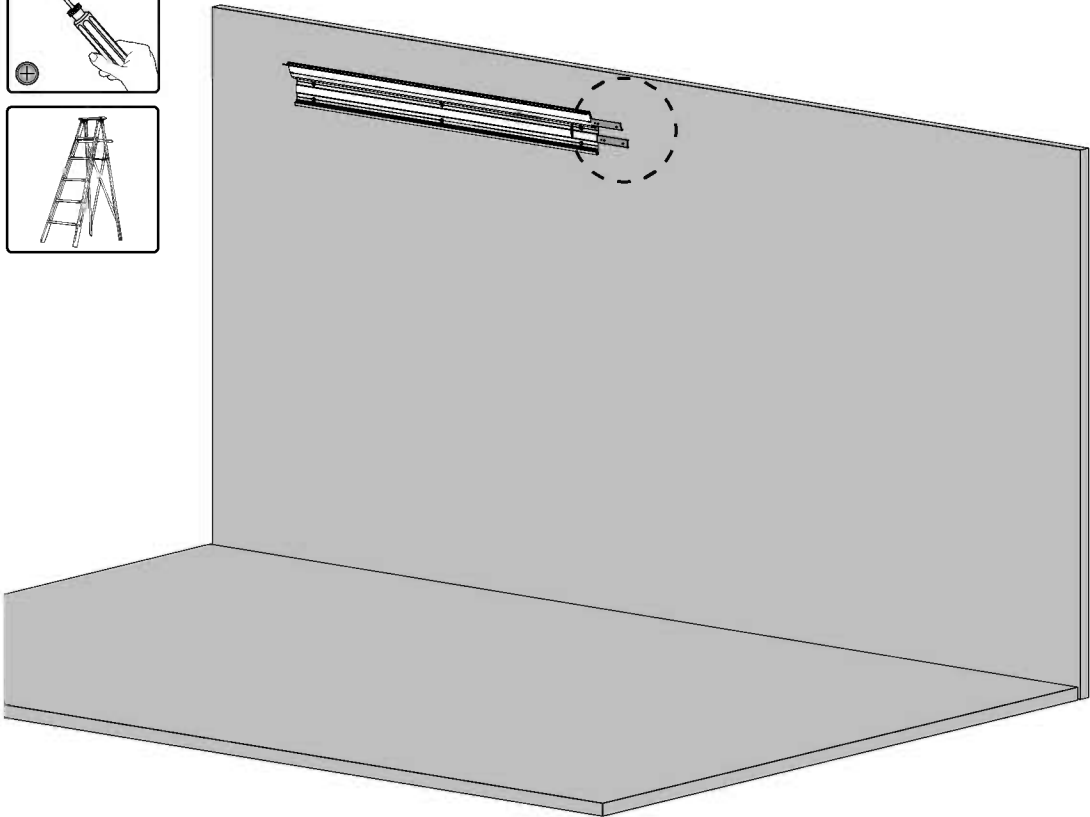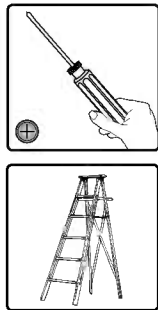


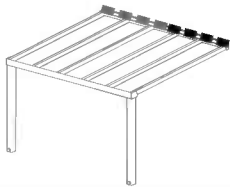

4000 6 4010 6 433 6 7335 1

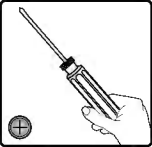


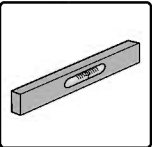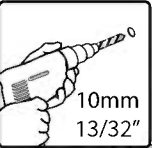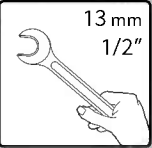


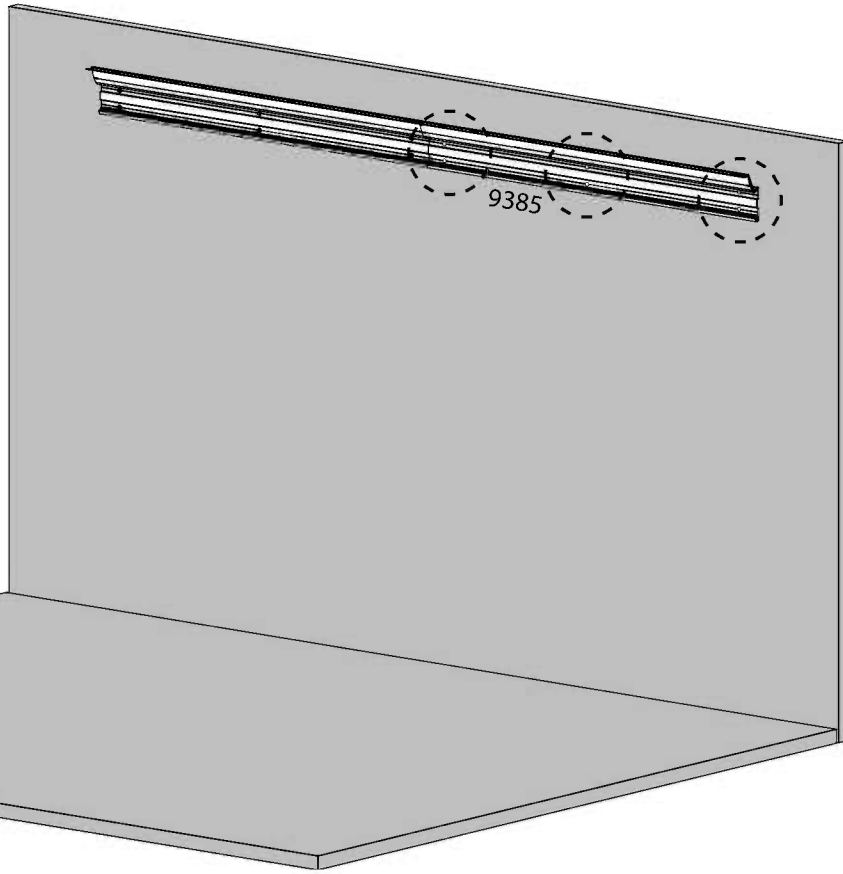
9385


a

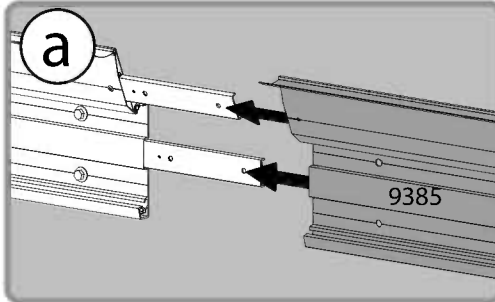

b

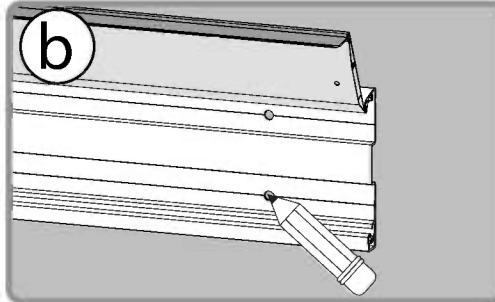


c

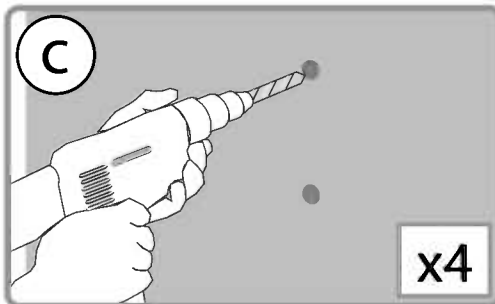


x4

d

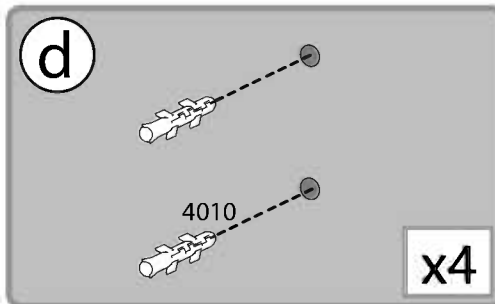


x4

e

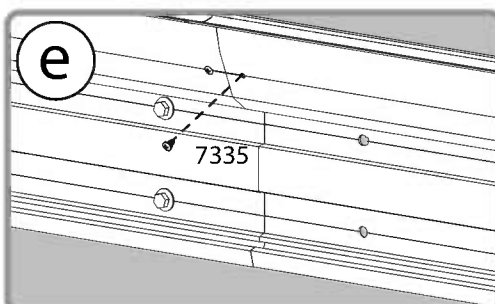


f










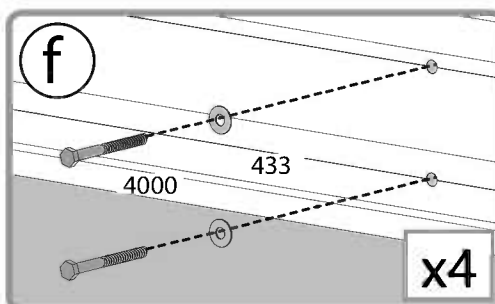


x4

18 For Extension Kit

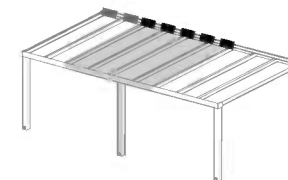

4000 8/10 4010 8/10 433 0 8/10 7335 1

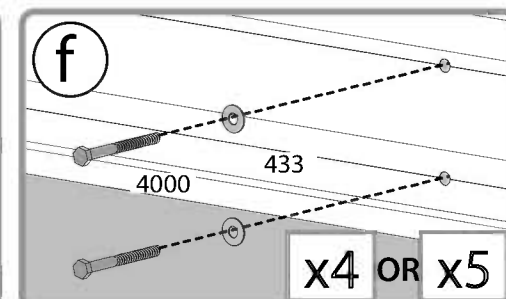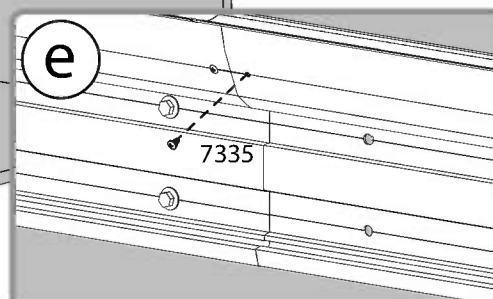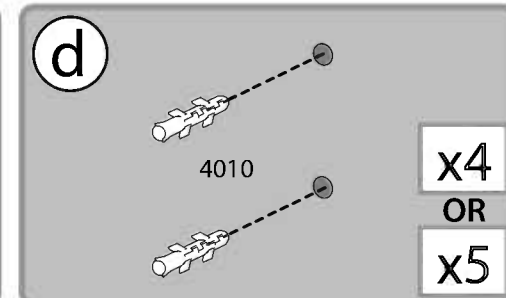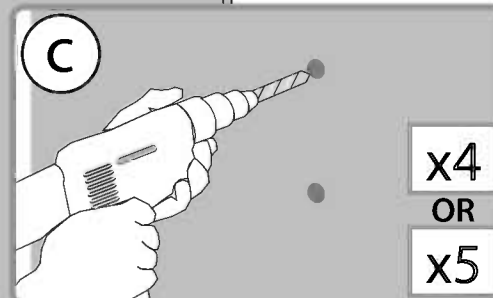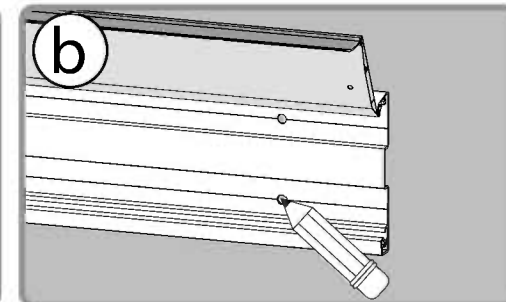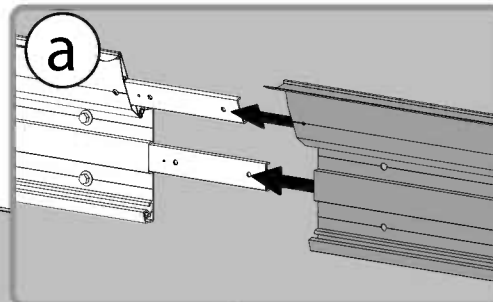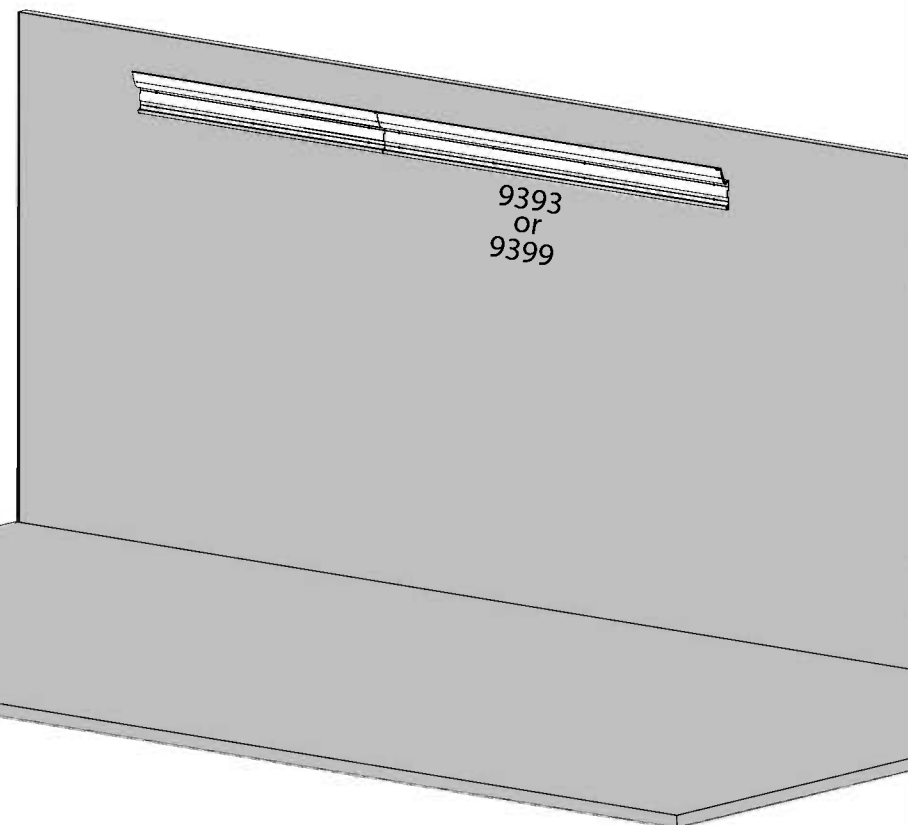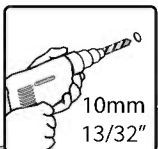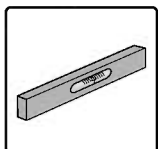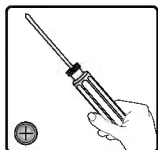

x4
OR
x5






x4
OR
x5

x4 OR x5


19 For Extension Kit












7039 2 7335 1

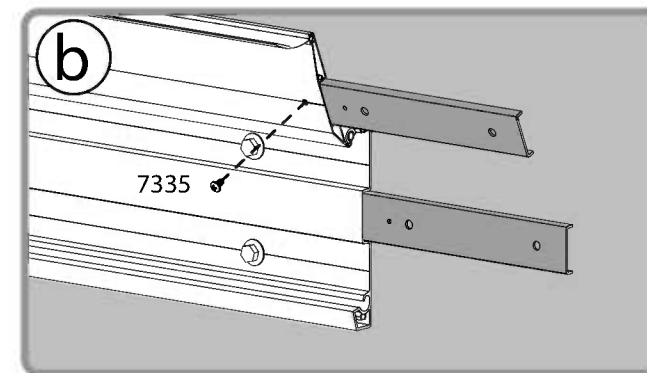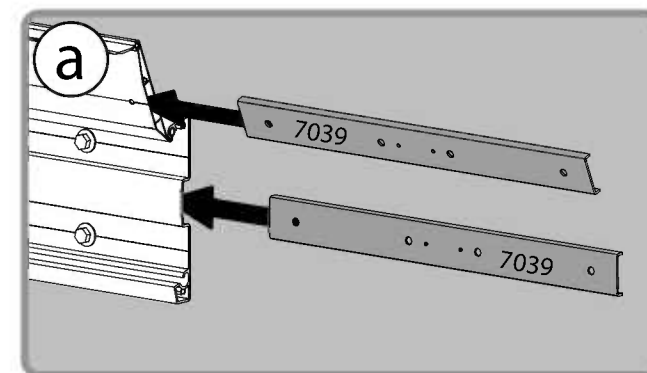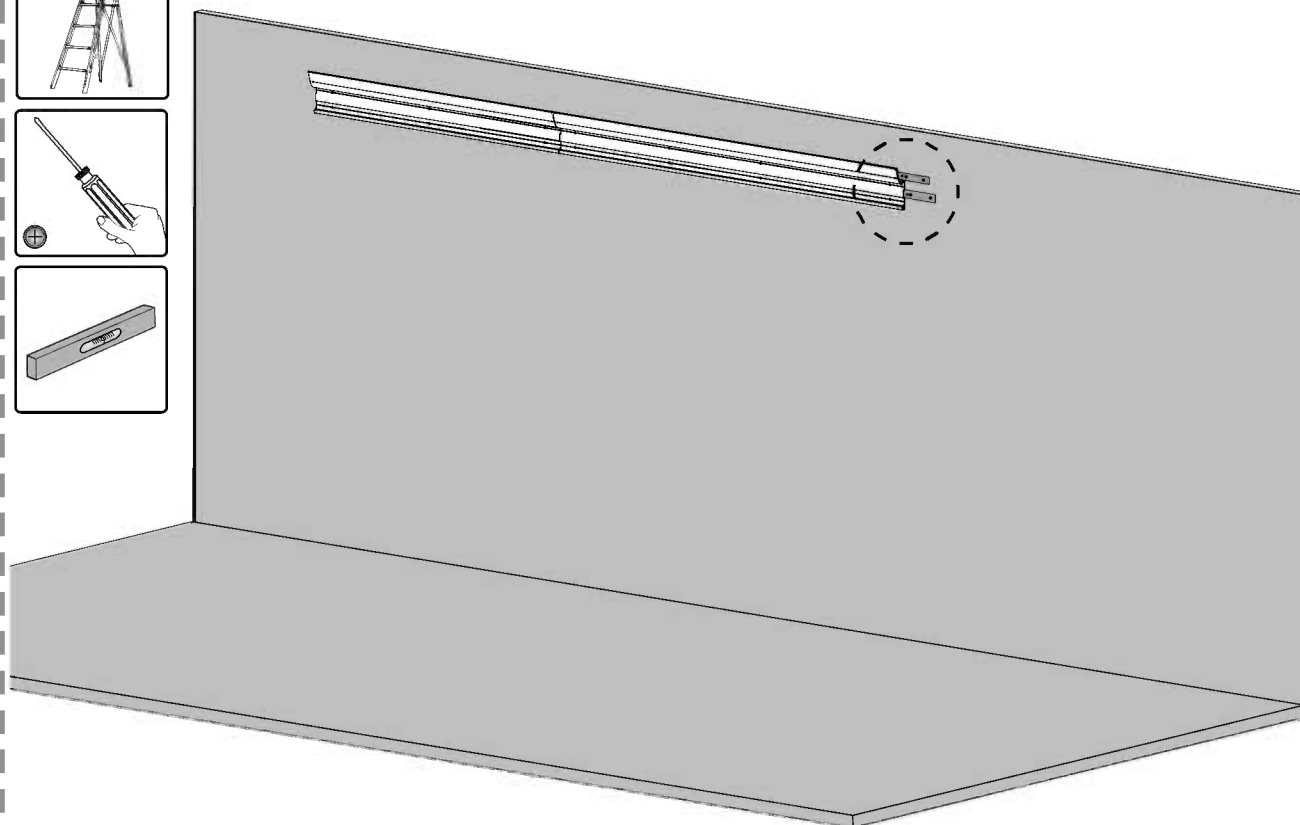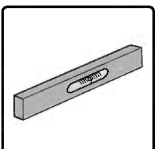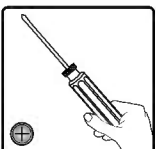

20 For Extension Kit

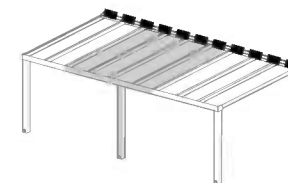


4000 6 4010 6 433 6 7335 1

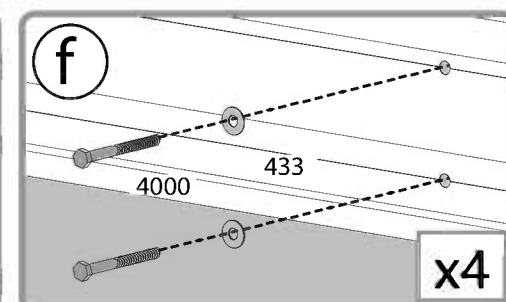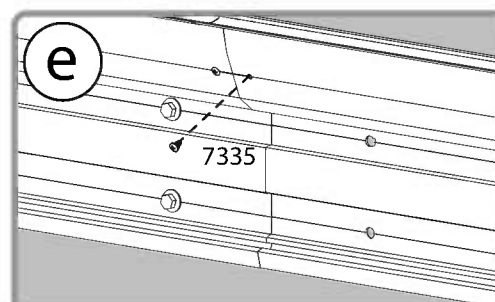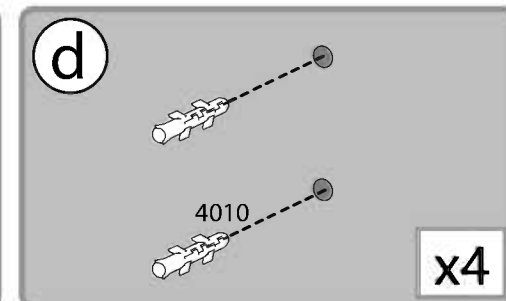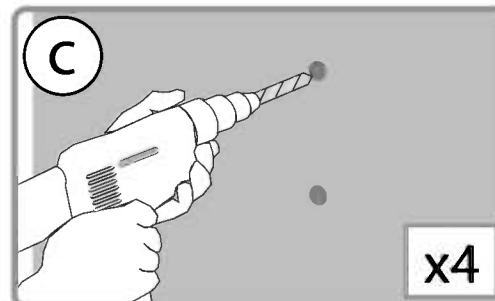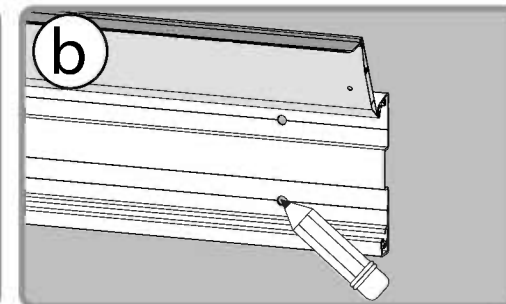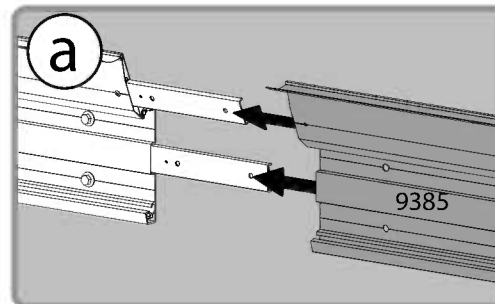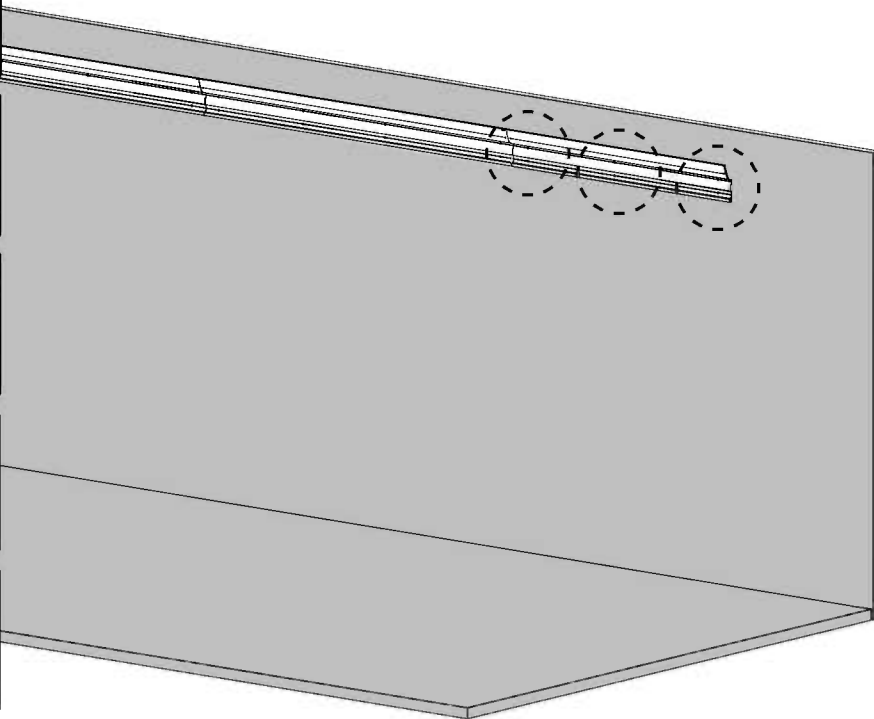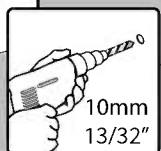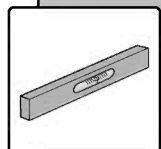


21



Please apply silicone sealants above beam #9385 / #9393 / #9399,
in order to prevent water from seeping in.

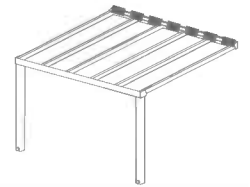




9678

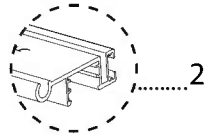






2





Caulk /
Silicon

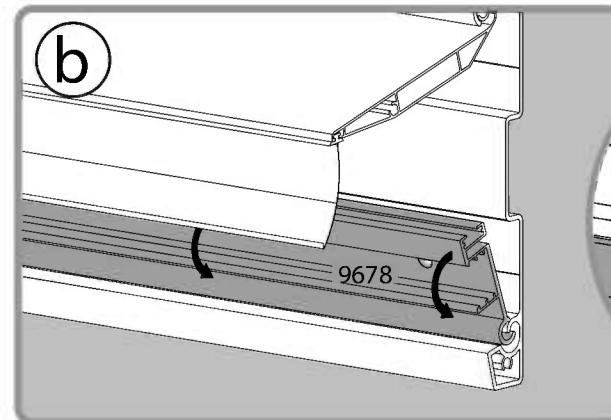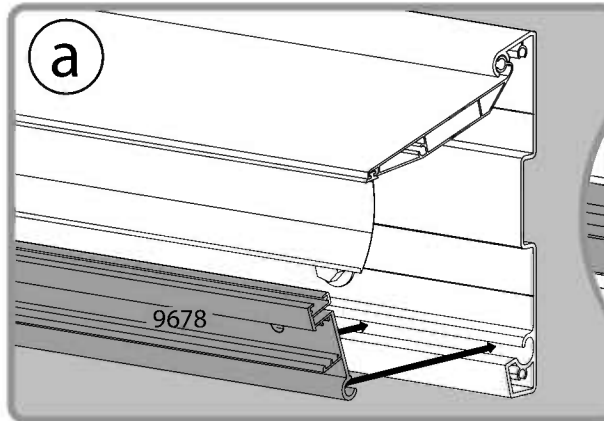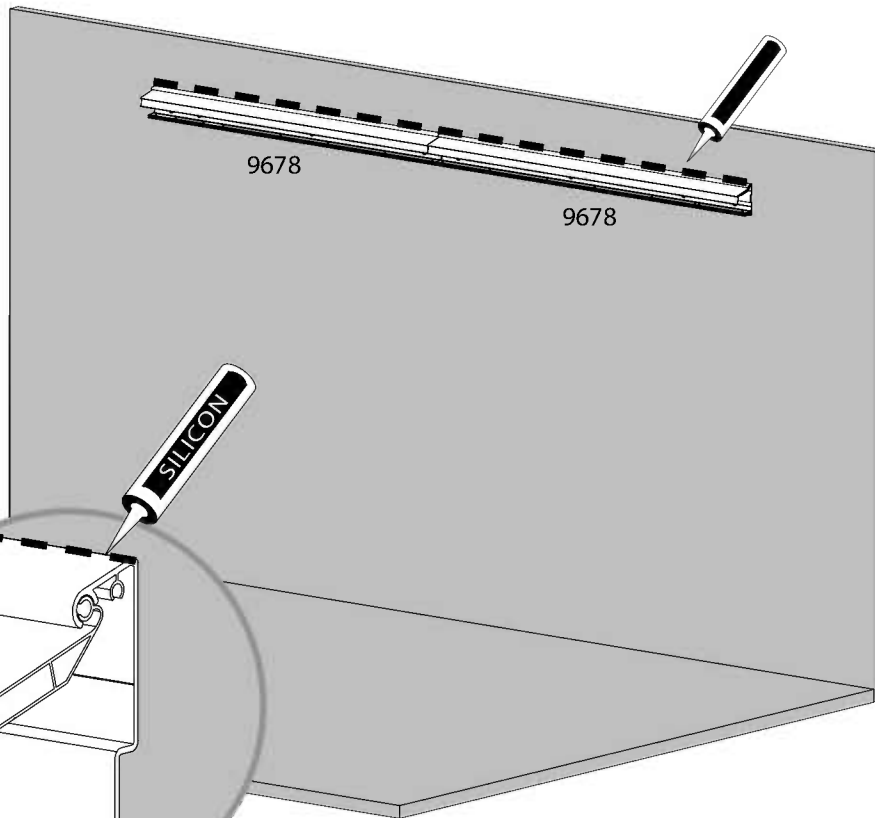

22 For Extension Kit

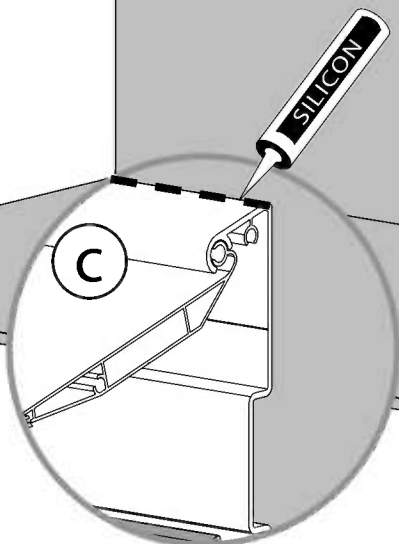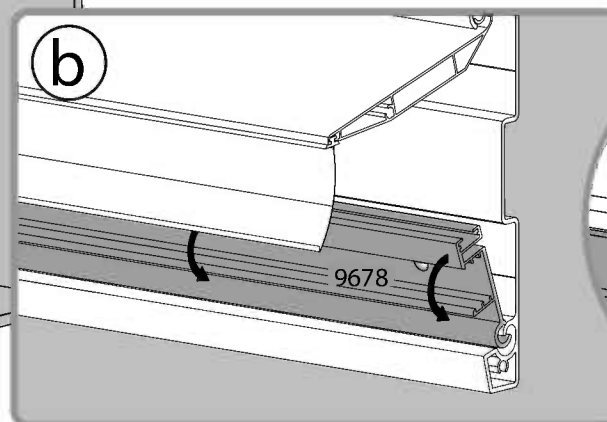
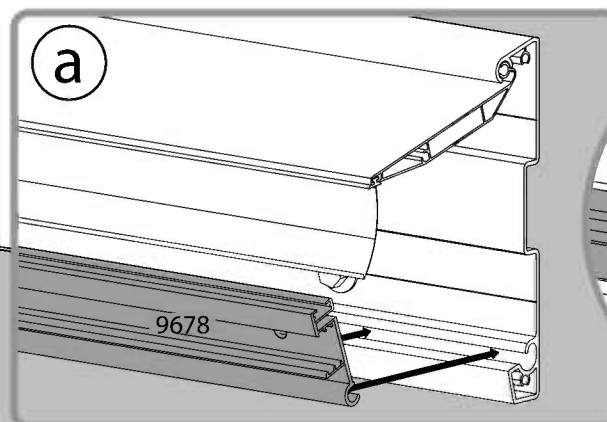
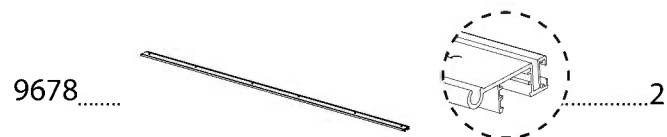
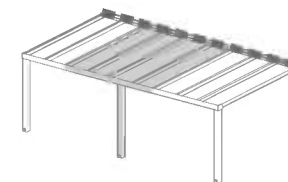


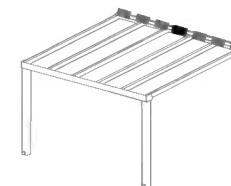

8303..........1


8192..........2

466..........2

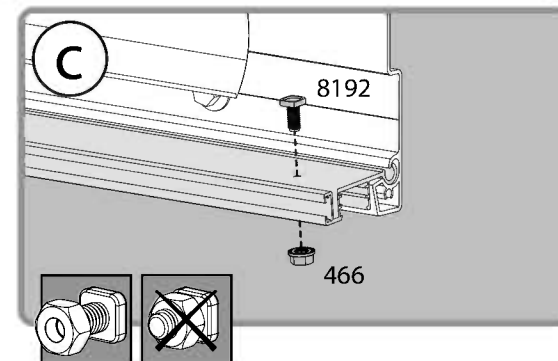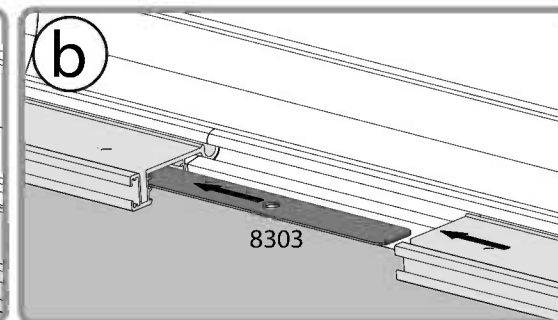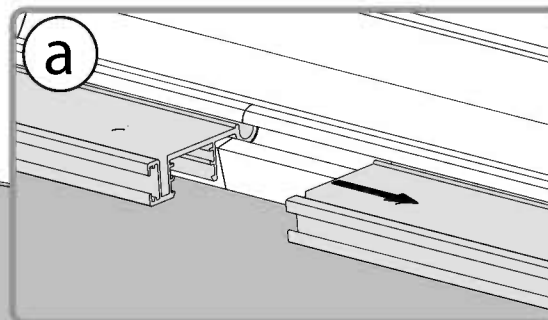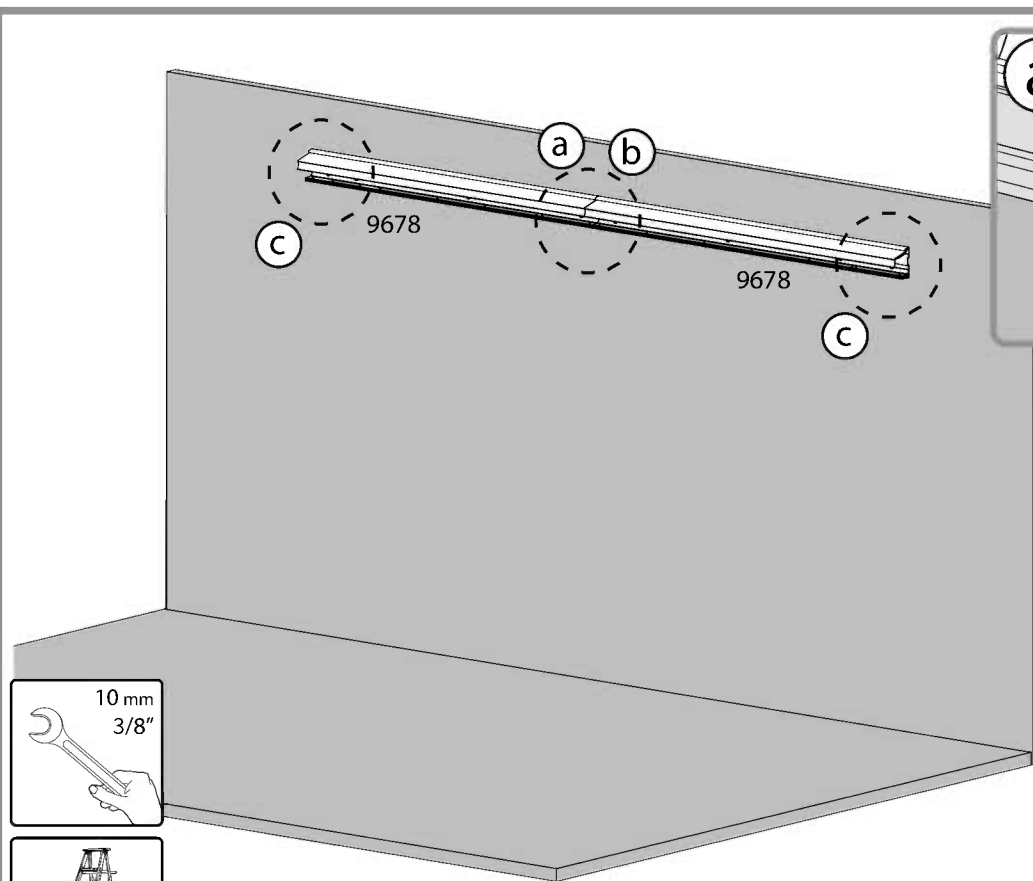







24 For Extension Kit





8303..........2

8192..........2






466..........2

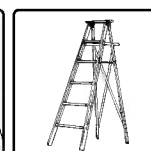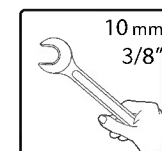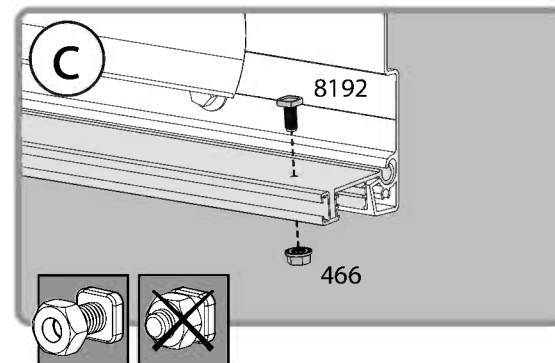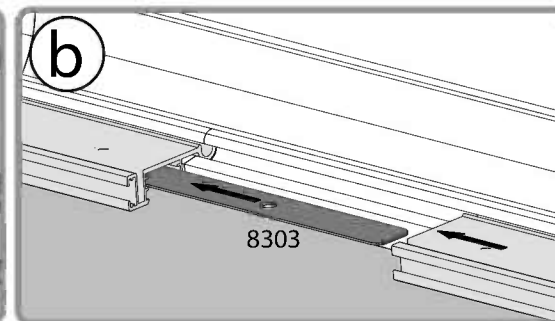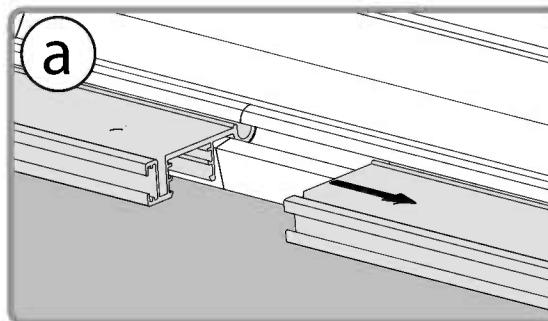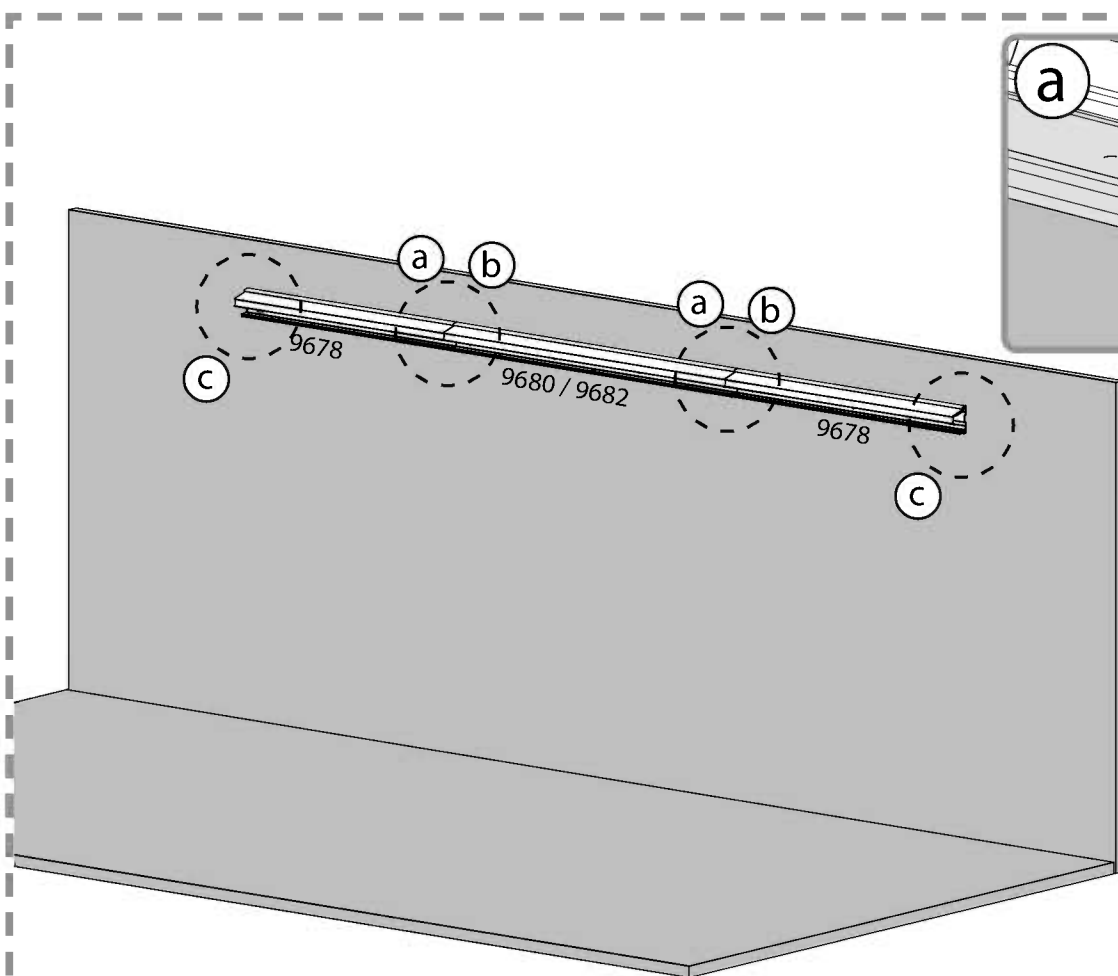






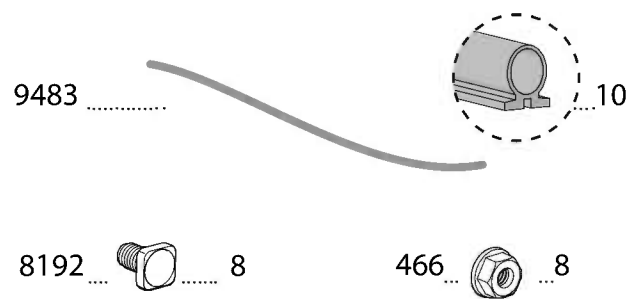
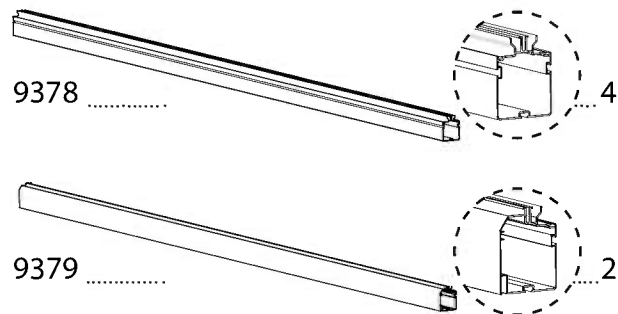


Extension Kit 3 m	
9378	+4
9483	+8
8192	+8
466	+8

Extension Kit 2.2 m	
9378	+3
9483	+6
8192	+6
466	+6

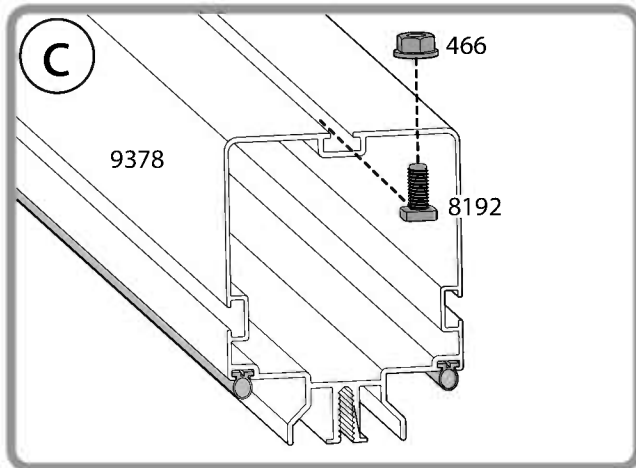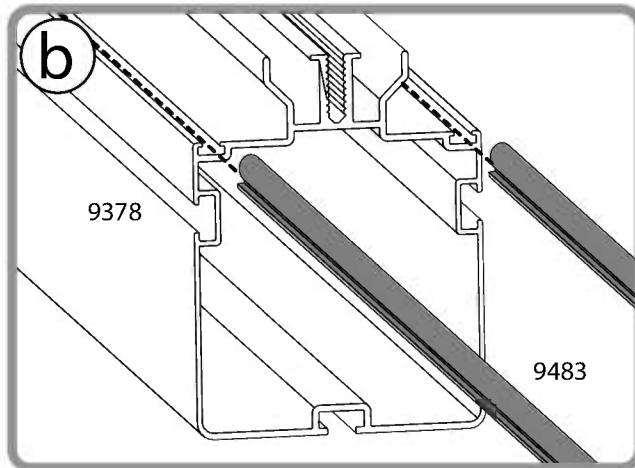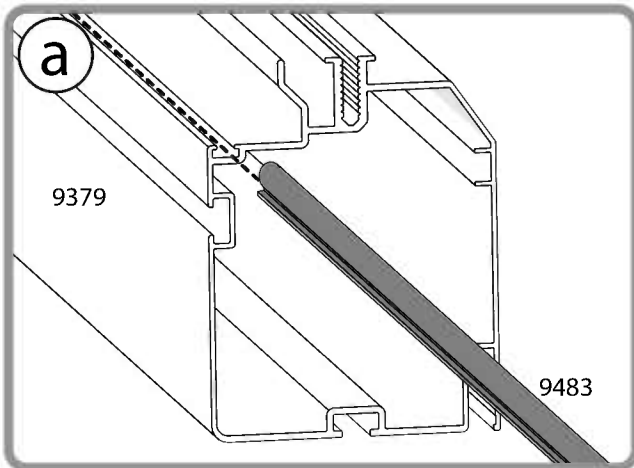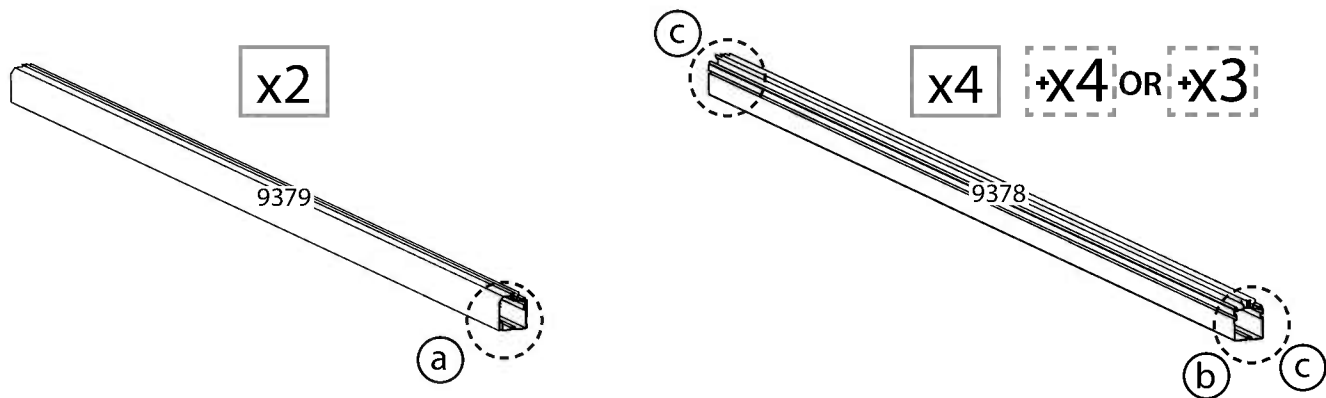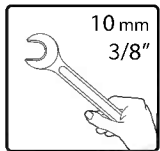


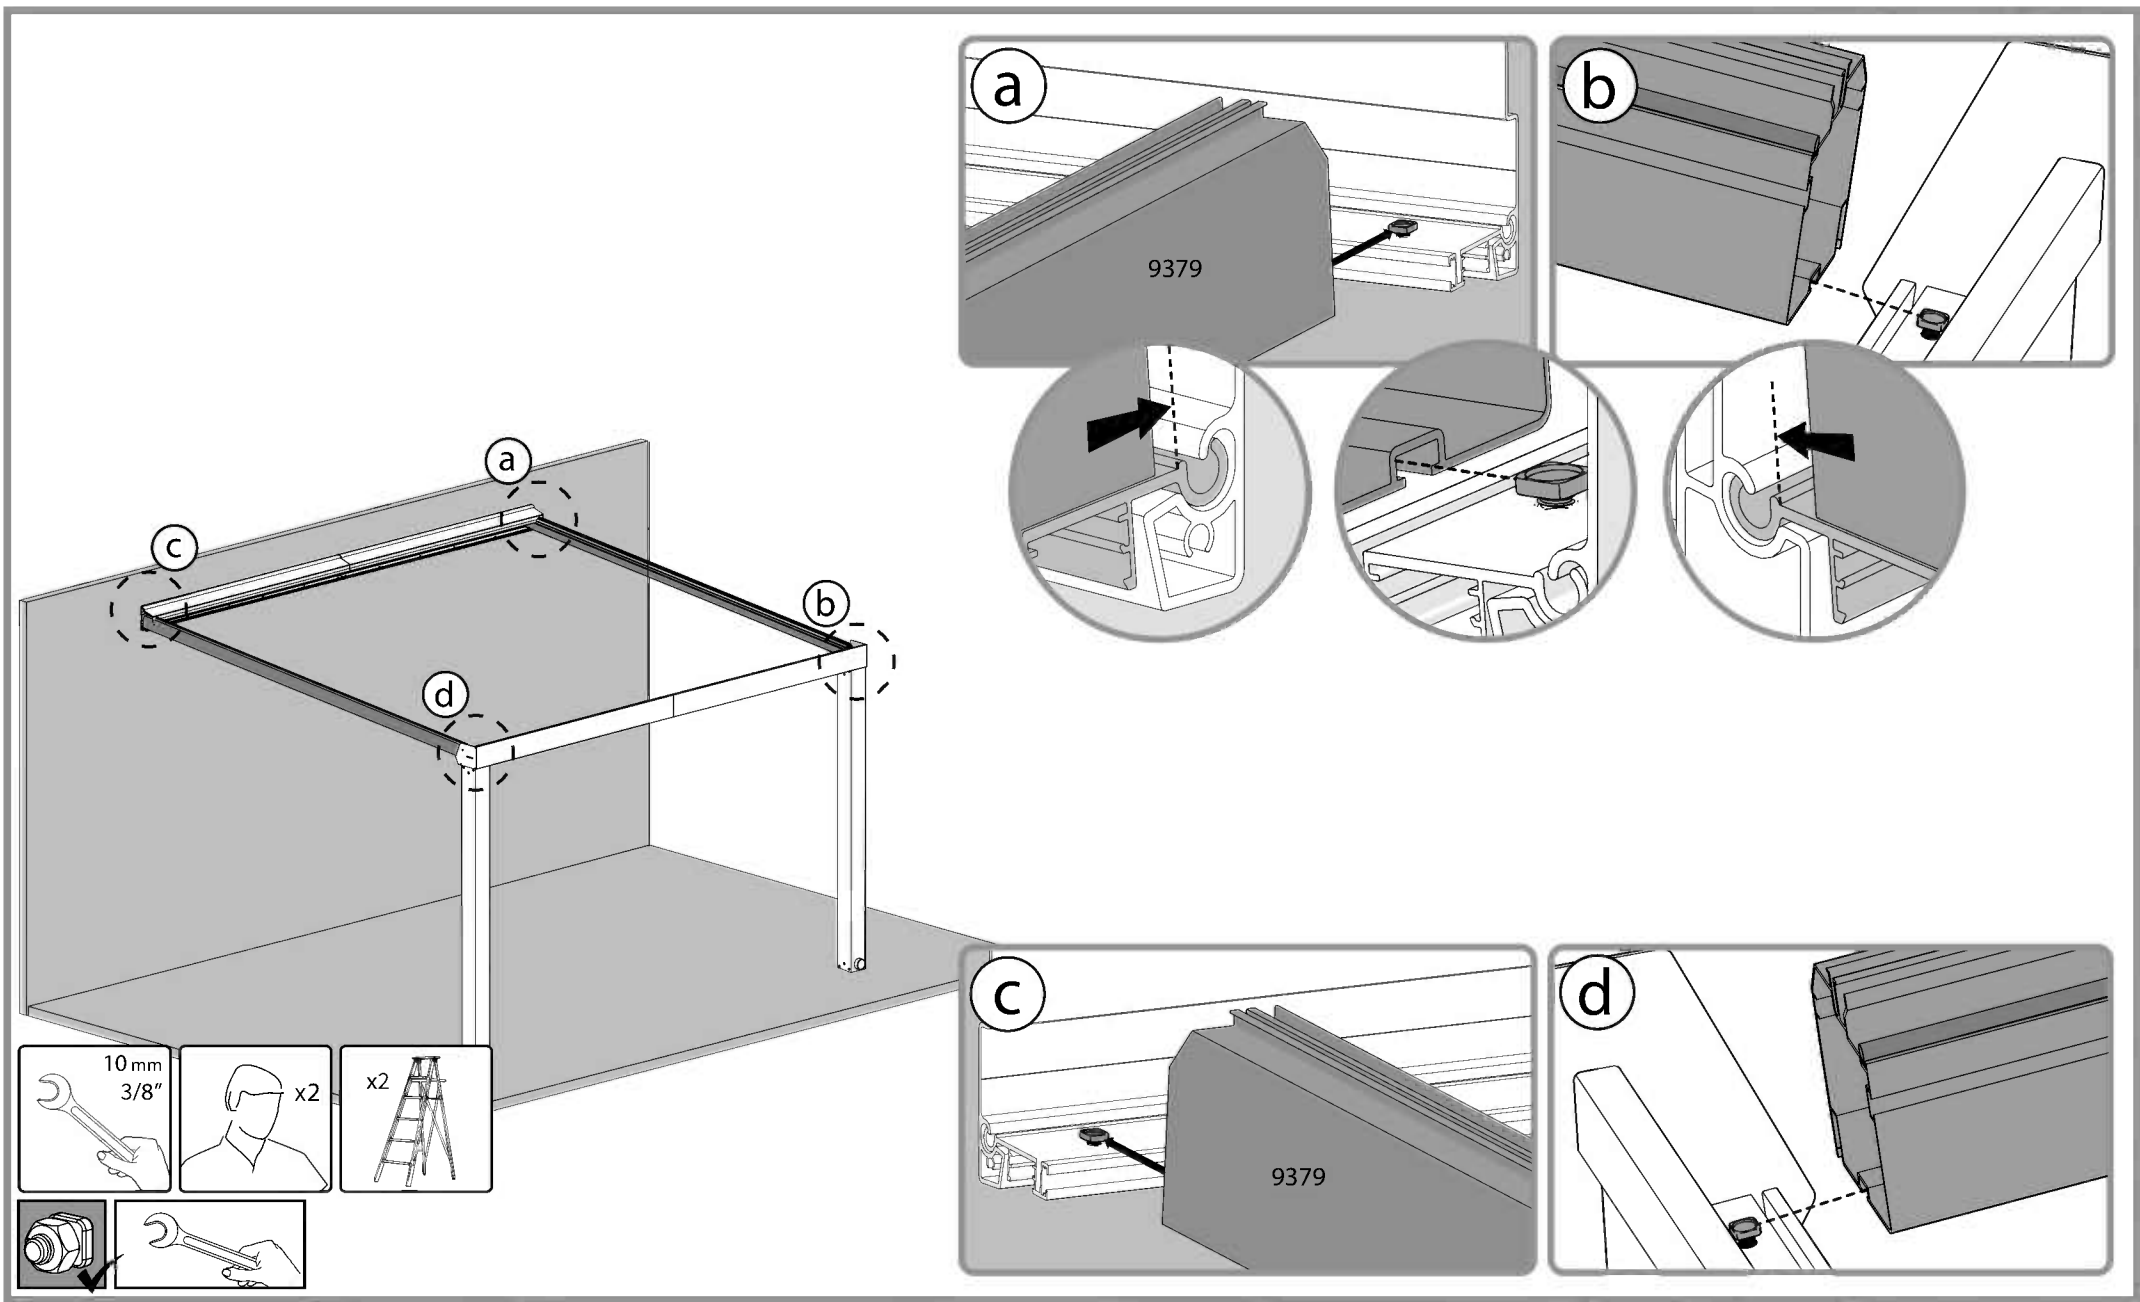


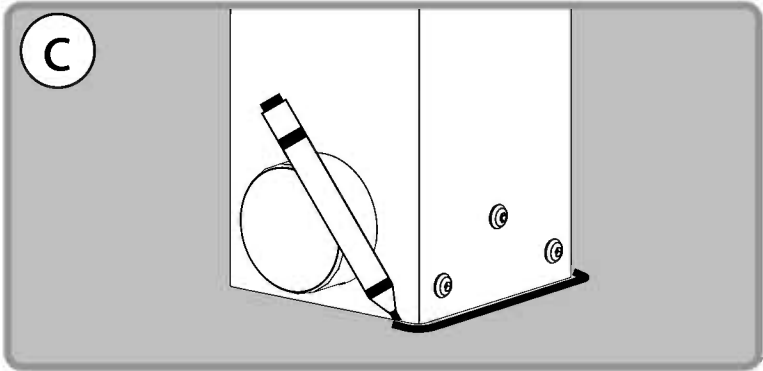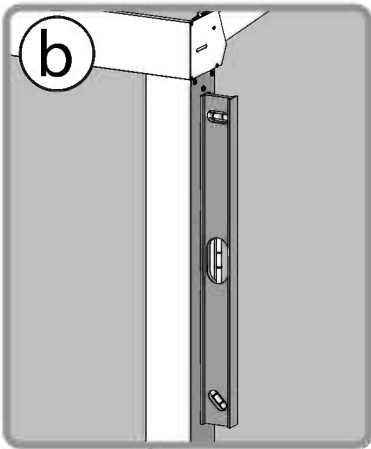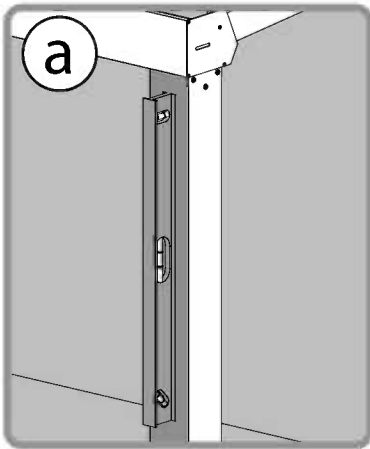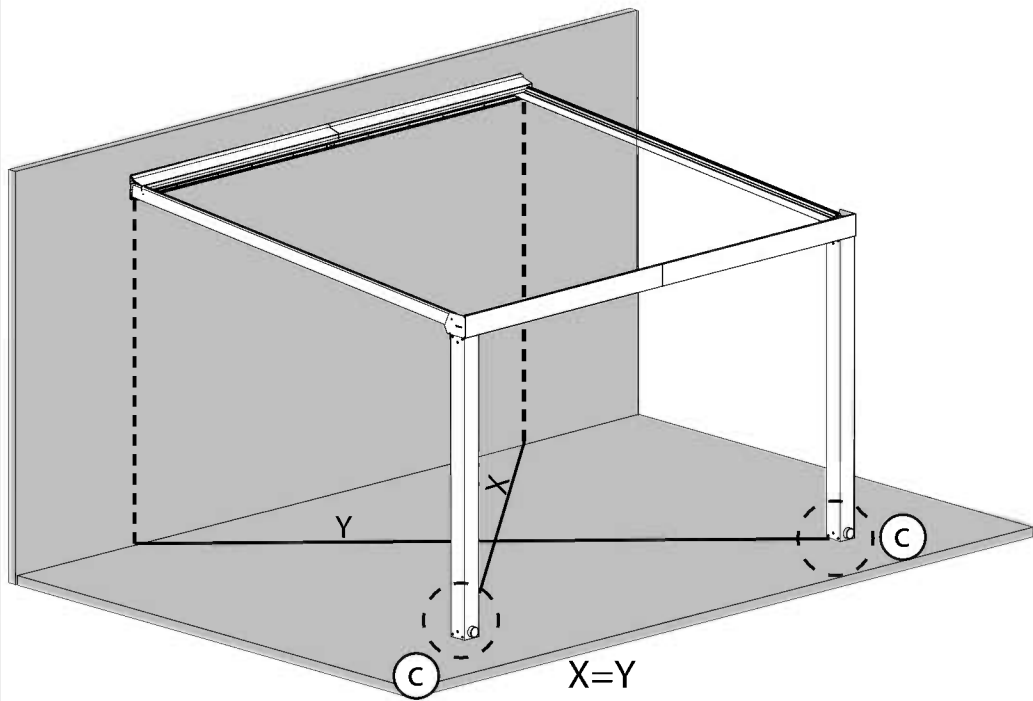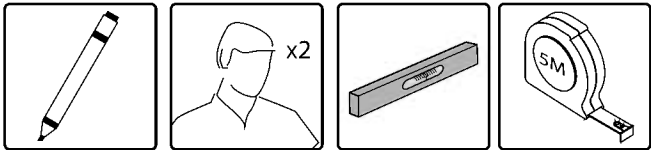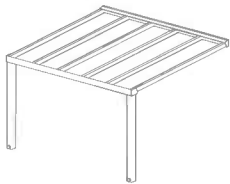

28










Anchoring this product to the ground is essential to its stability and rigidity. It is required to complete this stage in order for your warranty to be valid.

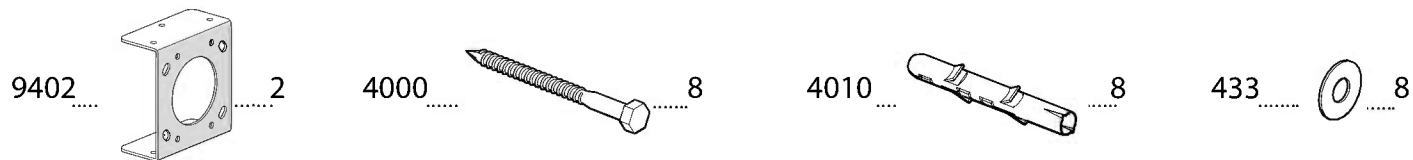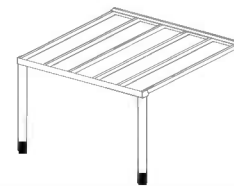

Extension Kit

9402		+1
4000		+4
4010		+4
433		+4

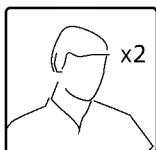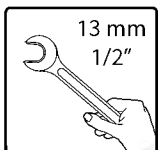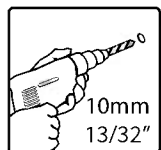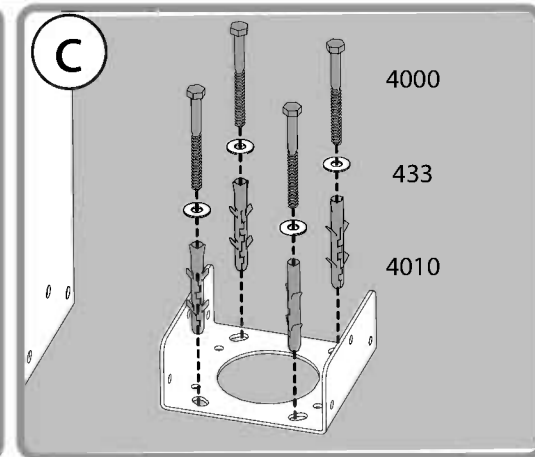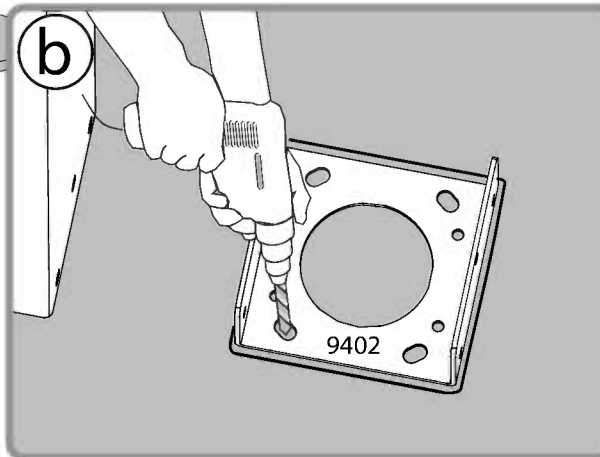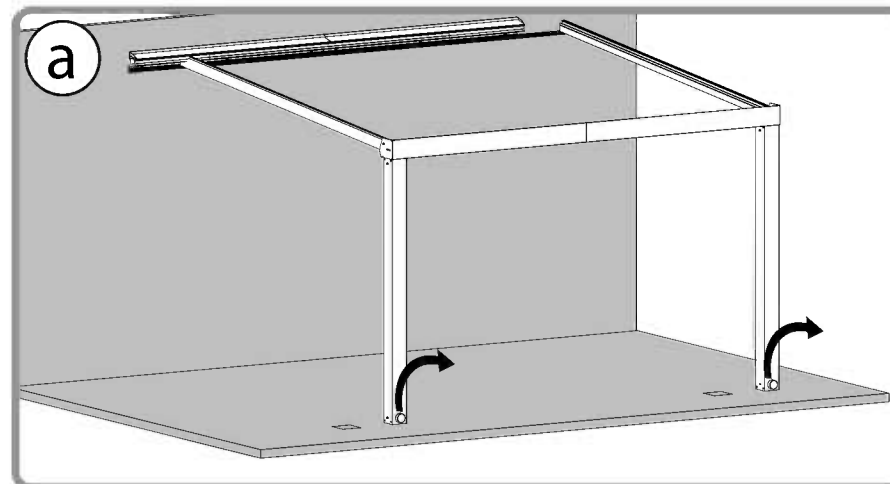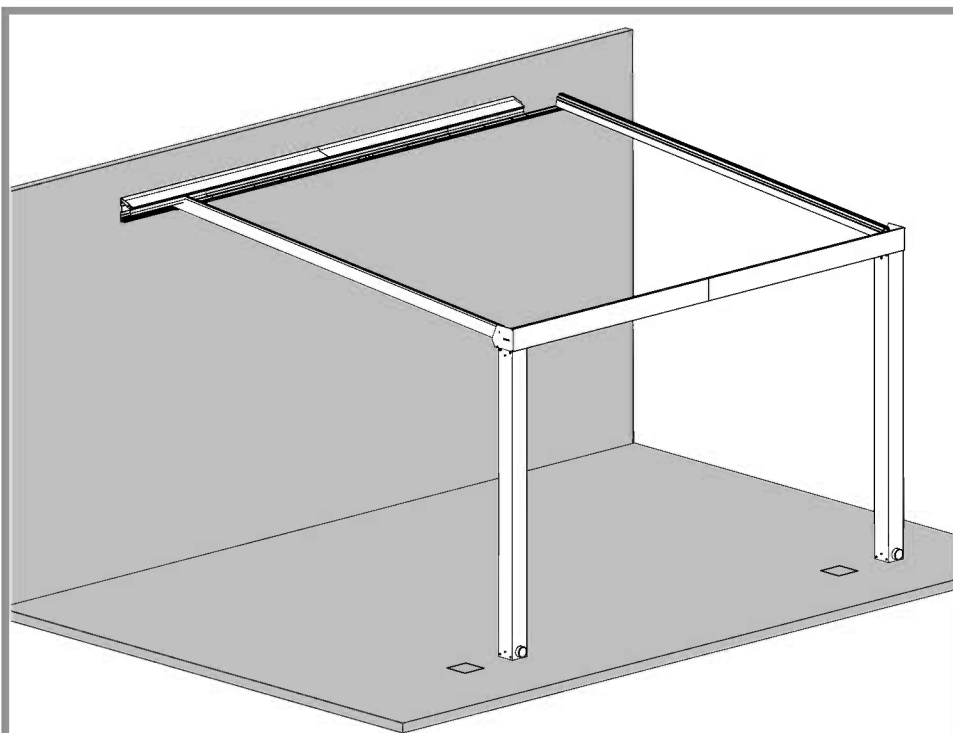












Extension Kit

9447+6

9447 12

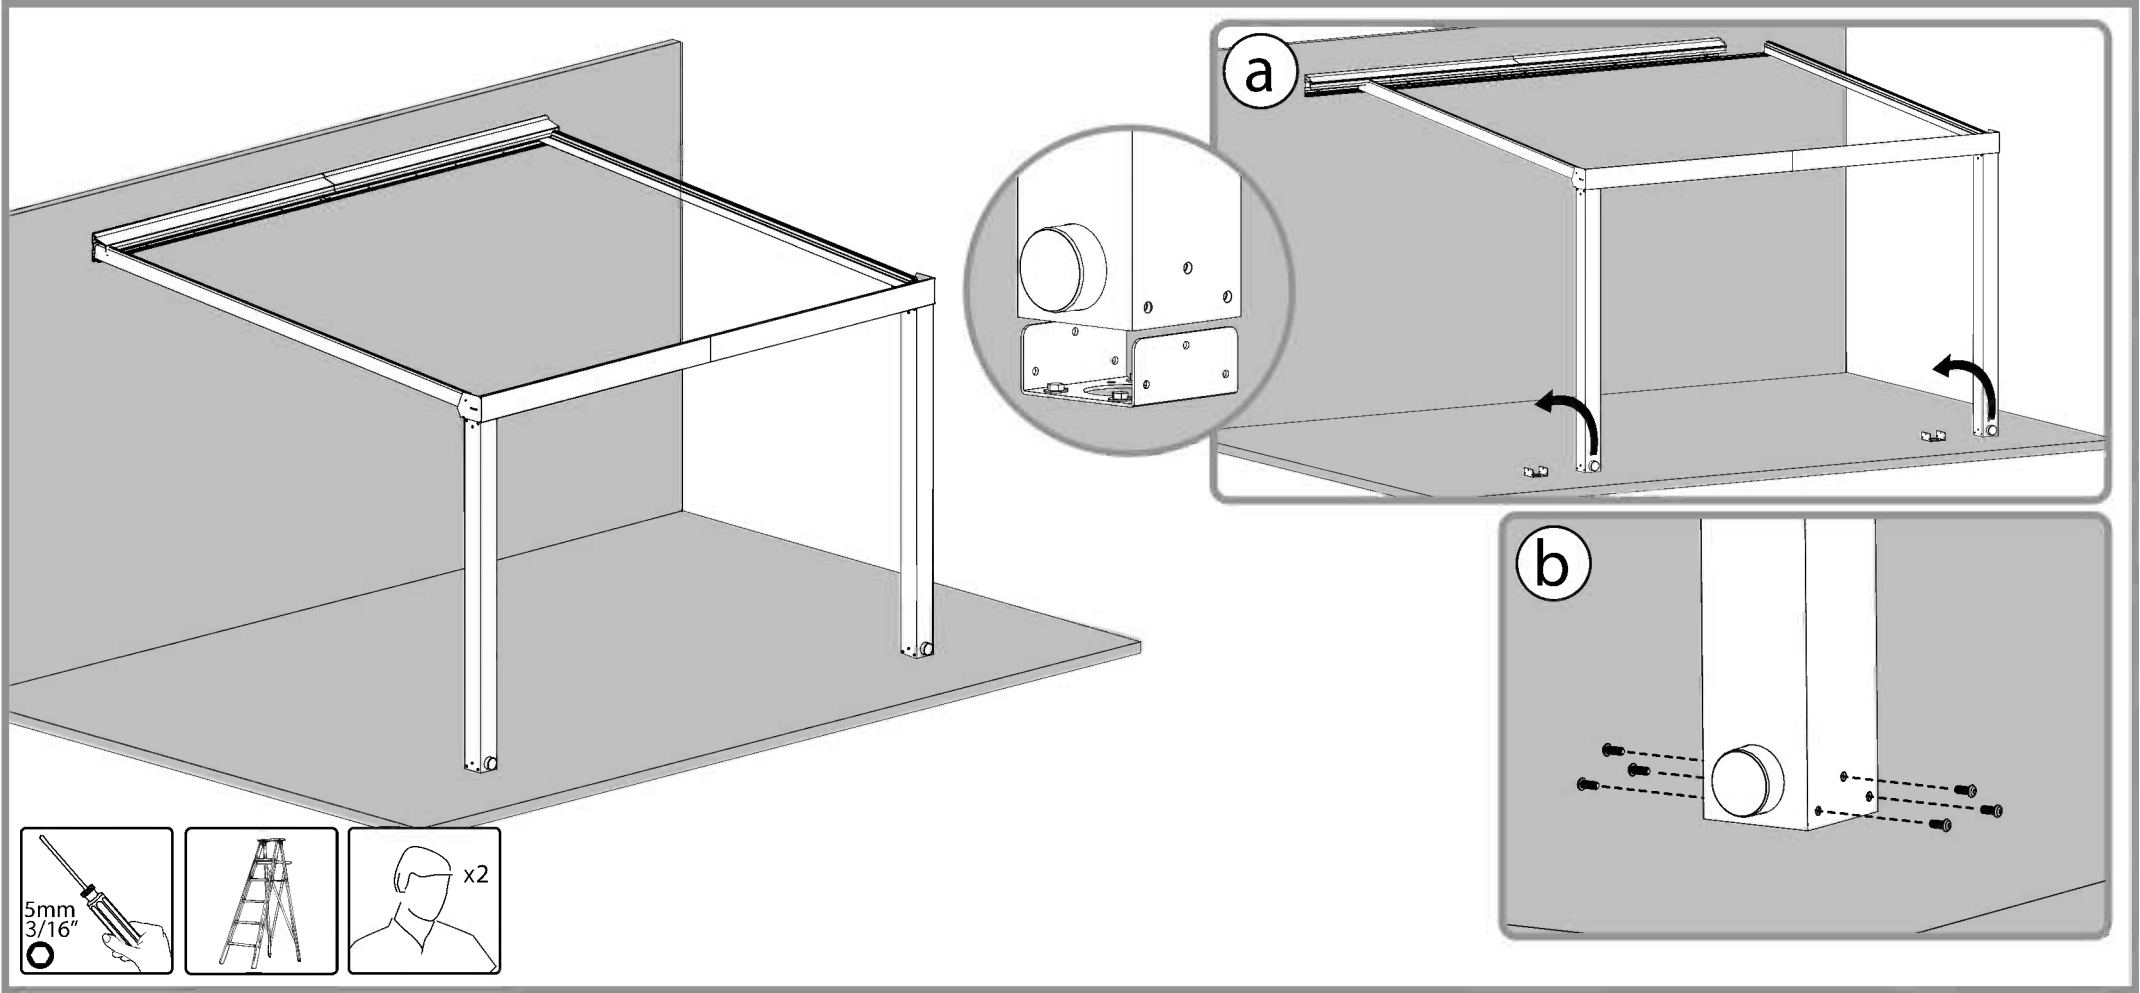

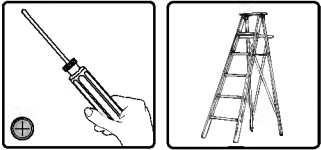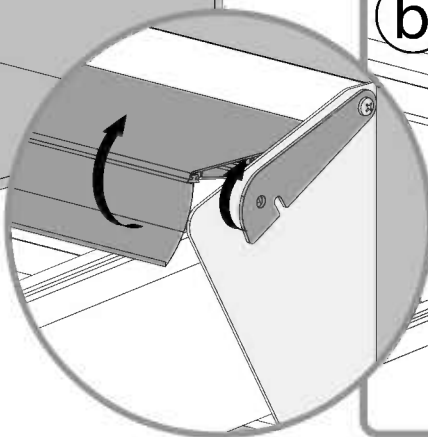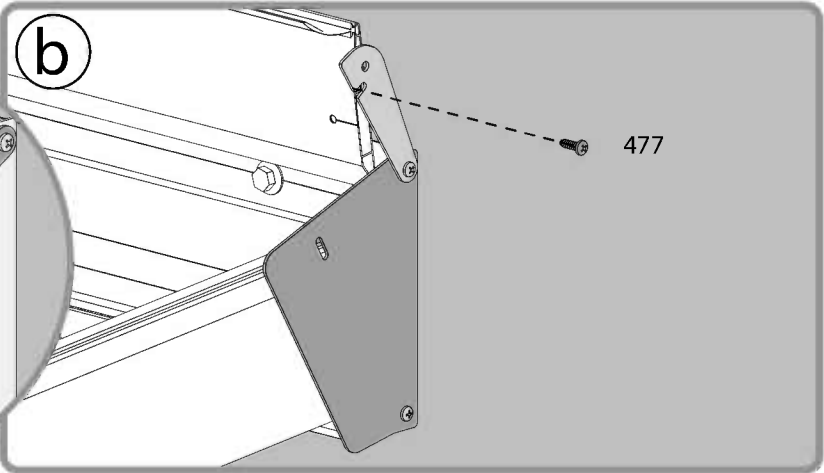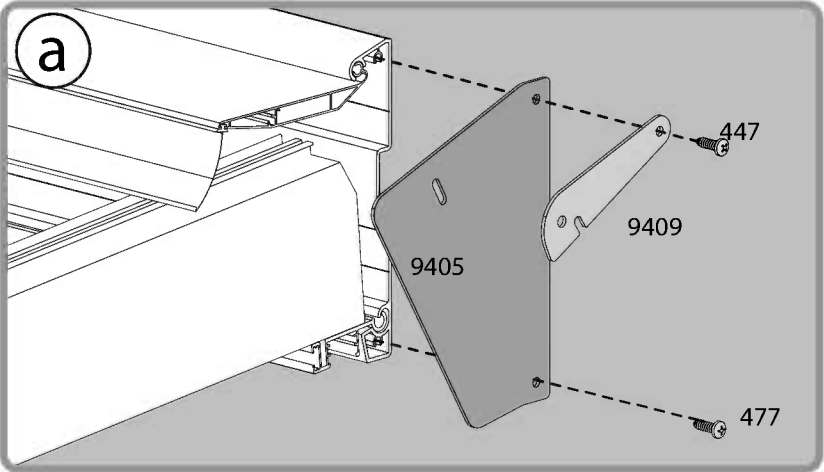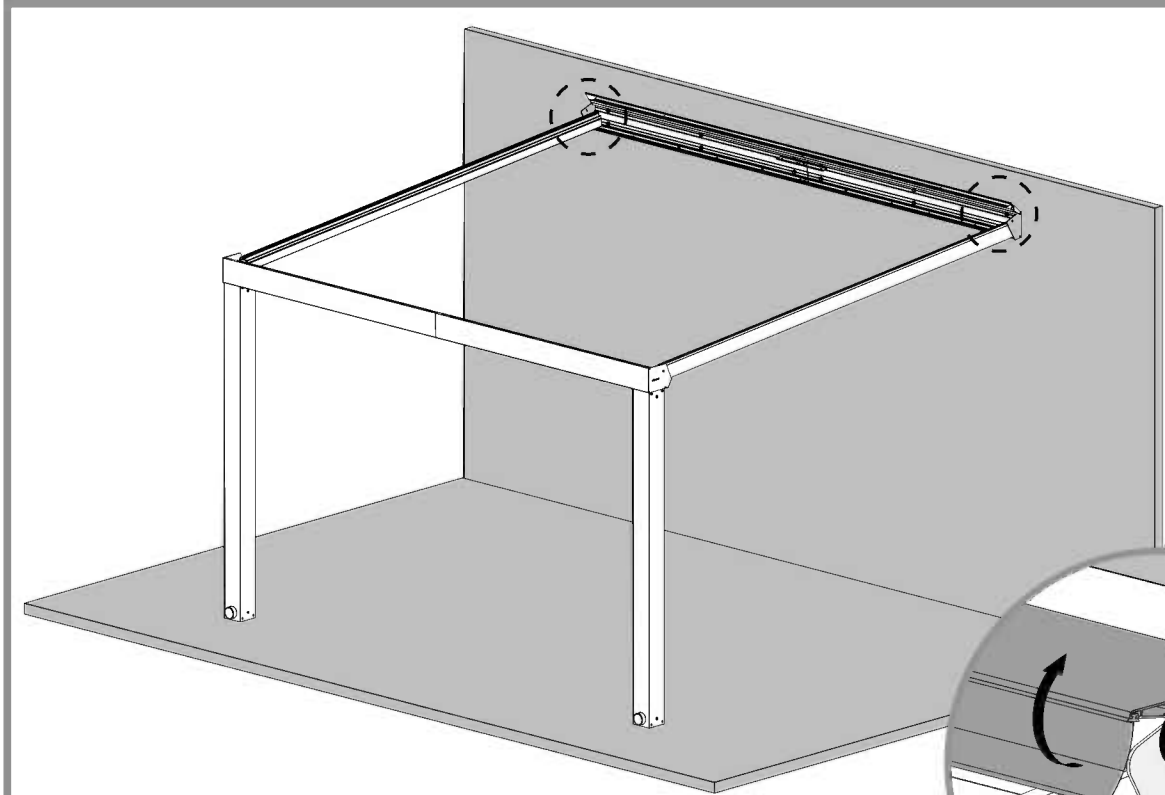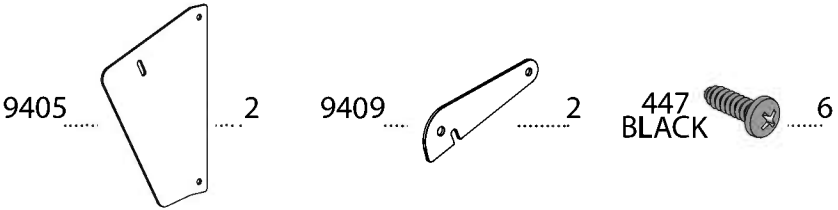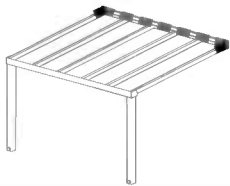



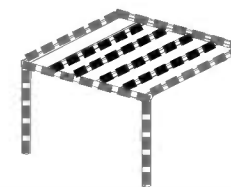


Extension Kit
3 m


9378 +4
9483 +8


Extension Kit
2.2 m

9378 +3
9483 +6

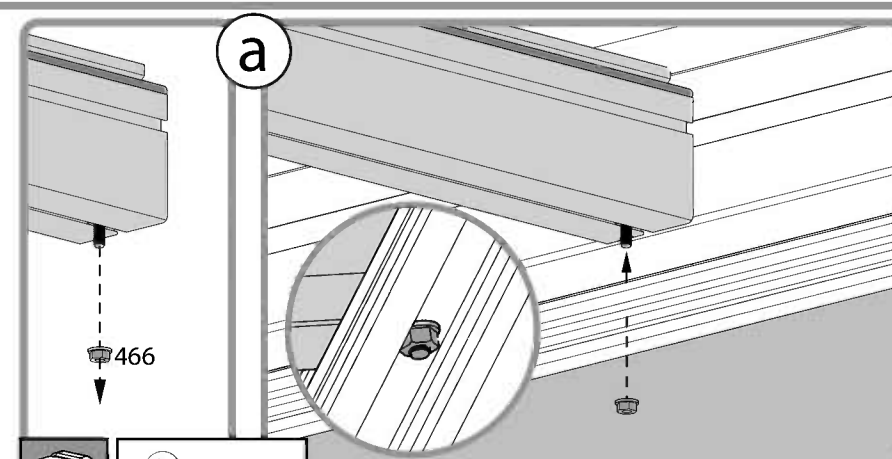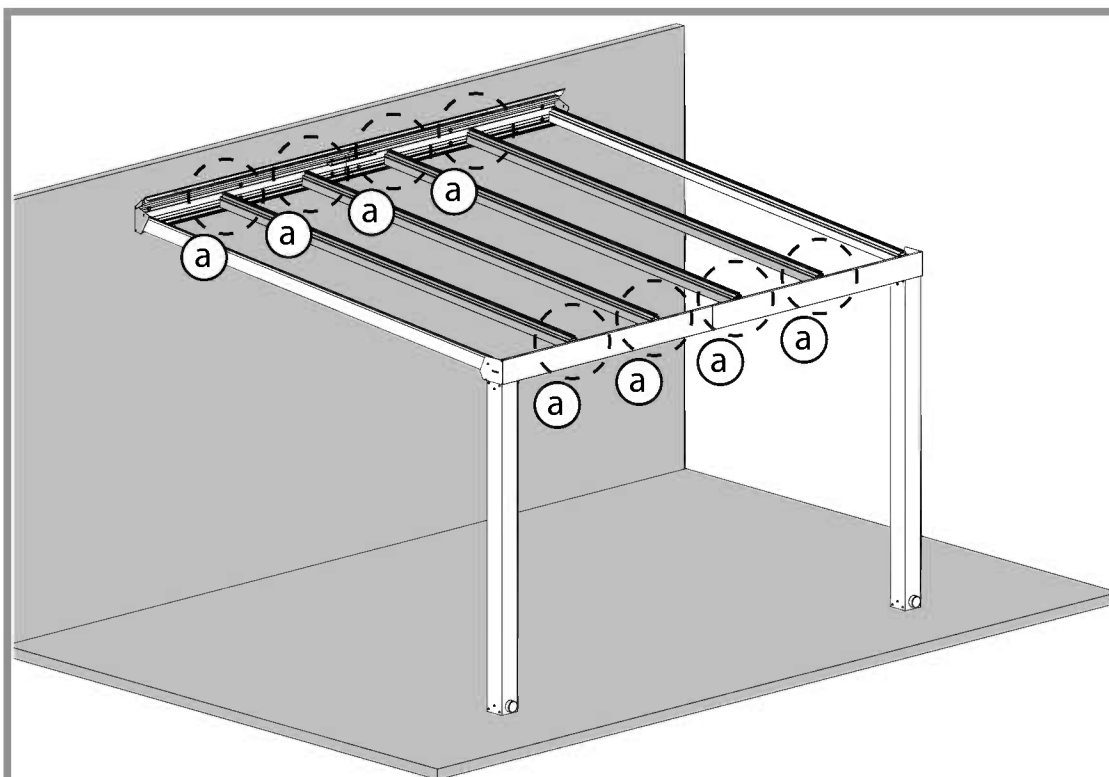

X = 72.5CM


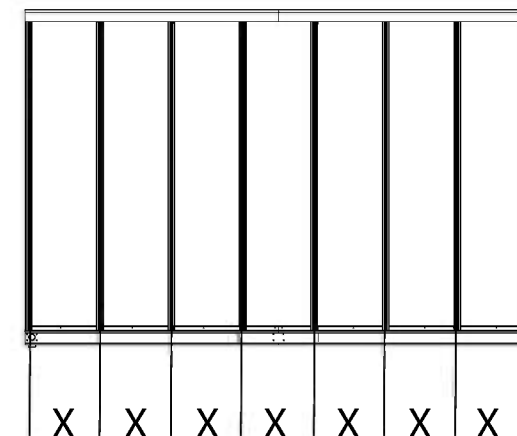





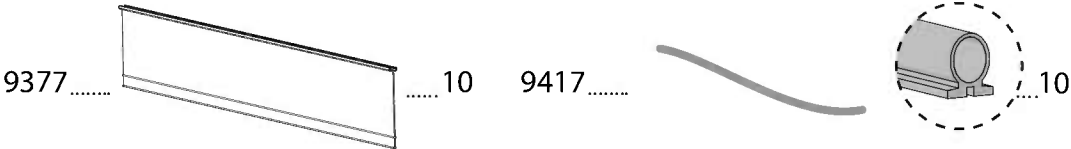






Extension Kit 3 m	
9377	+8
9417	+8

Extension Kit 2.2 m	
9377	+6
9417	+6

x10 +x8 OR +x6





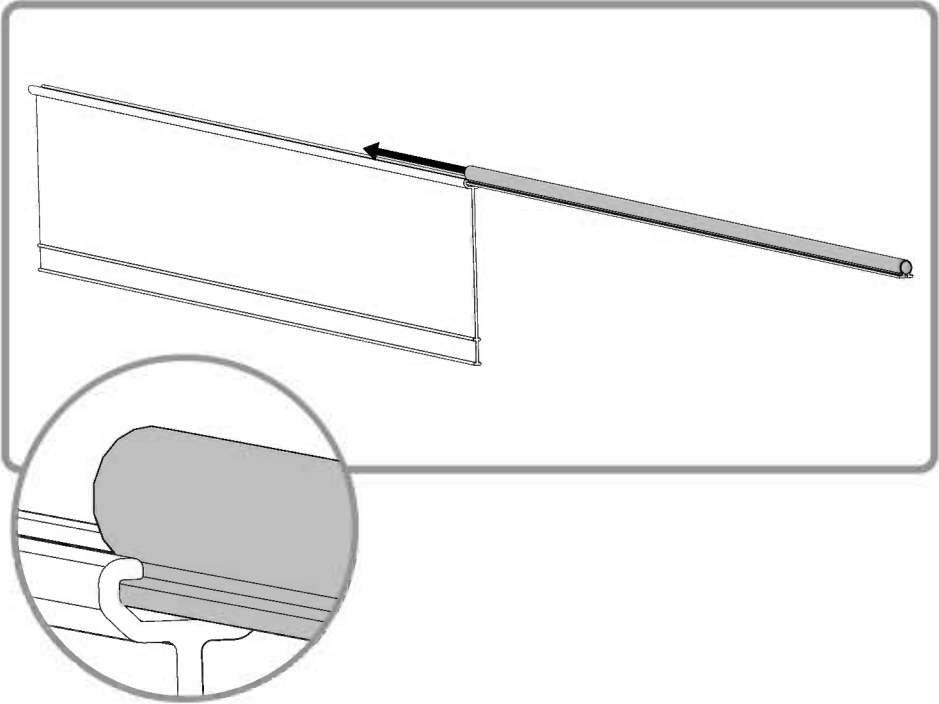
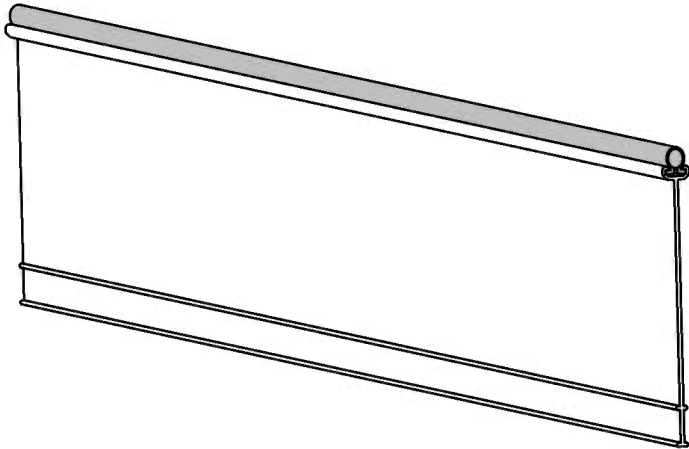


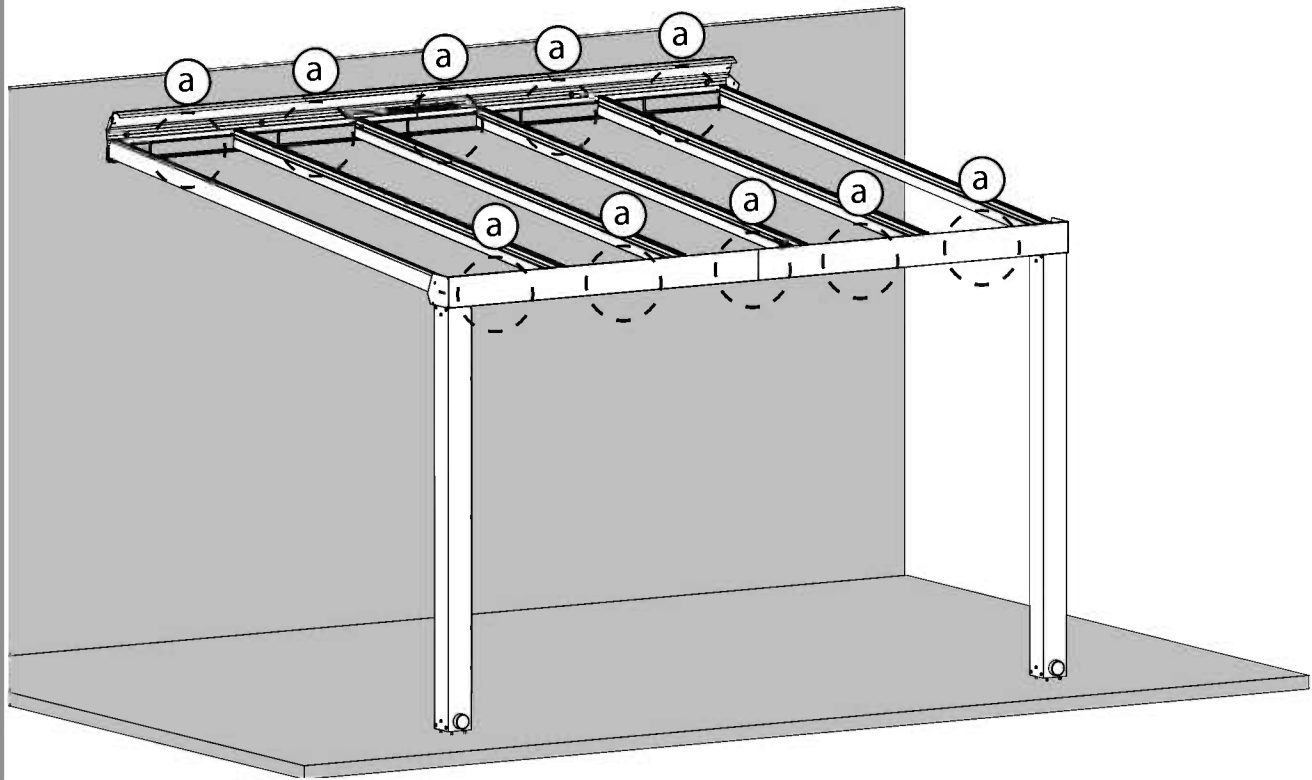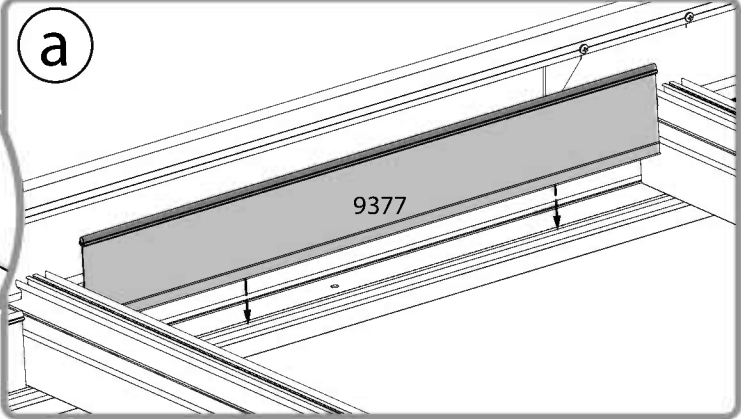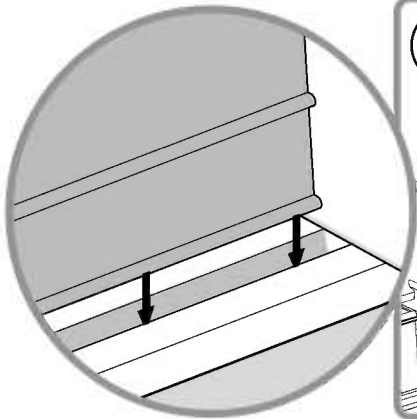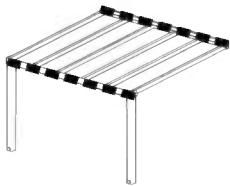

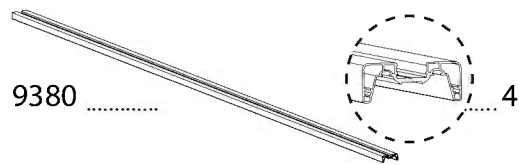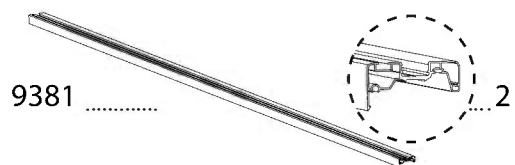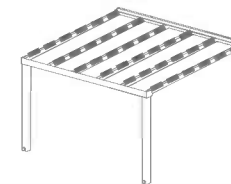

Extension Kit 3 m	
9380	+4
9406	+4
447	+8



Extension Kit 2.2 m	
9380	+3
9406	+3
447	+6

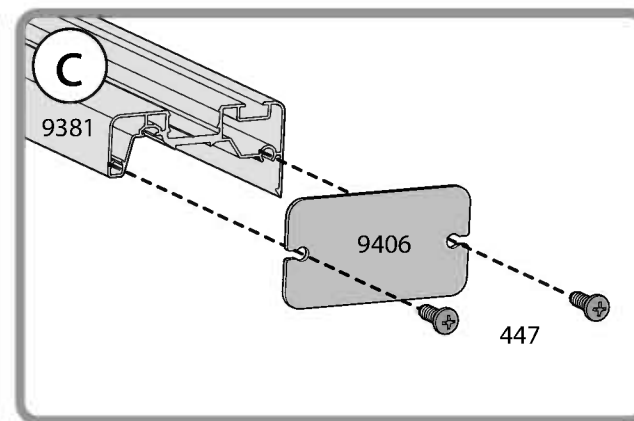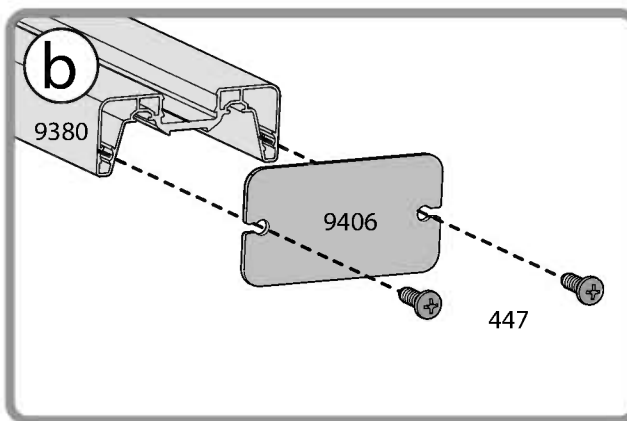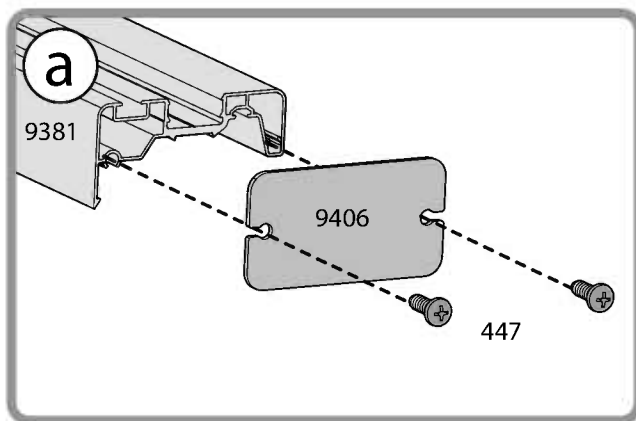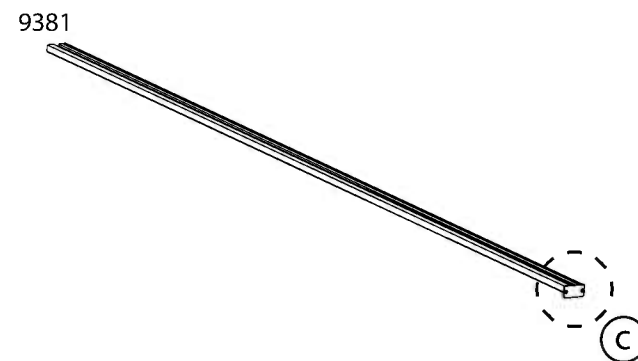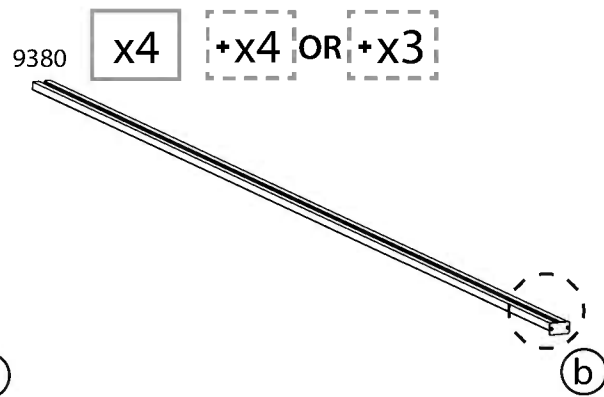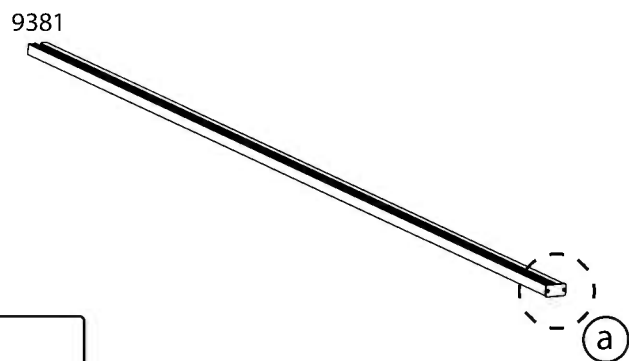

35



After peeling of the covering plastic film from both sides of the roof panel, installing the roof should be followed by the below steps (in their order): Panel 9420, Profile 9380 / 9381, Profile 9374

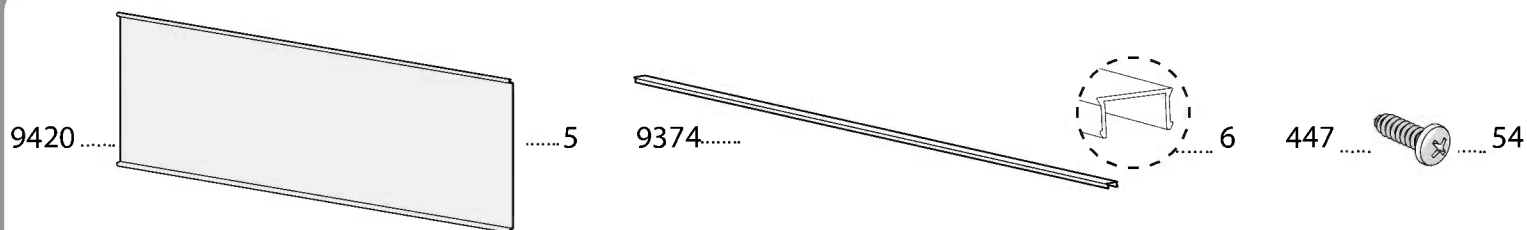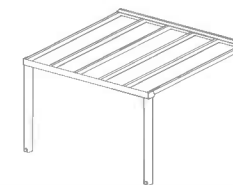


Extension Kit
3 m

9420 +4
9374 +4
447 +36

Extension Kit
2.2 m

9420 +3
9374 +3
447 +27

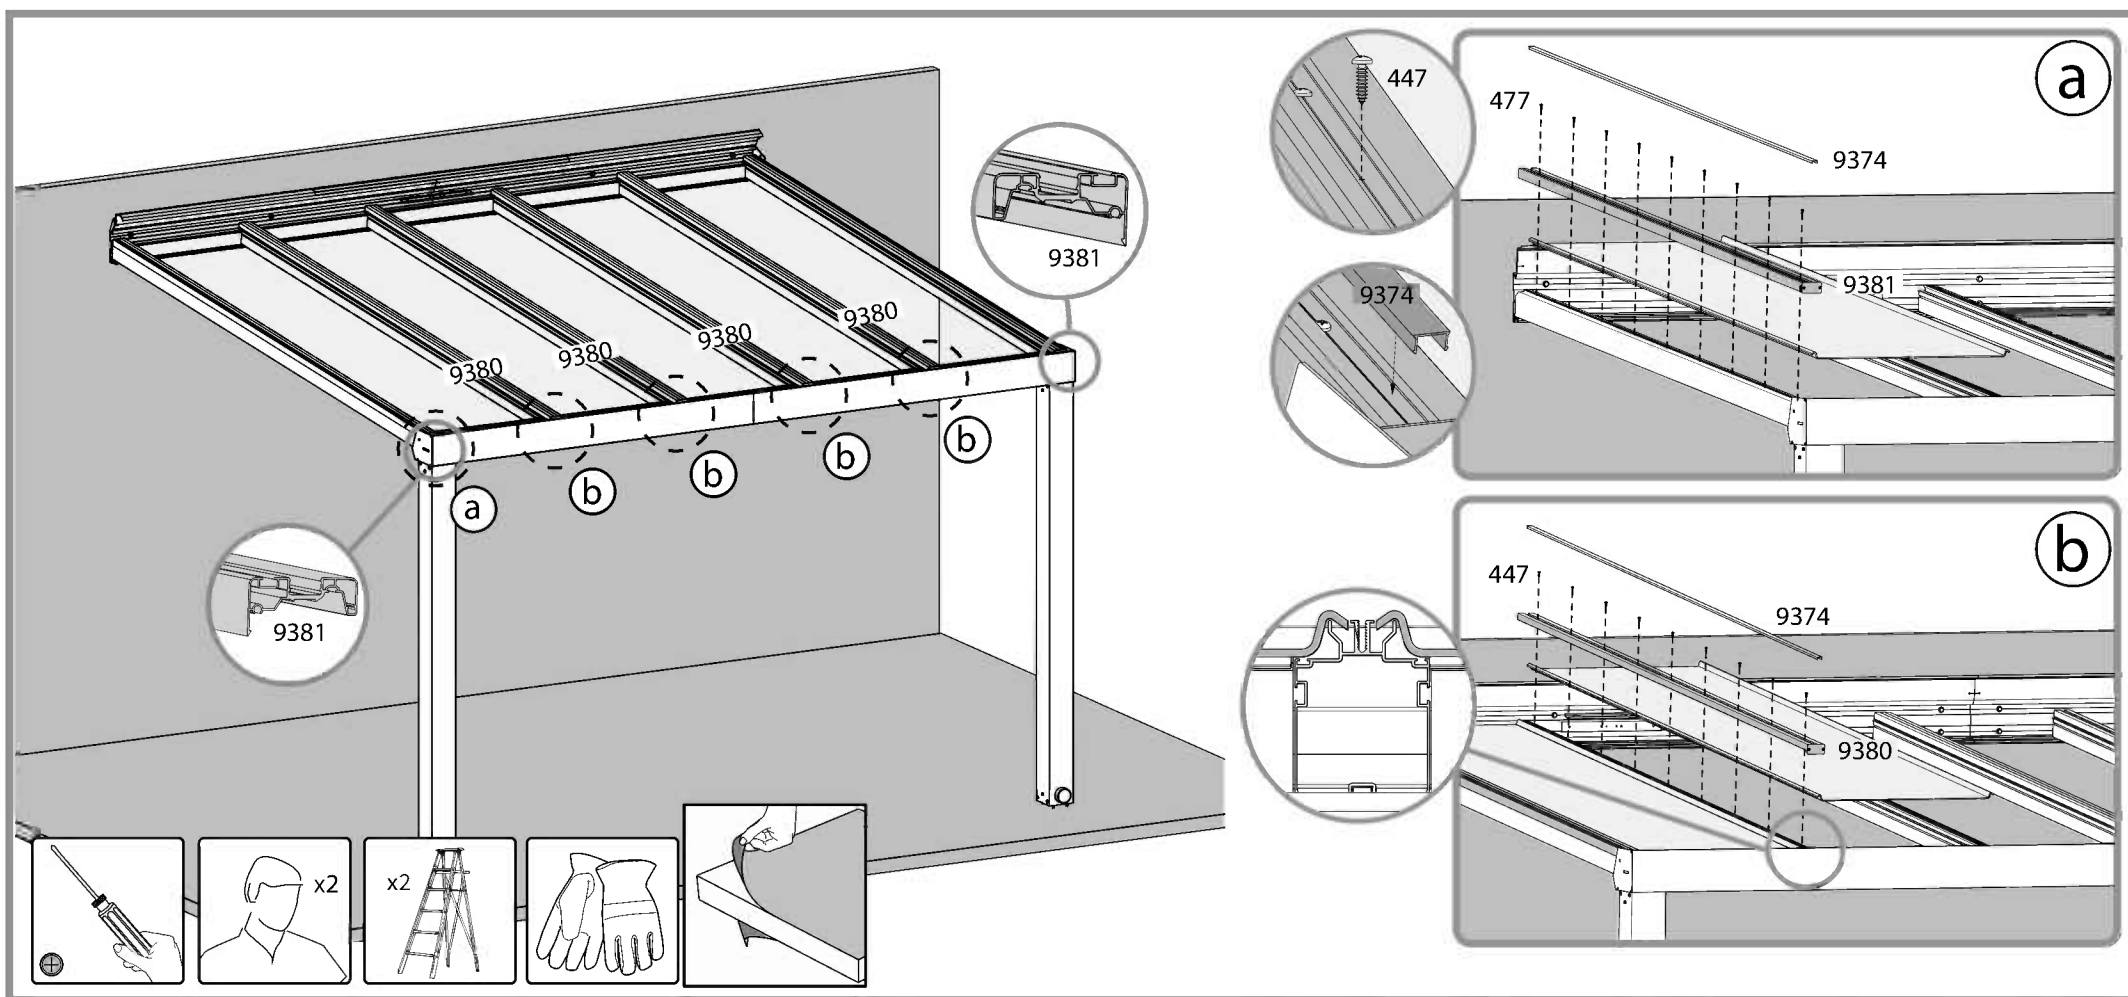



Extension Kit
3 m
9396 +2

Extension Kit
2.2 m
9389 +2

